



INTERNATIONAL APPLICATION PUBLISHED UNDER THE PATENT COOPERATION TREATY (PCT)

(51) International Patent Classification⁵:

H04M 3/46

A1

(11) International Publication Number:

WO 94/18779

(43) International Publication Date:

18 August 1994 (18.08.94)

(21) International Application Number: PCT/US94/01155

(22) International Filing Date: 31 January 1994 (31.01.94)

(30) Priority Data:

08/012,028

1 February 1993 (01.02.93)


US

(71) Applicant: MULTILINK INCORPORATED [US/US]; 6
Riverside Drive, Andover, MA 01810 (US).(72) Inventors: ALLEN, Bruce, S.; 12 Eaton Woods, East Kingston,
NH 03827 (US). GARRISON, Marshall, B.; 21 Brier Lane,
Derry, NH 03038 (US). BRODSKY, Philip, S.; 47 Cypress
Avenue, Methuen, MA 01844 (US). LEBLANC, Richard,
E.; 7 Autumn Circle, Plaistow, NH 03865 (US). BAUN,
Philip, J., Jr.; 14 Lockway Road, Andover, MA 01810 (US).
MCCARTHY, Gary, R.; 110 Dunbar Street, Manchester,
NH 03103 (US). LEONDIRES, Arthur, P.; 30 Old Wilton
Road, Mont Vernon, NH 03057 (US).(74) Agents: LAHIVE, John, A., Jr. et al.; Lahive & Cockfield, 60
State Street, Boston, MA 02109 (US).(81) Designated States: AT, AU, BB, BG, BR, BY, CA, CH, CN,
CZ, DE, DK, ES, FI, GB, HU, JP, KP, KR, KZ, LK, LU,
LV, MG, MN, MW, NL, NO, NZ, PL, PT, RO, RU, SD,
SE, SK, UA, UZ, VN, European patent (AT, BE, CH, DE,
DK, ES, FR, GB, GR, IE, IT, LU, MC, NL, PT, SE), OAPI
patent (BF, BJ, CF, CG, CI, CM, GA, GN, ML, MR, NE,
SN, TD, TG).

Published

With international search report.

(54) Title: A METHOD AND APPARATUS FOR AUDIO TELECONFERENCING A PLURALITY OF PHONE CHANNELS

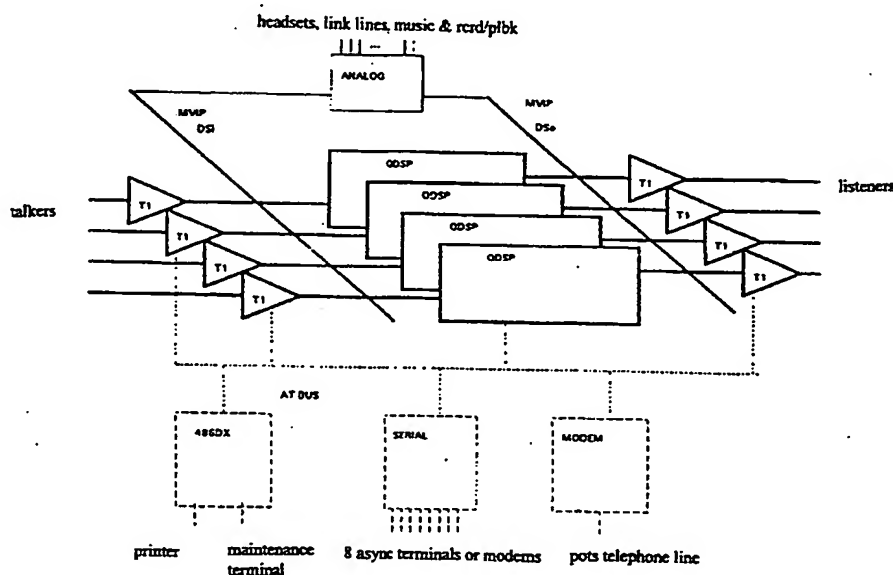

(57) Abstract

An improved system for connecting and processing a plurality of phone users in a teleconference on a common digital bus. The apparatus includes a plurality of digital processing units (DSPs) associated with selective phone lines and in communication with each other. Each DSP determines an activity status for each associated phone line and transmits that status to the other DSPs. The DSPs create and update respective identical "talk-lists" which reflect the active conferees whose voice data is currently being output on the phone channels. The system thus provides scalable teleconferencing in a real-time configuration without switching between the various signals on the common bus such that each incoming caller or even a plurality of conferences has equal priority.

FOR THE PURPOSES OF INFORMATION ONLY

Codes used to identify States party to the PCT on the front pages of pamphlets publishing international applications under the PCT.

AT	Austria	GB	United Kingdom	MR	Mauritania
AU	Australia	GE	Georgia	MW	Malawi
BB	Barbados	GN	Guinea	NE	Niger
BE	Belgium	GR	Greece	NL	Netherlands
BF	Burkina Faso	HU	Hungary	NO	Norway
BG	Bulgaria	IE	Ireland	NZ	New Zealand
BJ	Benin	IT	Italy	PL	Poland
BR	Brazil	JP	Japan	PT	Portugal
BY	Belarus	KE	Kenya	RO	Romania
CA	Canada	KG	Kyrgyzstan	RU	Russian Federation
CF	Central African Republic	KP	Democratic People's Republic of Korea	SD	Sudan
CG	Congo	KR	Republic of Korea	SE	Sweden
CH	Switzerland	KZ	Kazakhstan	SI	Slovenia
CI	Côte d'Ivoire	LI	Liechtenstein	SK	Slovakia
CM	Cameroon	LE	Sri Lanka	SN	Senegal
CN	China	LU	Luxembourg	TD	Chad
CS	Czechoslovakia	LV	Latvia	TG	Togo
CZ	Czech Republic	MC	Monaco	TJ	Tajikistan
DE	Germany	MD	Republic of Moldova	TT	Trinidad and Tobago
DK	Denmark	MG	Madagascar	UA	Ukraine
ES	Spain	ML	Mali	US	United States of America
FI	Finland	MN	Mongolia	UZ	Uzbekistan
FR	France			VN	Viet Nam
GA	Gabon				

-1-

A METHOD AND APPARATUS FOR AUDIO TELECONFERENCING A PLURALITY OF PHONE CHANNELS

Reservation of Copyright

5 A portion of the disclosure of this patent document contains material which is subject to copyright protection. The copyright owner has no objection to facsimile reproduction by anyone of the patent document or the patent disclosure, as it appears in the Patent and Trademark Office patent file or records, but otherwise reserves all copyright rights whatsoever.

Background of the Invention

10 This invention relates generally to improvements in teleconferencing, and, in particular, teleconferencing methods and apparatus which improve the resiliency and processing of a multitude of phone signals.

15 Teleconferencing apparatus and methods are generally known. Telephone operating companies and other private industries have entered this field to address the teleconferencing needs of particular groups or individuals and to improve the management and control of the teleconference meeting.

20 A typical conference might include a plurality of individuals who are telephonically connected into a discussion by a single operator at a central locality. The teleconference can be managed or unmanaged and can include a record/playback system to record the discussion and make it available over the phone lines for further consideration by the participants.

25 Typically teleconferencing systems include that described in U.S. Patent No. 4,303,804, which collects, processes and redistributes information between a plurality of incoming telephone lines. Callers connected to these lines can be grouped into selected conferences, or pooled together as subconferences, and are processed to associate members according to voice energy levels.

30 Difficulties persist with many prior art audio teleconferencing systems. Most particularly, the available systems typically pass data signals in and out of the phone lines via control and switching circuitry whereby a voice is clipped by the network. As more and more users access the teleconferencing system, the switching time increases and listeners can notice missing initial portions of speech. The switching also takes away valuable processing time which is required to significantly improve the quality of the composite signals outgoing to the various persons in the conference.

-2-

Accordingly, it is an object of the invention to provide an audio teleconferencing system which provides for virtual processing of every incoming caller, thereby removing any switching required to access or transmit data to the various callers.

It is another object to provide for improved processing of a plurality of audio phone signals data along a bus, wherein every incoming phone channel is treated with equal priority and the number of users is operationally scaleable (i.e., without increasing processing overload).

It is also an object of the invention to provide improvements in digital signal processing, the delivery and management of information on a plurality of teleconferencing channels.

These and other objects will become apparent in the description within.

Summary of the Invention

The invention thus relates to an audio telephone conferencing apparatus and method which features a plurality of digital signal processing units (DSPs) and a common bus for carrying voice digital data along a plurality of phone channels. Each DSP is coupled to the common bus and associated with particular phone channels therein. The DSPs respond to the data on each associated incoming phone channels and generate a status signal representing the particular status of that phone channel. These status signals are transferred along the common bus for access by other DSPs.

In turn, each DSP responds to status signals received from the others to generate an output teleconference signal as a function of all or some of the incoming phone channels. This output signal can represent, for example, a digital mix of the current "talkers" on the incoming phone channels the output signal is transmitted by each DSP along the common bus to the associated listening phone.

In another aspect, the DSPs include an energy detection element for generating the aforementioned status signal to indicate whether there is a selected activity level, e.g., talking, on the associated incoming phone channel. This status signal can be determined, in another aspect, by quantifying the energy level of the data associated in each incoming phone channel. This energy level can also be determined, in yet another aspect, by quantifying a value representative of the difference between the incoming channel data energy level and the

-3-

average energy level in the output data signal, wherein this difference is greater than a threshold energy value.

In another aspect, the DSP includes a talk-list element which responds to status signals on the bus. The talk-list means, in another aspect, can generate and store a list representing active phone channels whose incoming voice data is selected for output to the conferences. The DSPs are arranged to generate their respective talk-lists identical and substantially simultaneously to one another.

In yet another aspect, the DSP talk-list element selects for representation in the "talk-list" phone channels which have a selected energy level (i.e., an energy level which exceeds the average energy level in the output data signals).

In still another aspect, the DSPs respond the control parameters for at least initializing a teleconference among a plurality of phone channels. A host processor is coupled to the DSPs to generate and store for access those control parameters. By this mechanism, the DSPs can maintain the teleconferencing functionally between at least selected phone channels in the event of a selected fault by the host processor (i.e., the host processor goes "down").

Brief Description of the Drawings

A more complete understanding of the invention may be obtained by reference to the drawings in which:

FIGURE 1 schematically illustrates a bridging network used in a preferred practice of the invention;

FIGURE 2 shows a functional diagram of a bridging network constructed in accordance with a preferred practice of the invention;

FIGURE 3 schematically illustrates a time slot interface setup which interfaces to an MVIP BUS according to a preferred practice of the invention;

FIGURE 4 diagrammatically illustrates a quad digital signal processing board constructed in accordance with a preferred practice of the invention;

FIGURE 5 schematically illustrates a PCB block diagram used in a preferred practice of the invention;

FIGURE 6 illustrates a transmit logical circuitry utilizing a quad port RAM used in a preferred practice of the invention;

5 FIGURE 7 schematically illustrates subsections of a multi-link DSP processor used in a preferred practice of the invention;

FIGURE 8 illustrates a functional diagram of a memory decoder, an I/O Decoder, and an Interrupt/Control used in a preferred embodiment of the invention;

10

FIGURE 9 is a function diagram including DSPs used in a preferred practice of the invention; and

FIGURE 10 illustrates a teleconferencing system of the type in which the invention is
15 practiced.

A detailed description of a preferred illustrated embodiment of the invention is provided in the section which follows, of which:

20 Pages 6 to 67 are based upon a first hardware specification of a digital system for use with a preferred embodiment of the invention; that specification is herein referred to as the "Digital System 60 Product Specification";

25 Pages 68 to 81 are based upon a second hardware specification of a digital system for use with a preferred embodiment of the invention; that specification is herein referred to as "Digital System 70 Teleconferencing Bridge";

30 Pages 82 to 91 are based upon a hardware specification of a DCB apparatus for use with a preferred embodiment of the invention; that specification is herein referred to as "DCB Hardware Specification";

35 Pages 92 to 106 are based upon a digital signal processing hardware specification for use with a preferred embodiment of the invention; that specification is herein referred to as "Multi-Link DSP Processor Reference Manual";

 Pages 107 to 128 are based upon a host software architecture design specification for use with a preferred embodiment of the invention; that specification is herein referred to as "Host Software Architectural Design Specification";

-5-

Pages 129 to 140 are based upon a digital signal processing interface design specification for use with a preferred embodiment of the invention; that specification is herein referred to as "DSP-Host Interface Design Specification";

5

Pages 141 to 142 are based upon a digital signal processing command processor design specification for use with a preferred embodiment of the invention; that specification is herein referred to as "DSP Command Processor Design Specification";

10

Pages 143 to 146 are based upon a digital signal processing event processor design specification for use with a preferred embodiment of the invention; that specification is herein referred to as "DSP Event Processor Design Specification";

15

Pages 147 to 150 are based upon a DCB initialization process design specification for use with a preferred embodiment of the invention; that specification is herein referred to as "DCB Initialization Process Design Specification"; and

20

Pages 151 to 164 are based upon a hardware specification of DCB Tables for an MVIP Bus and related assignments for use with a preferred embodiment of the invention; that specification is herein referred to as "DCB Tables For MVIP Bus and Related Assignments".

In the text which follows, the preferred, illustrated embodiment of the invention is referred to as the Digital System 60, Digital System 70 Teleconferencing Bridge, DCB 60, and such other names as will be evident herein.

-6-

1. Objective

The objective of this Product Specification is to define the external functions, features, interfaces, and displays that the customer sees in the completed first version of the Digital Conferencing Bridge (DCB) product.

5 2. General Product Goals

The first DCB product release is a replacement of the System 60 (a "digital MOPS"). The MOPS operator interface is very similar to the current System 60 with changes where necessary to accommodate DCB features such as more lines and more conferences. Some of the older, less used features of the current bridge are dropped in the DCB.

10 The DCB has a flexible digital hardware and software base to allow future development of enhancements such as an unattended conferencing bridge with remote moderator features, advanced reservation capability, voice and data bridging for groupware teleconferencing, video and ISDN.

3. Hardware

15 The hardware architecture is based on a PC/AT. The DCB supports a maximum of 96 conferencing channels, 8 operator channels, 3 record\playback, 1 music, 2 Link Lines, and 8 annunciators (7 incoming messages, 1 outgoing). The cards needed to conduct a 96 port conference include: 2 Dual T1 Interface Boards or 4 Single T1 Interface Boards, 4 DSP Conferencing Boards, 1 Analog Interface Board, and 1 Multiple Serial Port Board. Future
20 systems may support tape backup, lan interface, EGA\VGA video, etc. The DCB can be configured as a 24, 48, 72, or 96 channel conferencing bridge. Each configuration is fully contained in a rack mountable PC chassis or optional tabletop chassis. System maintenance and diagnostics are done via an ASCII terminal. An optional Hewlett Packard DeskJet printer is available for operator or system printing.

25 3.1 External Interfaces

The external DCB interfaces include T1 interfaces, printer ports, remote maintenance port, analog interface, serial I/O, and alarms. Each of these interfaces is described below.

3.1.1. T1 Interface

30 All user voice and data enters the system via the T1 channels. The T1 connector is located on the back of the PC and consists of an RJ45 connector for each T1 interface (up to 4). The standard interface is DSX-1. Up to 24 voice channels can be carried on one T1 circuit. The system is designed to allow enhancement to European E1 lines in the future (up to 3 E1 circuits, 30 voice channels each).

35 Analog Conferencing - The DCB can be used to conference analog lines however external channel banks, not available from MultiLink, are required for this application.

-7-

3.1.2. Printer Ports

A Centronics parallel printer port is located on the back of the chassis for use in general system printing of CDRs, Dialing Lists, Logs, Configurations, Network Statistics, Operator Printouts, and Alarm statistics. Operator initiated printouts, such as polling results, may be redirected to this printer.

3.1.3. Remote Maintenance port

An internal modem is provided for remote maintenance access. The modem supports 9600 mnp5 bps async communication. This port can be used for maintenance or remote administrator concurrently with the local console.

3.1.4. Additional Administrator Terminal


An additional ASCII terminal may be connected to the com0 port located on the back of the system. This port can be used for administrator and maintenance use. Operator screens can be displayed from this terminal however no audio commands (Select Conference, Access, etc.) can be performed.

3.1.5. Analog Interface

The DCB utilizes a 24 channel 2 wire analog interface board, contained in the PC chassis, to interface the various analog I/O, such as operators, music, record/playback, and link lines, into the system. The analog board interface is on the back of the chassis and each channel can be separately broken out from the cable harness. The 8 local operators are supported with 16 analog channels (2 per operator). The music input requires 1 analog channel, record/playback requires 3 analog channels and 2 analog channels are used for the 2 Link Lines supported by the DCB.

3.1.6. Serial I/O

Serial I/O to local and remote operator displays is implemented via an 8 port serial I/O card contained in the DCB. ASCII terminals interface via RS232 signaling on RS232 connectors. The RS232 pinout between the DCB and terminal is:

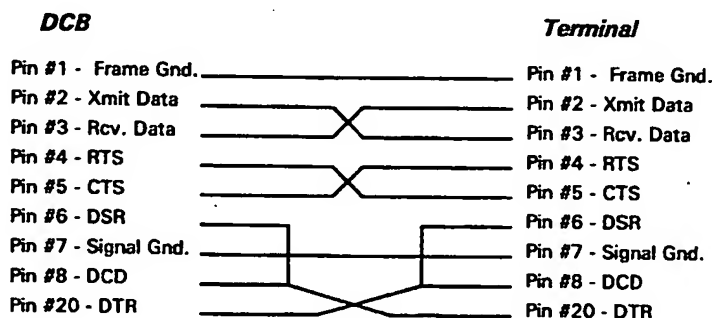

3.1.7. Local Operators

There are a maximum of 8 local operator displays supported in the DCB. Local operator displays are connected to ASCII terminals via the 8 port serial I/O card. Each operator ASCII terminal may have an optional serial printer, connected to the printer port on the rear of the terminal, for operator initiated printing of dialing lists and polling results.

The operator audio interface to the DCB is accomplished through the 24 channel 2 wire analog card which is contained in the DCB. RJ11 connectors are used to connect operator audio to the DCB. Headsets, with volume controls, are supplied at the operator stations.

3.1.8. Remote Operators - Leased Line Operation

Leased line operation requires 1 4-wire leased line for the data connection. The operator audio path is established by calling into the one of the 96 user channel. Operators must be configured as remote and a user channel must be specified as a remote operator channel. The data connection requires 2 leased line external modems (9600 bps. mnp5), 1 local and 1 remote. The local modem is connected to the serial I/O card and leased line at the DCB and the remote modem connects to the operator terminal and leased line at the remote site. Any or all operators stations may be configured for remote leased line operation. Upon configuring an operator as remote, the local operator audio path becomes inactive. No audio commands (Select Conference, Access, etc.) can be performed until the remote audio path has been established. No headset is supplied for remote configurations.

3.1.9. Remote Operators - Dial Up Operation

Remote dial up operation requires 2 external dial up modems (9600 bps. mnp5) for each remote operator dial up station. The selected operator terminal(s) are substituted with modems at the DCB and each remote operator terminal is connected to a modem. The remote operator audio is established by calling into one of the 96 ports on the DCB which is configured as a remote operator audio path. Any or all of the 8 local operators may be configured as remote dial up operators. Upon configuring an operator as remote, the local operator audio path becomes inactive. No audio commands (Select Conference, Access, etc.) can be performed until the remote audio path has been established. No headset is supplied for remote configurations.

3.1.10. Music Input

The DCB inputs using 1 of the 24 channels of the analog board. An RJ11 connector is used to connect the music into the DCB.

3.1.11. Record\Playback

Conference recording\playback is done via the 24 channel analog board. There are 3 record/playback channels available. RJ11 connectors are used to connect the external recorders to the DCB.

3.1.12. Link Lines

The Linking together of DCBs is supported via the 24 channel analog board. The DCB supports 2 4-wire Link Lines. Each Link Line uses 2 channels of the analog board, one pair for transmit and the other pair for receive, for linking. RJ11 connectors are used as the linking interface from DCB to DCB or DCB to analog bridge.

3.1.13. External Alarms

A DB15 connector is used as the external alarm interface from the DCB. It provides 4 contact closures in the event of an alarm condition -- major audible, major visual, minor audible, minor visual. The closure or opening of contacts can be monitored by an external device to signal network personnel of major/minor alarms. Alarm conditions include: Software Errors, T1 failures, Dead-man timer, loss of power. The contact ratings for the alarms are 100v, 1 A. An alarm cutoff switch is available which opens the major and/or minor audible alarms on request. This switch is located on the front of the unit. The CPU may be reset remotely.

3.2 Power

90-230 VAC external switch, user selectable, 47-63 hz power supply or a 48 VDC power supply. Suitable for use in central offices, Europe and Japan.

3.3 Environmental Specifications

The DCB is designed for office or equipment room use. It is not designed to be installed in Central Office locations requiring Bellcore CO certification.

Temperature: 0-40 degree C

Relative Humidity: 10% - 90% non condensing

3.4. Controls

3.4.1. Main Unit

Power on/off - located on front of the unit. Key Required.

Reset - located on front of the unit. Key Required.

Audible Alarm Cutoff - located on front of the unit. Key Required.

3.4.2. Operator Station

Wyse 60 (or similar) controls and setup menus.

A volume control on the headset.

3.5. Displays**3.5.1. Main Unit**

Power Supply Status - +5v, -5v, +12v, -12v green LED for each.

Hard Disk activity - Green LED.

5 CPU Status - Green LED.

Major Alarm - Yellow LED.

Minor Alarm - Yellow LED.

3.5.2. Operator Station

Wyse 60 display. For the function, refer to MMI under the software description.

10 **3.6. Packaging**

The packaging for the DCB main unit is a 19" rack mountable PC chassis. An optional cabinet is available for stand alone systems. Wyse 60 terminals, headsets, and optional HP Deskjet printer are also part of the system. MultiLink logos are used on the terminals, PC chassis, optional cabinet, printers, and headsets.

15 **3.7. Internal Specification Highlights**

Feature	Specification
Main processor	X86
Voice processing	Digital signal processing
Disk drives	1 Hard and 2 floppy (5.25" and 3.5")

3.8. Options

Port capacity - up to 96 total conferencing channels configurable in 24 port increments.

20 Operator stations - 2 per 24 ports installed, up to a maximum of 8 total operator stations with each separately configurable as local, remote leased line, or remote dial up.

Administrator Terminal - 1 terminal in addition to the 8 operator terminals may be connected to the com0 port located on the back of the system for administrator and maintenance use.

25 Link lines - 1 per 24 ports installed, up to a maximum of 2 link lines are available:

Record\Playback - 1 per 24 ports installed, up to a maximum of 3 record\playback lines are available.

30 Annunciators - 2 per 24 ports installed, up to a maximum of 8 annunciators are available.

-11-

4. Software

The multi-user bridge operating system and digital signal processing software come with the basic system. A relational database is not needed in the basic system because the functionality is basic System 60. All local and remote CRTs are simple async/ASCII terminals or user supplied PCs with ASCII terminal emulation. No windows or mice are used. The Man-Machine Interface software is designed to allow it to operate in the future with X windows and a mouse. It is a goal to maintain as much of the look and feel of System 60 to minimize the learning time of a person familiar with the System 60. The software supports 96 conferencing channels, 8 operator channels (local or remote), 1 music input, which can be placed into any and all conferences simultaneously, 3 record\playback channels, and 2 link lines. Up to 48 simultaneous interactive conferences can be held on the bridge. System configurations, and dialing lists are stored on the hard disk.

4.1. System Features

<u>Feature</u>
Digitized Audio Messages
Programmable Operator terminal bit Rate
Port count / 2 Simultaneous Conferences
Programmable conference Tones on Entry/Exit
DTMF Dialing-direct, speed dial and blastup
Touch Tone into conference minimized
Call closed transaction log files (CDRs)
Hot reboot- O/S reboot without losing conference
Linking multiple systems ("link lines")

4.1.2 Terminal Accessible Features

There are five types of user:

1. The ordinary conferee (user) using a telephone with touch tone keypad.
2. A moderator using a touch-tone telephone. He has the capabilities of an ordinary user plus some special privileges.
3. An operator using a CRT locally or remotely to run a conference
4. A system administrator at a local or remote CRT.
5. Maintenance personnel at a local or remote CRT or computer

-12-

Feature	User	Mod.	Oper	Admn	Maint
	Tel	Tel	CRT	CRT	CRT
Individual Line Mute			X	X	X
Lecture Mode (all others Muted)			X	X	X
Line Fault			X	X	X
Indication of current speaker			X	X	X
Current Speaker Identification by Line			X	X	X
Date and Time Display			X	X	X
Line display with name/number for all conferences			X	X	X
Conference display with conference name for all conferences			X	X	X
Line answer- setup and status			X	X	X
Line disconnect- status ("DC" mode)			X	X	X
Report - setup			X	X	X
System help enable status			X	X	X
Blast up dialing			X		
Polling			X		
Question and Answer			X		
Conference security		X			
Music			X	X	X
Record/Playback			X	X	
Automatic Conference scanning			X		
Meet me attendant			X		
Add on, attendant			X		
Special features for linking DCBs			X	X	X
Automatic Gain Control			X	X	X
Help Functions (Touch-Tone)			X		
Line State Indication - Onhook, Enter, In Conference, Disconnected			X	X	X
ADDITIONAL FEATURES BEYOND CURRENT PRODUCT					
Feature	User	Mod.	Oper	Admn	Maint
	Tel	Tel	CRT	CRT	CRT
Security- to access each level			X	X	X
Conference billing record			X	X	X
Connect time by lines			X	X	X
Error logs				X	X
Network management- T1 logs and stats, ESF					X
Operator Chat Command			X		
DELETED FROM PRESENT PRODUCT:					
Message Unit Tabulation					
Default Value Speakers per Conference					
Line tariff Tone					
Interactive Conference Switching					
Automatic Conference Switching					
Originator Add On					
Automatic Conference Select Routing-setup					
Meet Me, Security Code Access-user					
Meet Me, Security Code Access-setup					
Automatic Conference Select Routing-setup					

4.2. Man-Machine Interfaces

There are two man-machine interfaces:

- 1) A normal telephone handset with DTMF keyboard is used by the conferee and the moderator. The user responds by typing numbers on his telephone keypad.
- 5 2) An ASCII terminal or a PC with ASCII terminal emulation is used by the Operator, the System Administrator and Maintenance personnel.

4.2.1. Conferee MMI

When the bridge answers an incoming call a message is played to the caller. Incoming calls may be set to not hear a message when the bridge answers the call. When the
10 call enters the DCB and has passed through the annunciator state the caller is then placed into the ENTER conference, where music is played, and remains there until an operator accesses the caller.

Each of the 48 conferences may be configured to generate a tone to other conferees when a new caller is added to the conference (Entry Tone). This tone is heard, if enabled, by
15 all channels in the conference.

Each of the 48 conferences may also be configured to generate a tone when a caller disconnects from a conference (Exit Tone). This tone is heard by all remaining conferees.

The system can be configured to generate a 2 beep DTMF acknowledge tone to each caller that enters a valid DTMF digit. Valid DTMF digits include: DTMF '0' - Help Request,
20 DTMF '1' - Add to Q&A question queue, DTMF '#' - remove from Q&A question queue, and DTMF '1' - '9' while in polling.

4.2.2. Moderator-monitoring via telephone MMI

Conference moderator(s) obtain all the conferee MMI described above with some added features. When a conference is lectured only moderators can be heard by other
25 conferees. If Conference Security is enabled the moderator may secure the conference (i.e. lock out the operators) by pressing a DTMF '7'. Upon securing a conference the moderator hears a 2 beep tone informing them the conference is secure. Conferences can be unsecured by pressing a DTMF '7' upon which a 3 beep tone is heard by the moderator and the operators can now move into the conference.

4.2.3. Sign-In MMI

Operator, Administrator, and Maintenance screens are all accessible from any terminal. All terminals have a Sign-In display and the proper sign-in name and password must be entered to gain access to the system. When entering the password '*'s are displayed in place of the characters entered to maintain security. Valid sign-ins can be entered from
35 any terminal. Operator sign-ins have access to only the operator screen. Administrator sign-

-14-

ins have access to the administrator and operator screens and maintenance sign-ins have access to maintenance, administrator, and operator screens. The default sign-ins are:

Operator Screen: Sign-In Name - oper Password - abc123

Administrator Screen: Sign-In Name - admin Password - abc123

5 Maintenance Screen: Sign-In Name - maint Password - abc123

The system can save hundreds of different sign-ins to the hard disk and these are created and deleted via the administrator menu. When a terminal is powered on the screen displays the sign-in screen, shown below. The window at the top of the screen displays messages from the system. The last 8 messages received are displayed.

10

Sign-In Screen

MultiLink Incorporated Digital S/60 System Status

MultiLink Digital Conferencing Bridge

System Name: XXXXX

Sign-In: oper

15 Password: ****

Exiting from either the operator, administrator, or maintenance screens brings up the sign-in screen. If power is turned off when an operator, administrator, or maintenance screen is up, the system automatically exits the current screen and, when power is restored, the sign-in screen is displayed.

20

4.2.4. Operator MMI

The DCB Operator controls and displays are intended to perform the same functions in a familiar manner to the System 60. Some enhancements are necessary because the DCB has more lines and more conferences. The operator stations each consist of a dedicated terminal and audio path. Operator display #1 is dedicated to operator audio port #1 on the analog interface board and so on.


25

Logging into the system correctly and entering the proper password clears the screen and screen #6, summary screen, is displayed. When the session is finished the operator may log out of the system by executing the "Exit" command under the "Options" submenu.

30 Powering down the terminal automatically executes the logout procedure as does a modem disconnection in the case of remote operators. Operators logging out of the system return the display to its initial state, i.e. any accessed lines are released, any command lines being built are aborted, and the Main menu is displayed.

4.2.4.1. Screen Displays

The DCB supports a total of 8 operator stations running independent conference screen displays. The screen displays vary the number of channels displayed, the number of lines per display, and whether or not the conferee name is displayed. Each screen display is divided into three sections; 1>. Line Status Area - This displays information about all lines in the bridge. 2>. Conference Status Area - This displays information about all the conferences on the bridge. 3>. Operator Status Area - This displays operator information. Figure 4.1 shows the basic screen layout.

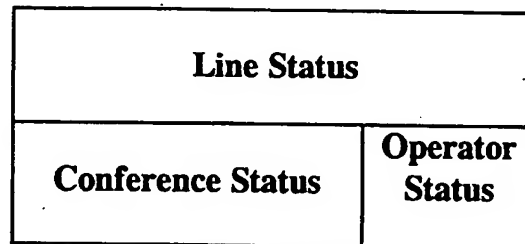

Command Menus
Figure 4.1

4.2.4.1.1. Line Status

The Line Status area is the same for each screen (line detail, summary, etc.). The summary screen, however, does not display the line name. The display format for each line is:

"*01-C01 LS AG NAME"

* - Talk indicator, displays current talker.

01 - Line number.

C01 - Conference number.

LS - Line Status. Can be any of the following:

DC - Disconnect. Any line that has disconnected from the DCB is displayed in reverse video with 'DC' in the line status field. The conference the line was in before it disconnected is also displayed as is the name of the conferee.

MO - Moderator. Indicates if the line is the moderator of the conference. This is set from the 'Access' or 'Line' menu.

MU - Mute. Indicates if the line is muted. This is set from the 'Access' or 'Line' menu.

FL - Fault Line. Indicates if the line is faulted. Faulting a line is done from the 'Access' or 'Line' menu.

OS - Out of Service. Indicates a line has been taken out of service by the system.

AG - Automatic Gain. Indicates Automatic Gain Control is turned on for the specified line. Gain is set through the 'Access' or 'Line' menu.

NAME - Displays the name associated with the line. Up to twenty (20) characters.

4.2.4.1.2. Conference Status

5 The conference status area of the screen displays all pertinent conference information. This includes total participants, conference name, current speaker, etc. The top of the conference status area displays a header and under each header item is the conference information pertaining to that item. The following describes all the conference status information.

10 "C TP NAME SP MLRPSTL"

C - Conference Number (01-48).

TP - Total Participants in conference.

15 **NAME** - Operator assigned conference name. If Display Minutes per conference command is issued the 'NAME' header is changed to 'MINS' and the minutes are displayed. The minutes are cleared and the names displayed if a refresh command is issued. Up to 12 characters.

SP - Current speaker in conference.

M - Music. An 'M' is displayed if music is in the conference. Nothing is displayed if music is not in the conference.

L - Conference Lecture. An 'L' is displayed if the conference is lectured else nothing is displayed.

20 **R - Record Conference.** The record/playback channel in the conference is displayed (1 - 3) if the conference is being recorded. If there is no record channel in the conference nothing is displayed.

P - Playback Conference. The record/playback channel in the conference is displayed (1 - 3) if the conference is being played to. If there is no playback channel in the conference nothing is displayed.

25 S - Conference Security. If the operator turns on security an 'S' is displayed. If a moderator activates the security feature the 'S' is reverse video. If the security feature is turned off nothing is displayed.

T - Conference Tone. If the Entry tone is turned on for the conference an 'E' is displayed. If the exit tone is turned on an 'X' is displayed. If both entry and exit tones are turned on a 'B' is displayed. If neither entry or exit tones are turned on nothing is displayed.

L - Link Channel. Displays which link channel (1 or 2) is currently in the conference. If there is no link channel in the conference nothing is displayed.

4.2.4.1.3. Operator Status

The operator status area of the screen displays information concerning available lines, number of disconnects, etc. The definitions of all the operator status items are:

AVL - Number of unused lines available on the system. Not including disconnects.

35 **DC - Number of disconnects on the system.**

ENT - Number of lines in the 'ENTER' conference.

FLT - Number of lines faulted.

-17-

HLP - Number of lines or conferences requesting help.

Q&A - Number of callers in the Q&A queue. Only if running a Q&A session.

PLL - Number of callers that have responded to a poll. Only if running a polling session.

OPR - The conference the operator is currently in.

TLK - Tells the operator whether or not they can be heard by conferees. (on or off).

5

4.2.4.1.4. Operator Screens

Operators can select 1 of 7 different screen displays. Selecting screens is done by entering the appropriate screen number at any menu. Figures 4.2 - 4.4 show various screen displays. Bold text indicates reverse video.

10

Operator Displays

Screen Number	Lines Per Display	Channels Displayed	Name Displayed?	Screen Name
0	43	48	Yes	Line Detail 1-48
1	43	48	Yes	Line Detail 49-96
2	25	24	Yes	Line Detail 1-24
3	25	24	Yes	Line Detail 25-48
4	25	24	Yes	Line Detail 49-72
5	25	24	Yes	Line Detail 73-96
6	43	96	No	Summary Screen

-18-

Screen # 0

MultiLink DCB		Operator	#1	Line Detail		1-48	1/15 12:00:12				
*01-C02	MO AG	John Smith		25-C08	AG	Foghorn Leghorn					
02-C02	MU AG	Brian McCrea		*26-C08	MO	Porky Pig					
03-C02	MU AG	Steven Skinner		27-C08		Yosemite Sam					
04-C02	MU AG	Russel Simpson		28-C08	AG	Tweety Bird					
05-C02	MU AG	Athos Dapergolas		29-C08		Sylvester The Cat					
06-C02	MU AG	Patricia Dahme		30-C08		Pepe LePew					
07-C02	MU	Nelson Currier		31-C08	AG	Wyle E. Coyote					
08-C02	MU	Robert Baker		32-C08	AG	Road Runner					
09-	DC	Larry Bird									
10-C05	AG	Robert Parrish		34-C08		Tasmanian Devil					
11-C05	AG	Kevin McHale		35-C03		Shemp Howard					
12-C05	AG	Christopher Ford		36-C03		W. C. Fields					
13-C02	MU AG	Kevin Jones		37-C08	AG	Speedy Gonzales					
14-C02	MU AG	Brian Robinson		*38-C05	MO	Red Auerbach					
15-C02	MU AG	Sam White		39-C05	AG	Reggie Lewis					
16-C02	MU AG	Sheila Green		40-C05	AG	Sherman Douglas					
17-C02	MU AG	Barry Brown		41-C05		Dee Brown					
18-C02	MU AG	Patricia Dahme		42-C05		Ed Pinckey					
19-C02	MU	Nelson Currier		43-C03	AG	Lou Costello					
20-C02	MU	Robert Baker		44-C03	MO AG	Bud Abbott					
21-ENT											
22-C08	AG	Daffy Duck		*46-C03	MO	Moe Howard					
23-C08	AG	Elmer Fudd		47-C03	AG	Curly Howard					
24-C08	AG	Bugs Bunny		48-C03		Larry Fine					
C	TP	NAME	SP	MLRPSTL	C	TP	NAME	SP	MLRPSTL	STATUS	
01				B	07				B	AVL - 50	
02	16	MISC	01	L	B	08	13	LOONEY TUNES	26	B	DC - 1
03	7	COMEDIANS	46	1	B	09				B	ENT - 1
04					B	10				B	FLT -
05	8	CELTICS	14		SI	11				B	HLP - 2
06					B	12				B	OPR - C01
											TLK - ON

- 5 **MAIN:** Access Conference Display Enter Fastdial Help Line
Music Options Purge Refresh Set Transfer

-19-

Screen #2

5

MultiLink DCB			Operator #1		Line Detail 1-24		1/15 12:00:12			
*01-C02	MO	AG	Smith		13-C02	AG	Jim Jacobs			
02-C02		AG	Brian McCrea		*14-C05	MO	Red Auerbach			
03-C02		AG	Steven Skinner		15-C05	AG	Reggie Lewis			
04-C02		AG	Russel Simpson		16-C05	AG	Brian Shaw			
05-C02		AG	Athos Dapergolas		17-C05		Dee Brown			
06-C02		AG	Patricia Dahme		18-	DC				
07-C02			Nelson Currier		19-C03	AG	Lou Costello			
08-C02	MU		Robert Baker		20-C03	MO	AG Bud Abbott			
09-	DC		Larry Bird							
10-C05		AG	Robert Parrish		22-C03		Moe Howard			
11-C05		AG	Kevin McHale		23-C03	AG	Curly Howard			
12-C05		AG	Christopher Ford		24-C03		Larry Fine			
C	TP	NAME	SP	MLRPSTL	C	TP	NAME	SP	MLRPSTL	STATUS
01					B					
02	9	NONAME1	01	L	B					AVL - 73
03	6	NONAME2	13	1	B					DC - 2
04					B					ENT -
05	6	CELTICS	14	SI						FLT -
06					B					HLP - 2
										OPR - C01
										TLK - ON

MAIN: Access Conference Display Enter Fastdial Help Line
 Music Options Purge Refresh Set Transfer

10

Figure 4.3

-20-

Screen #6

MultiLink DCB Operator #1 Summary Screen All Confs. 1/15 12:00:12										
*01-C02 MO AG	25-C08	49-C27	73-C27	AG						
02-C02 MU	26-C08 MO AG	50-ENT MU	74-C27							
03-C02 MU	*27-C08 MO AG	51-C27 AG	75-C27							
04-C02 MU	28-ENT MU	52-C27 AG	*76-C27 MO AG							
05-C02 MU	29-C08	53-C27	77-C27							
06-C02 MU	30-C08	54-C27 AG	78-C27	AG						
07-C02 MU		55-C27 MU	79-C27							
08-ENT MU		56-C27	80-C27 MU							
09-C02 MU	33-C08	57-C27 MU	81-ENT MU							
10-C02 MU	34-C08	58-C27	82-C27	AG						
11-C02 MU	35-C08 MO AG	59-C27 AG	83-C27							
12-ENT MU	36-C08 AG	60-C27 AG	84-C27 MO AG							
13-C02 MU	37-C08 AG	61-C27	85-C27							
14-C02 MU		62-ENT MU	86-C27							
15-C02 MU	39-C08	63-C27 AG	87-C27	AG						
16-C02 MU	40-C08	64-C27	88-C27	AG						
17-C02 MU	41-C08 AG	65-C27	89-C27							
18-C01 DC	42-ENT MU	66-C27	90-C27							
19-C01 DC	43-C08	67-C27	91-C27							
	44-C08	68-C27 AG	92-C27	AG						
21-C01 DC	45-C08 AG	69-ENT MU	93-C27							
22-C01 DC	46-C08 AG	70-C27								
23-C01 DC	47-C08	71-C27 AG								
24-C01 DC	48-C08 AG	72-C27 AG								
C	TP	NAME	SP	MLRPSTL	C	TP	NAME	SP	MLRPSTL	STATUS
25				B	31				B	AVL - 6
26				B	32				B	DC - 6
27	41	confname	76	1 B	33				B	ENT - 8
28				B	34				B	FLT -
29				I	35				B	HLP -
30				B	36				B	OPR - C27
										TLK - ON

MAIN: Access Conference Display Enter Fastdial Help Line
 Music Options Purge Refresh Set Transfer

5

Figure 4.4

4.2.4.2. Command Menu

The operator interface software supports up to six simultaneous operators. Each operator has access to all commands. The DCB product supports a softkey operator interface based upon the current System 60 product. Commands may be accessed through the menu structure. The command options are displayed at the bottom of the operator screen. Upon the implementation of a command the Linx prompts the operator for the necessary information (i.e. line numbers, conference numbers, etc.). All commands may be run or submenus displayed by moving the cursor to the desired selection and pressing return or by entering the first letter, or capitalized letter, of the item. If a command (*Italics*) is selected the operator is prompted for the information necessary to perform the command, or the command is simply run if no information is required. If a submenu (**Bold**) is selected the options under that submenu are displayed. The 'ESC' key aborts any command in progress or moves the operator to the MAIN menu. A line editor is present and allows operators to insert and delete characters on the command line using the left and right arrow keys, the del key, and the backspace key.

SYSTEM 60 COMMAND MENU STRUCTURE

MAIN: *Access Conference Display Enter Fastdial Help Line Options Purge Refresh Set Transfer*

ACCESS: *Dial Fault Gain Hangup Moderator mUte Name Release Transfer*

CONFERENCE: *Clear_all Entry_tone Hangup Lecture Name Playback pOlling Q&A Record Security eXit_tone*

POLLING: *Clear Help mUte print_All print_Summary Release Tag_digit*

Q&A: *Clear Gain reDraw Resume*

DISPLAY: *aNswer Calls Gain Line_connect_times Minutes_per_conference Operator_status Show_conferences Total_line_times*

FASTDIAL: *Blastup Create_list Dial dUPLICATE Modify Print Remove_list*

MODIFY: *Add Change Delete*

-22-

LINE: *Fault Gain Hangup Moderator MUte Name***OPTIONS:** *Annunciator Chat Exit Scan*5 **ANNUNCIATOR:** *Playback Record***PURGE:** *Call_counts Disconnects Minutes_per_conference Total_times***SET:** *Nighttime Scan_time*

10

TRANSFER: *Conferees Link_lines*

There are default commands which are not displayed in the command menu. These commands are used to turn on operator talk, change operator displays, and select conferences. These commands consist of:

15

Operator Talk — spacebar or dash (-)
 Conference Group Select — F13 - F16
 F13 = Conference Group 01 - 12
 F14 = Conference Group 13 - 24
 F15 = Conference Group 25 - 36
 F16 = Conference Group 37 - 48
 Conference Select 01 - 12 — F1 - F12
 Conference Select 15 - 24 — F1 - F12
 Conference Select 25-36 — F1 - F12
 Conference Select 37-48 — F1 - F12
 Screen Displays — 0 - 6

20

25

The default commands work from any menu. The Operator Talk command allows the operator to speak to a conference. The Conference Group Select commands select which group of conferences the system displays and which conferences the operator can move to using function keys F1 - F12. The Conference Select keys move the operator and the accessed line, if a line is accessed, to the specified conference. The Screen Displays are defined in the next section of this document.

30

4.2.4.3. Command Definitions35 **4.2.4.3.1 Main Menu Commands****Access**

Access is a dual function command. If an operator is accessed to a line the ACCESS submenu is displayed. If an operator is not accessed to a line the system prompts:

40 **ACCESS**

<line>-

-23-

The operator may enter a line number (1-96) and be moved automatically to the access menu. If a remote operator is to be accessed entering a O1 - O8 accomplishes this. The operator cannot move into the ACCESS submenu without being accessed to a line. If a <return> is entered with no line number at the command prompt the Linx finds a free line, accesses that line to the operator and moves to the ACCESS submenu. If a line is active (i.e. in a conference) the Linx responds with:

Access Line xx Conference #yy
10 ARE YOU SURE (Y/N):

Entering a 'Y' accesses the line. An 'N' or 'ESC' aborts the command. Any other key has no effect.

If a line accessed cannot be viewed by the operator because of the operator screen being displayed the system automatically switches to a similar display which supports the viewing of the line.

Conference

This item displays the CONFERENCE submenu.
20

Display

This item displays the DISPLAY submenu.

Enter

25 Enter is a command which automatically accesses the operator that initiated the command to the next line in the 'ENT' conference. A line is moved into the 'ENT' conference by calling into the bridge. Upon the operator being accessed to a line using the 'Enter' command the ACCESS submenu is displayed.

30 Fastdial

This item displays the FASTDIAL submenu.

Help

Help is a command which either:

- 35 a). Moves the operator to the conference that has requested help.
b). Accesses the line that requested help to the operator which initiated the help command and then displays the ACCESS submenu.

-24-

The two different modes of help may be set in the configuration menu. The help requests can either be by conference or by individual line. When conference help is requested the appropriate conference number in the conference status area of the display is reverse video. When individual help is requested the appropriate line number in the line status area of the display is reverse video. When conference help is selected and a muted line requests help, the line is placed into the help queue, not the conference.

Line

This item displays the LINE submenu.

10

Music

This command places music into a conference. Upon initiating this command the Linx prompts:

15 MUSIC
<conf#>-

The operator may then enter the desired conference. If Music is presently in the conference then it is removed. If music is not in the conference then it is added. Upon adding music to a conference the conference status window is updated displaying an 'M' in the location corresponding to the appropriate conference and all the lines in the conference are muted.

20

Options

This item displays the OPTIONS submenu.

25

Purge

This item displays the PURGE submenu.

Refresh

30 This command clears the entire screen and rewrites it.

Set

This item displays the SET submenu.

35 **Transfer**

This item displays the TRANSFER submenu.

4.2.4.3.2 Access Submenu Definitions**Dial**

-25-

This command allows the operator to dial a telephone number on the line accessed. A name may also be entered. The system prompts:

DIAL

5 <name><number>-

A telephone number of up to 40 digits in length may be entered along with a name of up to 20 characters. The '#' and '*' digits may be dialed simply by entering them from the keyboard. A dial pause can be issued by entering a 'space' between digits.

10

Fault

This command allows the operator to take a line out of service. Upon faulting a line the Line status area of the display reflects the new status. The fault command under the line submenu is used to unfault faulted lines.

15

Gain

This command turns on the automatic gain feature for the accessed line. When on, the line is automatically given gain if the input level received from the line is determined to be low. The maximum amount of gain which can be given to a line is 10 dB. If the line currently does not have automatic gain then the gain is turned on. If automatic gain is currently on then it is turned off.

20

Hangup

This command hangs up the accessed line from the system.

25

Moderator

This command flags the accessed line as a moderator and updates the line status area accordingly. If the line is currently a moderator then the moderator flag is turned off. If the line is not a moderator then the moderator flag is turned on.

30

mUte

This command allows the operator to mute the accessed line. If the line is currently muted then it is unmuted. If the line is not muted then it is muted.

35

Name

This command allows the operator to assign a name to the accessed line. The system prompts:

-26-

NAME

<name>-

5 The name may be up to twenty (20) characters in length and is displayed in the line status area.

Release

10 This command releases the accessed line from the operator and places it back into the conference from which it was accessed. If the line was previously inactive or faulted it is disconnected from the system.

Transfer

15 This command allows the operator to transfer the accessed line to another port. The system prompts:

TRANSFER

<number/extension>-

20 The system then flash hooks the line and dials the specified digits. The line is then disconnected from the operator and the operator is moved back to its previous conference. This feature only works if the system is connected to a switch or PBX which supports call transfers.

4.2.4.3.3 Conference Submenu Definitions**Clear_all**

25 This command turns all conference options off and removes any peripheral channels from the conference. Upon initiating the command the Linx prompts:

CLEAR ALL

<conf(s)>-

30

The operator may then enter the desired conference(s). All conference options are turned off and any record/playback or link lines are removed from the conference. Upon clearing a conference, the conference status window is updated to reflect the change.

35 Entry_tone

This command toggles the entry tone heard by conferees as they enter a conference. Upon initiating the command the Linx prompts:

-27-

ENTRY TONE

<conf(s)>-

- 5 The operator may then enter the desired conference(s). If the entry tone is presently turned on for a conference then it is turned off. If the entry tone is presently off then it is turned on. Upon turning on or off the entry tone the conference status window is updated to reflect the change.

Hangup

- 10 This command hangs up all conferees in the conference which is specified in the command. Upon initiating the command the system prompts:

HANGUP

<conf#>-

- 15 After entering a conference number the system prompts:

HANGUP CONFERENCE #XX

ARE YOU SURE (Y/N):

- 20 Entering 'Y' hangs up the conference. Entering 'N' or 'ESC' brings the operator back to the Main Menu.

Lecture

- 25 This command allows the operator to lecture an entire conference. Only lines flagged as moderators are able to be heard by other conferees. The command prompt is:

LECTURE

<conf#>-

- 30 The specified conference is then lectured and this is displayed in the conference status window. The lines in the lectured conference display an 'MU' in the line status area to show the lines cannot add speech to the conference.

Name

- 35 This command allows the operator to assign a name to a particular conference and have the name displayed in the conference status window. The system prompts:

-28-

NAME

<conf#><name>-

The entered name may be up to 12 characters in length.

5 Playback

This command allows the operator to place one of the playback/record channels into a conference and, through the use of an external tape recorder, play a tape or music to the entire conference. Upon inserting a playback channel into a conference the conference is lectured. The system prompts:

10

PLAYBACK

<conf#/'Remove><ch#>-

If an 'R' is input in place of a conference number then the specified channel is removed.

15 Upon removing or inserting a channel into a conference the conference status area of the display is updated to reflect the changes.

Polling

20 This command allows the operator to poll a conference for DTMF digits. The operator or a moderator may ask a yes/no or a multiple choice question that requires conferees to depress any one key on their keypad. This command is located in the 'Conference' submenu. Upon initiating the command the system prompts:

POLL

25 <conf#>-

30 After entering a conference number the system then updates the conference status window and displays the polling submenu. Upon callers entering digits the screen is updated to reflect the total numbers of each digit entered and each line displays the digit entered in the conference number field of the line status display.

Digits 1-9 are supported.

-29-

Example of a Polling Screen

MultiLink DCB Operator #1 Line Detail 1-24 One Conf. 1/15 12:00:12									
*01-	3	MO AG	Smith					13-	2 MU Jim Jacobs
02-	2	MU	Brian McCrea						
03-	1	MU	Steven Skinner						
04-	2	MU	Russel Simpson						
05-	2	MU	Athos Dapergolas						
06-	3	MU	Patricia Dahme						
07-	3	MU	Nelson Currier						
08-	3	MU	Robert Baker						
DIGIT	TOTAL	TAG		DIGIT	TOTAL	TAG		STATUS	
1	1	UNDECIDED		8				AVL - 73	
2	4	NEGATIVE		9				DC - 2	
3	4	AFFIRMATIVE						ENT -	
4								FLT -	
5								PLL - 2	
6								OPR - C01	
7								TLK - ON	

POLLING: Clear Help mute print_All print_Summary Release Tag_digit
 Entering 'ESC' from the polling submenu prompts:

5

10

-30-

EXIT POLLING**ARE YOU SURE (Y/N):**

Entering a 'Y' returns to the Main Menu. Entering a 'N' or ESC displays the polling
5 submenu.

Clear - Polling

The operator is able to clear out all digits to prepare for another poll by pressing a 'C'. The
system prompts.

10

CLEAR LINES

<line(s)/All>-

Lines may be entered an 'A' to clear all lines.

15

Help - Polling

The operator can access a line in the polling conference that has requested help by pressing
an 'H'.

20 **Mute - Polling**

The operator may mute or unmute lines while in polling by entering a 'U'. The system
prompts.

MUTE

25 <line(s)>-

then prompts for line to muted or unmuted, depending on their present state.

Printing - Polling

30 The operator printing of the results is supported by pressing an 'A' (print_All), to print all line
information along with totals and digit information, or an 'S' (print_Summary), to print only
totals and digit information. Upon printing the system prompts:

ENTER TEXT

35 >-

-31-

The operator can now enter any comments that should be printed out with the results (i.e. the question asked). The printing can be done via the operator terminal, the system printer, or it can be saved to the hard disk. See System Administrator Operator Station Configuration for details.

5

Release - Polling

Pressing an 'R' releases the accessed line and the operator back into the conference.

Tag_digit - Polling

10 The tagging of digits is supported by pressing a 'T'. This prompts the operator with:

TAG DIGIT

<digit><tag>-

15

The operator can enter a digit and the tag, up to 18 characters, which is then displayed in the conference status area of the screen.

Default Commands - Polling

20 The operator talk command and the switching of screen displays is supported while in polling.

Question & Answer

25 The Q&A command performs as follows: The operator selects Q&A mode from the operator display. The Linx prompts the operator for the conference and upon entering this information all lines in the conference, except for the moderator(s), are muted.

Q&A

<conf#>-

30

The screen display changes to display the moderator(s) and the lines which have pressed the "question" key (DTMF '1'). Upon pressing the question key the Linx displays the lines according to their queue position not according to line number.

35 Help requests are displayed on the screen with the line number in reverse video. The operator may service a help request while in Q&A by moving the cursor to the line requesting help and pressing <RETURN>. This accesses the line to the operator. Pressing <return> again places the line back into the conference.

-32-

Operators may access the moderator(s) by moving the cursor to the moderator line and pressing <RETURN>. This access the moderator to the operator. Pressing <RETURN> again places the moderator back into the conference.

5

Example of a Q&A Screen

MultiLink DCB Operator #1 Line Detail 1-24 One Conf. 1/15 12:00:12										
01-C02 MO AG Smith										
13-C02 MU Jim Jacobs										
*08-C02 Robert Baker										
04-C02 MU Russel Simpson										
07-C02 MU Patricia Dahme										

Q&A: Clear Gain reDraw Resume

10

The first caller in the queue is displayed on the top left corner of the screen, after the moderator(s) in reverse video. Callers may remove themselves from the Q&A queue by entering a DTMF '#'. No lines except the moderators and the lines wishing to ask a question are displayed on the screen. The operator can use the arrow keys to move from caller to caller. By pressing <RETURN> the highlighted line is unmuted, begins blinking and can be heard by other conferees. When the operator presses <RETURN> again, the line is removed from the screen and the next person in the queue is now highlighted.

15

Entering 'ESC' from the Q&A submenu prompts:

20

EXIT Q&A

ARE YOU SURE (Y/N):

Entering a 'Y' returns to the Main Menu. Entering a 'N' or ESC displays the polling submenu.

25

-33-

Pressing an 'ESC' terminates the Q&A feature however the status of all lines are saved and is displayed when Q&A is entered again.

Clear - Q&A

- 5 The queue can be cleared out by issuing the 'Clear' command. Entering this command clears all lines in the Q&A queue and updates the screen accordingly.

Gain - Q&A

- 10 While a line is highlighted the operator may turn gain, for that line, on or off by pressing a "G". If gain is presently on for the line it is turned off. If gain is presently off for that line it is turned on. This command turns on the automatic gain feature for the accessed line. When on, the line is automatically given gain if the input level received from the line is determined to be low. The maximum amount of gain which can be given to a line is ??? dB.

15 Redraw - Q&A

This is similar to the refresh command. It clears and redraws the entire Q&A screen.

Resume - Q&A

- 20 After the operator unmutes a line by pressing <RETURN> the line can then be muted again and either removed from the Q&A queue by pressing <RETURN> again or it can be left in the Q&A queue by entering an 'R'.

Default Commands - Q&A

- 25 The operator talk command and the switching of screen displays is supported while in Q&A.

Record

- 30 This command allows the operator to place one of the record/playback channels into a conference and, through the use of an external tape recorder, record a conference. The system prompts:

RECORD

<conf#/'R'emoval><ch#>-

- 35 If an 'R' is input in place of a conference number then the specified channel is removed. Upon removing or inserting a channel into a conference the conference status area of the display is updated to reflect the changes.

-34-

Security

- This command allows the operator to setup a conference for security. Upon turning on security for a conference the moderator in that conference may then activate the security feature by pressing a '7' on their DTMF telephone. Operators are then denied access to that conference unless a request for assistance is made. The system prompts:

SECURITY

<conf#(s)>-

- 10 Upon turning security on or off the conference status area is updated. A secured conference can no longer request operator help. The conference security must be turned off in order to request operator help.

15 eXit_tone

This command toggles the exit tone heard by conferees as other conferees exit a conference. It works the same as the Entry_tone command.

4.2.4.3.4 Display Submenu Definitions**aNswer**

- 20 The display answer command allows the operator to view the answer status (whether or not a line answers a call) of each line on the system.

Calls

- 25 The display calls command allows the operator to view the number of calls per line and the total number of calls per system. Calls are incremented when a conferee disconnects.

Gain

- 30 The display gain command allows the operator to view the status of the automatic gain feature of each line on the system.

Line_connect_times

The display line connect times command allows the operator to view the current connect time for each active line on the system (from system answer to current time).

35 Minutes_per_conference

The display minutes per conference command allows the operator to view the number of minutes accumulated for the 12 conferences being displayed.

-35-

Operator_status

This command allows each operator to view the status of all operators on the system. The conference status window is updated to display (1) type of operator card (local or remote), (2) the line accessed by the operator, (3) if the operator is remote and the operator is accessed by another operator, which operator is accessing it, (4) automatic gain, on or off, for remote operators, (5) which conference the operator is currently in, (6) operator talk, on or off, (7) operator name up to 8 characters (this is not labeled). This screen is displayed and updated until either a refresh command or a screen change command is issued. Note: Leased Line operators are displayed as LOCAL.

10

Example of Operator Status Display

MultiLink DCB Operator #1 Line Detail 1-24 All Confs. 1/15 12:00:12							
*01-C02 MO AG Smith				13-C02 AG Jim Jacobs			
02-C02 AG Brian McCrea				*14-C05 MO Red Auerbach			
03-C02 AG Steven Skinner				15-C05 AG Reggie Lewis			
04-C02 AG Russel Simpson				16-C05 AG Brian Shaw			
05-C02 AG Athos Dapergolas				17-C05 Dee Brown			
06-C02 AG Patricia Dahme				18- DC			
07-C02 Nelson Currier				19-C03 AG Lou Costello			
08-C02 MU Robert Baker				20-C03 MO AG Bud Abbott			
09- DC Larry Bird							
10-C05 AG Robert Parrish				22-C03 Moe Howard			
11-C05 AG Kevin McHale				23-C03 AG Curly Howard			
12-OP2 AG Christopher Ford				24-C03 Larry Fine			
OPR #1	OPR #2	OPR #3	OPR #4	OPR #5	OPR #6	OPR #7	OPR #8
LOCAL	LOCAL	REMOTE	REMOTE	LOCAL	LOCAL	REMOTE	REMOTE
AC TO o4	AC TO 12	AC BY	AC BY o1	AC TO	AC TO	AC BY	AC BY
CO - OP1	CO - OP2	AC TO	AC TO	CO - C22	CO - C12	AC TO	AC TO
TLK ON	TLK ON	GN off	GN ON	TLK off	TLK ON	GN ON	GN OFF
NAME 1	NAME 2	CO - C02	CO - OP1	NAME 5	NAME 6	CO - C06	CO - NC
		TLK off	TLK ON			TLK ON	TLK off
		NAME 3	NAME 4			NAME 7	NAME 8

MAIN: Access Conference Display Enter Fastdial Help Line
Music Options Purge Refresh Set Transfer

15 **Show Conferences**

This command toggles the operator between viewing all lines in all conferences or only the lines which are presently in the same conference as the operator. Default is all lines in all conferences. The message "One Conf." is displayed on the top of the screen when the system is displaying only active conferences. When the system is displaying all conferences the message "All Confs." is displayed.

20

Total_line_times

This command allows the operator to view the total number of minutes accumulated on all lines and the total amount of system time.

-36-

4.2.4.3.5. Fastdial Submenu Definitions

The Fastdial submenu allows operators to create dialing lists for use in blast up dialing or speed dialing. There can be up to 25 dialing lists with each list containing up to 96 telephone numbers and names. Upon creating a list it is automatically saved to disk. The lists may be accessed by any operator or all operators simultaneously. Along with creating lists, operators may remove entire lists, print, duplicate, or modify these lists.

Upon accessing a dialing list the operator may scroll through the list using the arrow keys.

Entering an item number and pressing <RETURN> moves the operator immediately to the specified item. Dialing lists may be accessed from any of the 6 operator displays and the

differences between the 25 line and 43 line displays is shown below.

Example of Dialing List on a 25 Line Display

MultiLink DCB	Operator #1	Line Detail 1-24	1/15 12:00:12
*01-C02 MO AG Smith		13-C02 AG Jim Jacobs	
02-C02 AG Brian McCrea		*14-C05 MO Red Auerbach	
03-C02 AG Steven Skinner		15-C05 AG Reggie Lewis	
04-C02 AG Russel Simpson		16-C05 AG Brian Shaw	
05-C02 AG Athos Dapergolas		17-C05 Dee Brown	
06-C02 AG Patricia Dahme		18- DC	
07-C02 Nelson Currier		19-C03 AG Lou Costello	
08-C02 MU Robert Baker		20-C03 MO AG Bud Abbott	
09- DC Larry Bird			
10-C05 AG Robert Parrish		22-C03 Moe Howard	
11-C05 AG Kevin McHale		23-C03 AG Curly Howard	
12-C05 AG Christopher Ford		24-C03 Larry Fine	
Dial List - xyz Conference - C02 Starting Line - 1			STATUS
01> 565656565	qwertyqwerty		AVL - 73
02> 645327658746785	MultiLink		DC - 2
03> 56473865784367856843	MultiLink, Andover		ENT -
04> 5643726578967832	aabbccddeeff		FLT -
05> 3737373737373	gghhijjkkllmm		HLP - 2
06> 19191919191919	qqwweerrttyy		OPR - C01
07> 8888888888888888	yriryryryryry		TLK - ON
08> 2121212121212121	apapapapapapap		

-37-

Blastup Dialing

This command allows the operator to blastup an entire dialing list. This command is located in the 'Fastdial' submenu. Upon initiating the command the system prompts:

5

BLAST
<conf#>-

10 A conference may be entered or, if only a <return> is pressed the system selects an empty conference.

The system then prompts with:

BLAST
<Starting Line>-

15

A line number may be entered or, if only a <return> is pressed line #1 is used.

The system then displays all the dialing lists available. The operator must choose the list they wish to blastup. Choosing a list may be done by using the arrow keys to highlight the desired list and then pressing <return>.

20 After a list has been selected, the items in that list are displayed on the screen. Items in the list can be flagged not to dial by using the up and down arrow keys to move through the list and pressing <return> when the item in question is highlighted. Upon doing this the item is flagged and is not dialed during the blastup procedure.

When the operator is ready to begin, pressing a 'B', initiates the blastup procedure. Lines are
25 dialed and placed into the "CLPG" conference where they hear a repeating message (this message is recorded on annunciator #5). The callers can then press a DTMF '1' on their telephone and are moved into the conference. An 'N' may be pressed to automatically access the next caller in the call progress queue. Pressing an 'N' again places the line into the selected conference. Pressing an 'H' hangs up the accessed line.

30

Create_list

This command allows the operator to create a dialing list and enter a series of telephone numbers and names to that list. Upon initiating the command the systems prompts:

35 CREATE LIST
<name>-

Upon entering a name (xyz for this example) the system prompts:

-38-

CREATE LIST - xyz

<name><number>-

- 5 The telephone number may be up to 40 digits in length and the name up to twenty (20) characters. The <name><number> prompt continues to appear until either the list is full (i.e. 96 items have been entered), or an 'ESC' is pressed. If an 'ESC' is pressed the operator is returned to the FASTDIAL menu and not the MAIN menu.

10 **Dial**

This command allows the operator to fastdial a specific dialing list. Upon initiating the command the system prompts:

DIAL

15 <conf#>-

A conference may be entered or, if only a <return> is pressed the system selects an empty conference.

The system then displays all the dialing lists available. The operator must choose the list they wish to dial. Choosing a list may be done by using the arrow keys to highlight the desired list and then pressing <return>.

20

After a list has been selected, the items in that list are displayed on the terminal. The operator may then, using the arrow keys, move down, or up, through the list until the desired item is highlighted.

When the operator presses <return> the system finds a free line, accesses that line to the operator, opens the operator talk path, updates the screen, and dials the number.

25

If a connection is made the operator may place the line into the selected conference by pressing <return>.

If no connection is made (busy, ring no answer) the operator may hangup the line by pressing an 'H'.

30

The operator talk key command works while in the fastdial mode.

Duplicate List

Upon pressing a 'U' (dUPLICATE) the system displays all the available dialing lists. The operator may choose the list to reproduce by using the arrow keys to highlight the desired list and pressing <return>. After selecting a list the system prompts with:

35

DUPLICATE

<NAME>-

-39-

The operator enters the name and a new list is created.

Modify List

- 5 The Modify list command allows the operator to add, change, or delete items to/from a dialing list. Upon selecting the modify list option a submenu appears prompting the operator with ADD, CHANGE, and DELETE.

After selecting either ADD, CHANGE, or DELETE all the dialing lists are displayed on the screen. The operator may then choose a list by using the arrow keys to highlight the desired list and pressing <return>.

- 10 If ADD is selected the system prompts:

Add item to list - xyz

<name><number>-

- 15 The operator may now enter new items to the selected dialing list until either, the list is full, or an 'ESC' is entered.

- If CHANGE is selected the system displays the items in the selected dialing list. The operator can select an item to change by using the up and down arrow keys. The left and right arrow keys may then be used to move the cursor through the field and make the necessary changes to the telephone number and/or name. The 'DEL', 'BACKSPACE', 'HOME', and arrow keys are used for editing. Insert mode is always enabled and any character entered updates the screen. When updating the telephone number use only '0' - '9', '*', '#' or a space. Once editing an item is complete, pressing <RETURN> modifies the dialing list and updates the other operator screens. To abort an edit use the up or down arrow keys.
- 20
- 25

If DELETE is selected the system displays the items in the selected dialing list. The operator may delete an item by using the arrow keys to select the desired item and press <return>.

Printing Dialing Lists

- 30 This command allows the printing of dialing lists. Upon pressing a 'P' the system displays all the available dialing lists. The operator may choose the list to print by using the arrow keys to highlight the desired list and pressing <return>. The printing can be done via the operator terminal, the system printer, or it can be saved to the hard disk. See System Administrator Operator Station Configuration for details.

-40-

Remove List

This command allows the operator to remove a list from the system. Upon initiating this command, all the dialing lists in the system are displayed. The operator may then, using the arrow keys, select the list to be deleted. Pressing <return> initiates the prompt:

5

Delete list - xyz
(Y/N) -

Entering a 'Y' deletes the dialing list. Entering an 'N' or 'ESC' aborts the deletion.

10 Deletion may only be performed if no other operators are in the fastdial submenu.

4.2.4.3.6. Line Submenu Definitions**Fault**

This command allows the operator to take a line out of service. Upon initiating the command the Linx prompts:

15

FAULT
<line(s)>-

The operator may then enter the desired line(s). If a line is presently faulted then it is unfaulted. If a line is unfaulted then it is faulted.

20

Gain

This command turns on or off the automatic gain feature for the specified line(s). When on, the line is automatically given gain if the input level received from the line is determined to be low. The maximum amount of gain which can be given to a line is 10 dB. Upon initiating the command the Linx prompts:

25

GAIN
<line(s)>-

30

The operator may then enter the desired line(s). Upon turning gain on or off the screen is updated to reflect the change.

Hangup

35 This command allows the operator to hangup a line or group of lines from the system. Upon initiating the command the Linx prompts:

-41-

HANGUP

<line(s)>-

- 5 The operator may then enter the desired line(s). If a line entered by the operator is presently active or it is in the 'DC' state it is disconnected from the system. Upon hanging up lines from the system the screen is updated to reflect the change.

Moderator

- 10 This command allows the operator to flag a line or lines as moderators. Upon initiating this command the system prompts:

MODERATOR

<line(s)>-

- 15 The operator may then enter the desired line(s). If a line entered by the operator is not presently active it is not affected by this command. Upon making a line a moderator the screen is updated to reflect the changes.

Mute

- 20 This command allows the operator to mute a line (no audio from the line enters the conference) or group of lines. Upon initiating the command the Linx prompts:

MUTE

<line(s)>-

25

- The operator may then enter the desired line(s). If a line entered by the operator is not presently active it is not affected by this command. If a line is presently muted when the command is issued the line is then allowed to talk to the conference. If the line was presently allowed to talk to the conference and the command was issued the line is muted. Upon muting or unmuting lines the screen is updated to reflect the changes.
- 30

Name

This command allows the operator to name a line. Upon initiating the command the Linx prompts:

35

NAME

<line><name>-

-42-

The operator may then enter the desired line followed by a maximum 20 character name. If a line entered by the operator is not presently active it is not affected by this command. Upon naming a line the screen is updated to reflect the changes. Operator lines may be named by entering o1 - o8 for the line number. The operator name may only be 8 characters in length.

- 5 The operator names are displayed when the display operator status command is executed.

4.2.4.3.7. Options Submenu Definitions

Annunciator

The annunciator command displays another submenu with the options PLAYBACK and RECORD. Upon selecting the PLAYBACK command the Linx prompts:

10

PLAY MESSAGE
<annunciator (1-8)>-

- 15 The operator may then enter an annunciator channel to playback. The annunciator plays and the operator may listen from the audio console. After recording or playing back an annunciator the operator is returned to the annunciator submenu.

Upon selecting the RECORD command the Linx prompts:

- 20 RECORD MESSAGE
<annunciator (1-8)>-

The operator may then enter an annunciator channel to record. The recording is done via the operator headset.

25

Chat

This command allows any operator to send a message to any other operator. A character string of up to 60 characters may be sent. Upon initiating this command the system prompts:

- 30 CHAT
<operator> <text>-

- 35 Any operator (1 - 8) may be entered and the text string. Upon pressing <RETURN> the string is displayed on the top of the specified operator display (see below). The operator which sent the string is also displayed. If the operator has a name assigned to it then the name is displayed in place of the operator number. Messages from the system display "System" in place of the operator name.

-43-

Chat Screen

From: OP1 - All text entered via the chat command is entered here.										
MultiLink	DCB	Operator	#1	Line	Detail	1-24	1/15 12:00:12			
*01-C02	MO	AG Smith		13-C02	AG Jim Jacobs					
02-C02		AG Brian McCrea		*14-C05	MO Red Auerbach					
03-C02		AG Steven Skinner		15-C05	AG Reggie Lewis					
04-C02		AG Russel Simpson		16-C05	AG Brian Shaw					
05-C02		AG Athos Dapergolas		17-C05	Dee Brown					
06-C02		AG Patricia Dahme		18-	DC					
07-C02		Nelson Currier		19-C03	AG Lou Costello					
08-C02	MU	Robert Baker		20-C03	MO AG Bud Abbott					
09-	DC	Larry Bird								
10-C05		AG Robert Parrish		22-C03	Moe Howard					
11-C05		AG Kevin McHale		23-C03	AG Curly Howard					
12-C05		AG Christopher Ford		24-C03	Larry Fine					
C	TP	NAME	SP	MLRPSTL	C	TP	NAME	SP	MLRPSTL	STATUS
01					B					
02	9	NONAME1	01	L	B					AVL - 73
03	6	NONAME2	13	1	B					DC - 2
04					B					ENT -
05	6	CELTICS	14		SI					FLT -
06					B					HLP - 2
										OPR - C01
										TLK - ON

MAIN: Access Conference Display Enter Fastdial Help Line
Music Options Purge Refresh Set Transfer

5 Exit

The operator may log out of the system by entering this command. Upon entering this command any accessed line is released, the operator station is returned to the main menu, the screen is cleared and the sign-in prompt displayed.

10 Scan

This command automatically moves the operator from conference to conference. If a conference is empty it is skipped. Scanning continues until any key is pressed.

4.2.4.3.8. Purge Submenu DefinitionsCall_counts

- 15 This command zeros the accumulated calls on each line.

Disconnects

This command purges the disconnects for a desired conference or all the disconnects on the system. The system prompts:

20

PURGE DISCONNECTS

<conf#/'A'll>-

-44-

The operator may then enter either a conference number to purge or an 'A' to purge all disconnects present on the system. Purging disconnects clears the name and telephone number and turns off the gain associated with the line being purged.

5 **Minutes_per_conference**

This command allows the operator to zero the conference minutes for a specific conference and set the start time for all lines in that conference to the present time. The system prompts:

PURGE MINUTES PER CONFERENCE

10 <conf#>-

The operator may then enter the conference number to purge.

Total_times

15 This command zeros all the accumulated line times for each line in the system.

4.2.4.3.9. Set Submenu Definitions

Nighttime

This command tells the system to ignore all incoming calls. Once the operator initiates the command the message "Nighttime Mode Set. Press any key to stop" appears on all operator screens. This message stays on each screen until a key is pressed from any operator station. After a key is pressed the Nighttime mode is disabled and all operators go back to the Main menu.

Scan

25 This command allows the operator its own independent scanning time for the conference scan feature. The system prompts:

SET SCAN TIME

<time(1-59)>-

30 **4.2.4.3.10. Transfer Submenu Definitions**

Conferees

This command allows the operator to transfer groups of conferees to different conferences. The system prompts:

35 TRANSFER CONFEREES TO

<conf#><line(s)>-

-45-

The operator may then enter a conference number and all the lines to be transferred to that conference.

5 **Link_lines**

This command allows the operator to transfer the link channels from conference to conference. The system prompts:

TRANSFER LINK LINES TO

10 <conf#/'R'move><link line>-

The operator may enter a conference number or an 'R', along with a link line, to either transfer the link line to a conference or remove the link line from all conferences.

15 **4.3 Annunciators**

The DCB supports 8 annunciator channels and 8 messages. The messages are digitized, when recorded by an operator, and saved on the hard disk. Each of the 8 annunciator channels can play any of the 8 messages. Upon channels calling into the system an annunciator is played to them. This annunciator can be any of the 8 annunciator channels
20 however the actual message is the one assigned via the administrator console. This configuration allows any message to be played to any annunciator.

4.4. CDRs

A feature is provided for storing/printing line information upon the disconnection of a line from the DCB. The CDR (Call Detail Record) for each line, CDRs are generated when
25 lines disconnect from the bridge, is saved to disk. CDR's can be printed via the printer port on the back of the bridge (see system administrator printer options for details). CDR printing is not supported through operator terminals. The CDR format is as follows:

30 **LINE# CONF# START END CONNECT NAME MODERATOR PHONE# CONF
NAME**

Line # - The line that disconnected.

Conf # - The conference from which the line disconnected.

Start Time - The time the line either called into the Linx or was dialed out by the operator.

35 **End Time** - The time the line disconnected from the Linx.

Connect Time - The amount of time (in minutes) the line was on the Linx.

Name - The name assigned to the line.

-46-

Moderator - If the line was a moderator this field contains a 'Y'. If the line wasn't a moderator this field contains an 'n'.

Phone # - The telephone number if the line was dialed out.

Conference Name - The name assigned to the conference.

5 **4.5. Music**

The DCB can supply music to any and all conferences simultaneously using a single music source. The INPUT and ENTER conferences are also supplied from the same music source. Inserting and removing music from a conference is done via the operator terminal. The insertion of music to the INPUT and ENTER conferences is done during system initialization and cannot be removed from these conferences.

4.6. Record/Playback

The DCB has the capability of recording from, or playing to, up to 3 conferences simultaneously. Each channel may be configured via the operator terminal for either recording a conference or playing to a conference. Record and playback cannot be done simultaneously on the same channel. There can be a maximum of 3 record/playback channels installed into DCB.

4.7. Configuration Menu

The DCB product allows the system administrator to configure system parameters pertaining to lines, conferences, operators, and the entire system. Listed below are the configuration items which are retained from the present system. Refer to Administrator MMI, 4.8, for details.

Annunciator Designation
Line Timeout
Line Answer
Restrict Outbound Dialing
System ID
Disconnect "DC" Mode
DTMF Acknowledgment
Bit Rate
Operator Assistance
Operator Print Setup
Operator Request Tone
Operator Talk Character

-47-

The items deleted from the present configuration menu include the following.

Automatic Report Printout
Line Disconnect
Tariff Tone
Computer Interface
Call Progress
Originator Dialout (ODO)
Security Code Access (SCA)
Automatic Security Code Access
ODO\SCA
Unattended Blast Up Dialing
Scan Time
Line Security Partitioning

4.8. Operator Printing

By connecting a serial printer to the back of an operator station ASCII terminal, operators can initiate the printing of dialing lists and polling results.

System administrators may redirect printer output from the operators to a printer connected to the back of an operator terminal, to the system printer, or to a file saved on the hard disk.

4.9. Administrator MMI

The Digital System 60 (DCB\60) Administrator Console allows conferencing operations supervisors to configure the DCB\60 to meet their conferencing needs. Channel, operator, and system parameters, may be configured through the administrator console. Backups of these configurations, the printing of system reports, setting system date and time, and password/sign-in management are also done through the administrator console. Upon starting the administrator process, the screen is cleared and the administrator main menu is displayed. The entire process is menu driven. The copyright window (shown below) is displayed for each menu selected.

MultiLink Incorporated
Digital Conferencing Bridge
P/N: Revision A
(C)opyright 1992, MultiLink Inc.

Pressing the 'ESC' key returns you to either the previous menu or to the Main Menu, depending on what command you are executing. If the terminal loses power or becomes disconnected from the system the administrator process aborts and the sign-in process is started. Upon reception of a shutdown command the administrator process is killed.

4.9.1. Main Menu

The Main Menu is displayed upon startup of the administrator process. It consists of the following items.

- 5 **System Date/Time** - Sets the system date and time.
- System Configuration** - System Configuration Menu.
- Channel Configuration** - Channel Configuration Menu.
- Operator Configuration** - Operator Configuration Menu.
- Disk Utilities** - Format and view removable media.
- File Management** - View, print, and export files.
- 10 **Backup/Restore** - Backup and restore directories.
- Sign-In Management** - Sign-In Management.
- Operator Display** - Allows the administrator start the operator console process.
- Exit** - Exits administrator screen.

4.9.2. System Date and Time

- 15 The system date and time are changed using this menu option. The administrator can move between the date and time fields on the screen using the arrow keys and input the proper values. The date and time window is shown below.

System Date and Time	
Date (mm/dd/yy):	8/13/92
Time (hh:mm) :	10:00
ESC to EXIT	

- 20 Only numeric characters are allowed to be entered into the fields. Pressing 'ESC' prompts with "Save Changes (Y/N)?". Entering an 'N' or 'ESC' does not change the date and time. Entering a 'Y' changes the date and time.

4.9.3. System Configuration

- 25 The system configuration menu gives the administrator the ability to name the system, set the number of simultaneous talkers, configure dialout supervision, set annunciator and dial delays, set wink, flash hook and guard times, and enable/disable DTMF acknowledge, Disconnect Mode, Help Mode, and 1 or 2 digit mode. The administrator can move between these fields by using the arrow keys. The system configuration window is shown below.

System Configuration	
System Name	: MultiLink
Simultaneous Talkers	: 3
Dial Out Supervision	: Delay
Annunciator Delay (0-5)	: 0
Dial Delay (1-5)	: 1
Wink Time (300-800)	: 300
Flash Hook Time (300-800)	: 300
Guard Time (300-800)	: 300
Enable DTMF Acknowledge	: N
Enable Disconnect Mode	: N
Enable Conference Help	: N
Enable Two Digit Mode	: N
ESC to Exit	

Alphanumeric characters are allowed in the name field and numeric characters only are allowed in the Simultaneous Talkers, Annunciator Delay, Dial Delay, Wink Time, Flash Hook Time, and Guard Time fields. The remaining options may be changed by selecting the desired option, using the arrow keys, and pressing the space bar, which toggles through all available options for the specific field. Pressing 'ESC' prompts with "Save Changes (Y/N)?". Entering an 'N' or 'ESC' does not implement the changes. Entering a 'Y' changes the parameters in memory and on disk.

10

Dial Out Supervision Options - Delay or Wink Default - Delay

Description - After seizing out on a line either, 1 > delay for the duration entered in **Dial Delay** or 2 > execute a wink of the duration entered in **Wink Time**, before dialing digits.

15

Simultaneous Talkers Options - 1-3 talkers Default - 3

Description - Number of simultaneous talkers per conference.

Annunciator Delay Options - 0-5 seconds Default - 0

Description - Amount of delay before annunciator message is played after a call is answered.

20

Dial Delay Options - 1-5 seconds Default - 1

Description - Amount of delay before dialing digits. See **Dial Out Supervision**.

Wink Time Options - 300-800 ms. Default - 300

25

Description - Duration of wink signal. See **Dial Out Supervision**.

Flash Hook Time Options - 300-800 ms. Default - 300

Description - Duration of flash hook, used for call transfers.

-50-

Guard Time Options - 300-800 ms. Default - 300

Description - Duration of time from when a line disconnects in both directions until that line may be used again for either outgoing or incoming calls. Prevents glare condition which occurs when both ends seize the line simultaneously.

5

DTMF Acknowledge Options - Yes or No Default - No

Description - Send the caller 2 beeps informing them of the reception of a valid DTMF digit.

Disconnect Mode Options - Yes or No Default - No

10

Description - Upon a line disconnecting from the system either, 1 > keep the line seized out and display 'DC' state on the operator screen or 2 > disconnect the line immediately and clear line from the operator screen.

Conference Help Options - Yes or No Default - No

15

Description - Respond to help by either 1 > conference, operator moves to conference requesting help or 2 > individual, operator accesses caller that requested help.

Two Digit Mode Options - Yes or No Default - No

20

Description - Requires an '*' be pressed preceding any DTMF option. Callers must press '*', '0' for operator help.

4.9.4. Channel Configuration

The channel configuration menu gives the administrator the ability to assign a specific annunciator message to a channel, set the answer status of a channel, set the timeout time of a channel, or restore all channels to their defaults. The administrator selects a configuration option by using the arrow keys to move between menu items and pressing return. Selecting defaults prompts with an "ARE YOU SURE? (Y/N):" message and sets all channels to their default configurations if a 'Y' is entered. Selecting 'Main Menu' returns the administrator to the main menu. The channel configuration menu window is shown below.

25

Channel Configuration
Annunciator Assignments
Answer
Timeout
Defaults
Main Menu

30

The window relating to 1 of the 3 channel menu items (annunciator, answer, timeout) is displayed upon choosing an item. The annunciator assignments configuration window is shown below and this window is similar to the other to channel options. Each window displays 24 channels and the remaining channels can be viewed/modified by using the page-up/page-down keys.

-51-

Channel Annunciator Assignments	
1. 1	13. 1
2. 1	14. 1
3. 1	15. 1
4. 1	16. 1
5. 1	17. 1
6. 1	18. 1
7. 1	19. 1
8. 1	20. 1
9. 1	21. 1
10. 1	22. 1
11. 1	23. 1
12. 1	24. 1
ESC to Exit	

The announcement message (1 - 7, message #8 is reserved for blast out dialing) can be entered via the keyboard and each channel has a default of message #1. Channels do not hear a message if a 0 is entered in the annunciator field. The answer configuration can be a 'Y'es or 'N'o and these are toggled by pressing the space bar. Answer defaults are 'Y' for all channels. Channel timeout can range from 0 - 60 minutes and these can be entered via the keyboard. Timeout defaults for all channels is 0 seconds, i.e. no timeout. Pressing 'ESC' prompts with "Save Changes (Y/N)?". Entering an 'N' or 'ESC' does not make the changes. Entering a 'Y' changes the parameters in memory and on disk.

10 4.9.5. Operator Configuration

The operator configuration menu gives the administrator the ability to independently configure each of the 8 operator stations and the administrator station. Terminal bit rate, printer options, terminal beeps, operator talk character, and local\remote operator setups for each operator can be configured from this menu. The administrator terminal can only be configured for baud rate, printer options, and terminal beeps. The operator configuration menu lists all 8 operator stations plus the administrator station. The Operator configuration menu is shown below.

Operator Configuration/Selection
Operator 1
Operator 2
Operator 3
Operator 4
Operator 5
Operator 6
Operator 7
Operator 8
Administrator
Main Menu

Upon selecting an operator station to configure, the operator configuration window for the operator selected is displayed. This window is shown below.

-52-

Operator 1 Configuration	
Baud Rate	: 19200
Printing	: Local
Beep Mode	: Single Beep
Beep Time	: 1
Talk Key	: Spacebar ' '
Remote	: N
Channel	: OP1
ESC to Exit	

Administrator Configuration	
Baud Rate	: 19200
Printing	: Local
Beep Mode	: Single Beep
Beep Time	: 1
ESC to Exit	

The Baud Rate selections include 9600 and 19200, selectable by pressing the spacebar. The default baud rate is 19200.

5 The Printing selections include local, system, file, none or any combination of local/system/file. The print options are selectable by pressing the spacebar and the default for each operator is local.

10 The Beep Mode selections include single beep, continuous beep or no beep. The beep time option is the interval between beeps, 1 - 5 seconds, when the continuous beep option has been selected. The Beep Mode options are selectable by pressing the spacebar. The default for Beep Mode is single beep and the default Beep Time is 1 second.

The Talk Key selections include the spacebar and the dash key, selectable by pressing the spacebar. The default is 'spacebar' controls operator talk.

The Remote selections include 'Y'es or 'N'o, selectable by pressing the spacebar. The default is No, i.e. local operator.

15 The Channel selection gives the administrator the ability to assign a remote operator a channel number. These channel numbers can be any of the user channels currently in service on the system however the channel must be inactive to be assigned remote operator capabilities. Only remote operators can be assigned channel numbers, local operators use the channel assignments given by the system and these cannot be modified.

20 Pressing 'ESC' prompts with "Save Changes (Y/N)?". Entering an 'N' or 'ESC' does not make the changes. Entering a 'Y' changes the parameters in memory and on disk.

4.9.6 Disk Utilities

The Disk Utilities menu allows the administrator to format or list the files on a floppy disk. The Disk Utilities menu is shown below.

25

Disk Utilities
Format
Directory Listing
Main Menu

-53-

Selecting Format or Directory Listing prompts with the drive select menu, shown below. The administrator must select the disk drive to use and press return, or press 'ESC' to exit.

Drive Select
A:(5.25 in. 1.20 MB)
B:(3.50 in. 1.44 MB)

After selecting a drive the screen is cleared and the following messages are displayed.

"Format of A:" or "Directory Listing of A:"

"Please insert disk into drive A:"

"Press 'ESC' to abort, any other key to continue."

Pressing 'ESC' aborts the procedure, otherwise the command is executed, and when finished, a "Press any key" message is displayed on the screen. If either of these commands are executed without a floppy disk inserted into the appropriate drive the screen hangs until a disk is inserted. Disks are formatted with the DOS format command.

4.9.7. File Management

The file management menu gives the administrator the ability to delete, export, print, and view files on the system which include Alarm Statistics, CDRs, dialing lists, logs, network statistics, and operator printouts. Alarm statistics are written to a file and displayed when this item is selected. CDR, and Log, files are assigned names corresponding to the date they were created (i.e. Sep06) and the system maintains a maximum of a months worth of each type of file and deletes the oldest file as necessary. Network Statistics files are assigned names corresponding to the date created and T1 trunk (i.e. Sep06.0 for trunk 1) and are updated every 15 minutes. The system maintains network statistics files using the same method for maintaining CDR and Log files. Dialing list files are named by their creator and the number of these files is limited only by disk space. Operator printouts are named by the system as oper1.prn, oper2.prn, etc.

Alarm Report file contains a snapshot of the alarms currently active on the system.

CDR files contain Call Detail Records for each line that entered the system.

Dialing List files contain system dialing lists created by operators for use in blastup and fastdial.

Log files contain messages from all software processes used by the DCB\60. These include information messages, software errors, T1 alarms, etc. for use in system maintenance and performance evaluation.

Network Statistics files contain counts of various T1 events (i.e. alarms, T1 errors, etc.) If this file contains all zero's no T1 problems have occurred.

Operator Printout files contain all operator printouts that have been redirected to a file.

-54-

The File Management menu window is shown below.

File Management
Delete
Export
Print
View
Hard Disk Statistics
Main Menu

5 After selecting an item, the file options are listed as shown below.

Export File
Alarm Report
CDRs
Dial Lists
Logs
Network Manager
Operator Printouts

Selecting a file option then displays the available files as shown below.

Export File	
Sep04	Sep09
Sep05	Sep10
Sep06	Sep11
Sep07	Sep12
Sep08	Sep13

10

After selecting a file the following is displayed:

Delete:

Yes/No option displayed.

15

Delete File - dlist1
ARE YOU SURE ? (Y/N):

Entering 'N' or 'ESC' aborts the deletion, entering a 'Y' deletes the file.

Export:

20

Drive select menu is displayed.

Drive Select
A:(5.25 in. 1.20 MB)
B:(3.50 in. 1.44 MB)

-55-

After selecting a drive, the screen is cleared and the following is displayed:

"Export file - XXXXX"

"Please insert disk into drive A:"

"Press 'ESC' to abort, any other key to continue."

Print:

Printer select menu is displayed.

Printer Select
Local Printer
System Printer

The file is then printed to the specified printer. Print also gives the administrator the ability to print the configurations, i.e. system, channel, operator, and T1. Configurations is displayed under the "Print File" menu and the configuration files are listed as system.txt (system configuration), channel.txt (channel configuration), operator.txt (operator configurations) and t1.txt (T1 configurations).

View:

The file is displayed and can be scrolled through using the up/down arrow, page-up/page-down, and home keys. Pressing a shift-G moves to the bottom of the file. Pressing 'ESC' exits the file viewing screen.

Hard Disk Statistics:

Displays the total hard disk space, the current hard disk space available in both blocks and bytes, and gives the percentage of disk space available.

4.9.8. Backup/Restore

The Backup/Restore menu gives the administrator the ability to backup and restore system configurations, CDRs, Dial Lists, Logs, and Sign-Ins. The administrator selects an option by using the arrow keys to move between menu items and pressing return. The Backup/Restore menu window is shown below.

Backup/Restore
Backup
Restore
Main Menu

-56-

After selecting an item, the backup/restore options are listed as shown below.

Backup
System Configuration
CDRs
Dial Lists
Logs
Sign-Ins

After selecting an item to backup/restore the drive select menu is displayed as shown below.

5

Drive Select
A:(5.25 in. 1.20 MB)
B:(3.50 in. 1.44 MB)

After selecting a drive the screen is cleared and the following is displayed:

Backup:

10

"n disk(s) is(are) needed to perform the backup."

"Proceed with backup? (Y/N):"

"Backup formats each disk. Proceed? (Y/N):"

"Backup - CDRs"

15

"Please insert disk #n into drive A:"

"Press 'ESC' to abort, any other key to continue."

"Backup of CDRs is complete."

"Press any key"

20

If more than 1 disk is required the screen prompts:

"Please insert disk #n into drive A:"

"Press 'ESC' to abort, any other key to continue."

25

Restore:

"Restore - CDRs"

"Please insert disk #n into drive A:"

"Press 'ESC' to abort, any other key to continue."

30

"Restoration of CDRs is complete."

"Press any key"

-57-

If either of these commands are executed without a floppy disk inserted into the appropriate drive the screen hangs until a disk is inserted. Backup formats each disk with the DOS format command.

5 4.9.9. Sign-In Management

The Sign-In Management menu gives the administrator the ability to create and delete operator, administrator, and maintenance sign-ins. Maintenance sign-ins can only be created/deleted if the administrator process was started via the maintenance process. The administrator selects an option by using the arrow keys to move between menu items and pressing return. The Sign-In Management menu window is shown below.

Sign-In Management
Create Operator Sign-In
Delete Operator Sign-In
Create Administrator Sign-In
Delete Administrator Sign-In
Create Maintenance Sign-In
Delete Maintenance Sign-In
Main Menu

Sign-In Management
Create Operator Sign-In
Delete Operator Sign-In
Create Administrator Sign-In
Delete Administrator Sign-In
Main Menu

After selecting an item the following is displayed.

Create Sign-In
Sign-In Name:
Password :
ESC to Exit

Delete Sign-In
Sign-In Name:
Password :
ESC to Exit

After creating or deleting passwords one of the following messages is displayed.

Sign-In Status
Sign-In Added
Press any key

The sign-in has been successfully added.

Sign-In Status
Sign-In is currently in use
Press any key

The sign-in entered is already in use.

Sign-In Status
Sign-In Deleted
Press any key

The sign-in has been deleted.

-58-

Sign-In Status
Sign-In not found
Press any key

The sign-in to be deleted could not be located.

4.9.10. Operator Display Monitor

5 This menu item clears the screen and starts the operator console process. If the operator console was started from the administrator process then, upon exiting the operator console the administrator process is started.

4.9.11. Exit

This menu item exits the administrator process and starts either the sign-in or maintenance depending upon which process started the administrator.

4.10. Maintenance MMI

10 The Digital System 60 (DCB\60) Maintenance Console allows maintenance personnel to configure and maintain T1 links, perform a system shutdown or re-initialization, access the administrator or operator console processes, and clear network statistics. Upon starting the maintenance process, the screen is cleared and the maintenance main menu is displayed. The
15 entire process is menu driven. The copyright window (shown below) is displayed for each menu selected.

MultiLink Incorporated Digital Conferencing Bridge P/N: Revision A (C)opyright 1992, MultiLink Inc.
--

Pressing the 'ESC' key returns you to either the previous menu or to the Main Menu,
20 depending on what command you are executing. If the terminal loses power or becomes disconnected from the system the maintenance process aborts and the sign-in process is started. Upon reception or issuance of a shutdown command the maintenance process is killed.

4.10.1. Main Menu

25 The Main Menu is displayed upon startup of the maintenance process. It consists of the following items.

T1 Configuration - Configure the T1 trunks.

T1 Status - Display T1 status for all trunks.

T1 Enable/Disable - Enable/Disable T1 trunks.

30 **Clear Network Statistics** - Clear the days Network Statistics file.

Administrator Menu - Start the administrator process.

-59-

Operator Display - Start an operator console process.

Re-Initialization - Re-boot the system while retaining current conferences.

System Shutdown - Shutdown the system.

Exit - Exits administrator screen.

5 T1 terminology used in this section is defined as follows.

B8ZS (Binary 8-Zero Suppression) - Ensures a minimum 1 in 8, ones density by replacing any group of 8 consecutive zeros with a known bipolar violation sequence.

Blue Alarm - All 1's intentionally sent if normal data is unavailable.

CRC - Cyclic Redundancy Check - Determines how many frames have errors.

10 **D3/D4** - 12 bit T1 framing format.

Err. Secs. - Number of seconds that have at least 1 CRC error.

ESF - Extended Super Frame - 24 bit T1 framing format which contains CRC and Err. Secs.

Jammed Bit - The system changes bit 7 to a '1' if 8 bits of a word are zero.

OOF - Out of frame, i.e. no recognizable received signal, red alarm.

15 **RED Alarm** - Occurs when the near end of a T1 line detects loss of frame. A Yellow alarm is sent to the far end of the T1 line upon detection of a Red alarm.

Slip - An unequal number of frames received from 2 T1 lines.

Sync Source - The source of clock which synchronizes the T1 links.

Yellow Alarm - Occurs when the far end of a T1 line detects a loss of frame.

20 **Zero Code Suppression** - Ensures the data output stream never has more than 15 consecutive zeros.

This is a T1 line clock recovery requirement. Either B8ZS or Jammed Bit.

4.10.2. T1 Configuration

25 The T1 configuration is set/modified through this menu item. Moving through the configuration fields is done using the arrow keys. The T1 configuration window is shown below.

T1 Configuration			
Sync. Source: External		Error Thresholds - Out of Frame: 0	
Primary	: Board 1 Trunk A	Slip: 0	Bpv: 0
Secondary	: Board 1 Trunk B	CRC: 0	Err. Secs.: 0
Red Alarm Timers (x 0.1 Sec.) - Detect: 30		Clear: 100	
Yellow Alarm Timers (x 0.1 Sec.) - Detect: 0		Clear: 0	
Board 1 Trunk A - Framing: D3/D4		Zero Code Suppression: B8ZS	
Board 1 Trunk A - Framing: D3/D4		Zero Code Suppression: B8ZS	
Board 1 Trunk A - Framing: D3/D4		Zero Code Suppression: B8ZS	
Board 1 Trunk A - Framing: D3/D4		Zero Code Suppression: B8ZS	

30 The spacebar is used to toggle between options in the Sync. Source, Primary, Secondary, Framing, and Zero Code Suppression fields. The remaining fields, Error Thresholds, Slip, BPV, CRC, Err. Secs., and Detect and Clear timers are modified by entering the appropriate value.

-60-

The T1 Synchronization source can be internal or external and the primary and secondary source can be configured to any of the installed trunks. A public telephone network is the preferred source.

Minor alarms are generated when Out of Frames, Slips, Bpv, CRC, and Err. Secs reach their specified limits. The default limits are 0 which indicates the alarm is never generated. If a minor alarm is generated by one of these conditions it is cleared after a 15 minute interval passes without reaching the specified alarm limit.

Major alarms occur upon indication of a Red or Yellow alarm condition. The Red or yellow alarm condition must occur for a minimum of "Detect" seconds. Detect and clear are entered in tenths of seconds. The alarm is cleared if there is no occurrence for a duration of "Clear" Seconds.

Framing can be set individually on each trunk as can zero code suppression. Setting framing to 'None' disables the T1 trunk. The default T1 configurations and other options include:

Item	Default Value	Options
Sync. Source	External	Internal, External
Primary	Board 1, Trunk A (B1-TA)	B1-TA, B1-TB, B2-TA, B2-TB
Secondary	Board 1, Trunk B (B1-TB)	B1-TA, B1-TB, B2-TA, B2-TB
Framing	D3/D4	D3/D4, ESF, None
Zero Code Suppression	B8ZS	B8ZS, Jammed Bit, None
Error Thresholds	0	0-999
Slip	0	0-999
BPV	0	0-999
CRC	0	0-999 ESF Framing Only
Error Seconds	0	0-999 ESF Framing Only
Red Alarm Timer - Detect	30	0-50 (.1 secs)
Red Alarm Timer - Clear	100	50-200 (.1 secs)
Yellow Alarm Timer - Detect	0	0-20 (.1 secs)
Yellow Alarm Timer - Clear	0	0-20 (.1 secs)

Pressing 'ESC' prompts with "Save Changes (Y/N)?". Entering an 'N' or 'ESC' does not make the changes. Entering a 'Y' makes the changes active and saves the T1 configurations to disk.

20 4.10.3. T1 Status

T1 status is displayed by selecting this menu item. The T1 status screen, shown below, is updated every 2 seconds and is exited by pressing 'ESC'. The status screen size varies depending on the number of T1 trunks installed.

-61-

Board 1 Trunk A Configuration/Status		
Status: Alarms - None		
Framing: D3/D4	Zero Code: B8ZS	Sync: Master External/Prim
ABIn: 00000000 00000000 00000000	ABOut: 00000000 00000000 00000000	
Alarm Counts - Red: 0	Yellow: 0	Blue: 0
Out of Frames: 0	Slips: 0	BPV: 0
CRC: 0	Err Secs: 0	
Board 1 Trunk B Configuration/Status		
Status: Alarms - None		
Framing: D3/D4	Zero Code: B8ZS	Sync: Slave/Sec
ABIn: 00000000 00000000 00000000	ABOut: 00000000 00000000 00000000	
Alarm Counts - Red: 0	Yellow: 0	Blue: 0
Out of Frames: 0	Slips: 0	BPV: 0
CRC: 0	Err Secs: 0	
Board 2 Trunk A Configuration/Status		
Status: Alarms - None		
Framing: D3/D4	Zero Code: B8ZS	Sync: Slave
ABIn: 00000000 00000000 00000000	ABOut: 00000000 00000000 00000000	
Alarm Counts - Red: 0	Yellow: 0	Blue: 0
Out of Frames: 0	Slips: 0	BPV: 0
CRC: 0	Err Secs: 0	
Board 2 Trunk B Configuration/Status		
Status: Alarms - None		
Framing: D3/D4	Zero Code: B8ZS	Sync: Slave
ABIn: 00000000 00000000 00000000	ABOut: 00000000 00000000 00000000	
Alarm Counts - Red: 0	Yellow: 0	Blue: 0
Out of Frames: 0	Slips: 0	BPV: 0
CRC: 0	Err Secs: 0	

Alarm status displays any pending alarm either Red, Yellow, Blue, or None.

Framing, Zero Code, and Sync display the current T1 configuration.

5 The ABIn and ABOut displays which of the 24 channels are seized in and/or seized out.

Alarm counts displays the total number of Red, Yellow, and Blue alarms.

The remaining fields display the number of Out of Frames, Slips, BPVs, CRCs, and Err Secs.

4.10.4. T1 Enable/Disable

10 The T1 Enable/Disable option allows for the disabling or enabling of all installed T1 trunks. The T1 Enable/Disable menu, shown below, displays the current trunk status. The options are configured by using the arrow keys to move between menu items and pressing the spacebar. Pressing 'ESC' prompts with an "ARE YOU SURE? (Y/N):" message and enable or disables T1 trunks as defined if a 'Y' is entered. Entering an 'N' or 'ESC' aborts all changes.

15

T1 Enable/Disable
Board 1 Trunk A: ENABLE
Board 1 Trunk B: ENABLE
Board 2 Trunk A: ENABLE
Board 2 Trunk B: ENABLE

-62-

4.10.5. Clear Network Statistics

The Clear Network Statistics option allows maintenance personnel to clear the days Network Statistics file. The Network statistics file is available for exporting, printing, and viewing through the administrator file management menu.

5 **4.10.6. Administrator Menu**

This menu item clears the screen and starts the administrator process. Upon exiting the administrator console the maintenance process is started.

4.10.7. Operator Display Monitor

10 This menu item clears the screen and starts the operator console process. Upon exiting the operator console the maintenance process is started.

4.10.8. Re-Initialization

This option allows the system to be rebooted while maintaining conferencing. The reboot of the system brings down all software processes and finally shuts Unix down. Conferencing is still active as all DSP cards continue to run. Unix is then rebooted which
15 starts up all DCB\60 processes and the conferencing information is uploaded from the DSP Dual Port Ram to the system for initialization purposes.

System Re-Initialization
ARE YOU SURE? (Y/N):

Upon selecting this item an "ARE YOU SURE? (Y/N):" message is displayed. Entering 'Y' reinitializes the system. Entering a 'N' or 'ESC' aborts the re-initialization.

20 **4.10.9. System Shutdown**

Upon selecting this item an "ARE YOU SURE? (Y/N):" message is displayed. If conferences are active on the system this information is also displayed. Entering 'Y' executes a system shutdown. Entering a 'N' or 'ESC' aborts the shutdown.

System Shutdown
Conferences are Active
ARE YOU SURE? (Y/N):

System Shutdown
ARE YOU SURE? (Y/N):

25 **4.10.10. Exit**

This menu item exits the administrator process and starts either the sign-in or maintenance depending upon which process started the administrator.

4.11. User Program Interfaces

There is no user programming on the system.

-63-

5. Service and Maintainability Specifications**5.1 MTBF**

20,000 to 50,000 hours for 96 to 24 port system.

5.2 MTTR

5 15 minutes

5.3 Diagnostics

A full suite of power-up, off-line and on-line diagnostics are provided for the use of customers and customer service.

5.3.1 Power-up diagnostics

10 Power-up test and diagnostics include:

Full memory tests of DSP cards including dual port, quad port, and static RAM.

DSP Load Code

DSP interrupt

15 DSP semaphore

DSP card connectivity

Reference memory

Analog card xmit & rcv.

MVIP interface

20 For details of these tests refer to Power-up Tests and Diagnostics Specification.
Document #.

5.3.2 Off-line diagnostics

Off-Line system testing includes:

CPU

25 Interrupt Controller

DMA Controller

Interval Timer

CMOS Clock

System memory including base, extended and expanded RAM.

30 Floppy Drive

Serial Port

Parallel Port

Printer

Speaker

-64-

For details of these tests refer to Power-up Tests and Diagnostics Specification.
Document #.

5.3.3 On-line diagnostics

5 The system continually checks all software processes to ensure their sanity. If an
error is detected a message. is logged and an alarm is initiated.

5.4 Remote Access

A built-in modem allows remote dial-in at speeds up to 9600 bps. The maintenance
features available remotely include:

10 Remote operator
Remote administrator
Remote maintenance:
Remote reboot
File transfer and software update
Remote dump analysis
15 Viewing of network management statistics and logs

5.5 Software maintenance

Customer service software maintenance tools which may be run locally or remotely
include:

20 Dump analysis
Network management- T1 network interface monitoring
Resources monitoring- E.G.: memory, buffers, disk, processes, etc.
Program Debug and memory inspect and change
File transfer and software update

5.6 Field Replaceable Units

25 The field replaceable units include each circuit board and the power supply as well as
each external assembly.

30 Power supply
Backplane
CPU board
System enclosure
T1 Interface PCB
DSP PCB
Diskette drive
35 Hard disk drive
Analog board

-65-

Serial port board
Terminals
Internal modem board

- 5 Note that the DCB is intended to be small and easily maintained by technicians familiar with PCs. It is easy to replace a board by opening the case or an entire box. No boards may be replaced with the power on.

6. Performance Specifications

- Speed of Blast Up, 96 channels, less than 30 seconds.
10 DTMF Digit processing - 96 simultaneous DTMF inputs, no missed digits.
Ring Detection - Detect Ringing and answer line within the first 2 rings.

7 Compatibility Specifications

7.1 Existing MultiLink Products

- The DCB is compatible in function, user operation and operator operation with the
15 System 60. The Conferee and Moderator touch-tone controls and audible responses are identical with the System 60. The Operator displays, while necessarily different to address the additional capacity of the DCB are functionally very similar. Only the "Config" menus of the System 60 are appreciably different. An operator trained on the System 60 should be able to use the DCB to run conferences with a minimum of training time.

- 20 The DCB may be linked to existing MultiLink bridges with 4 wire Link Lines or through the direct T1 connection to the DCB (Can the Channel Bank be set up to connect to the Linx Link line???).

7.2 Customer Equipment

- The customer may use any IBM compatible PC with a modem and off-the-shelf or
25 MultiLink supplied terminal emulation software to access the DCB.

The DCB may be connected behind the customer's switch or PBX using T1 or 4 wire connections as long as this equipment provides the proper wink disconnect signaling. (which specific products should we specify?? What further specs should we specify for the interface??)

7.3 Standard Equipment

The DCB conforms to a variety of standards for Telecomm, Datacomm and PC/AT.

Telecomm- T1

DSX-1 interface to local equipment or internal CSU

Accunet T1.5 compatible (TR62411) with ESF (TR54016) support

- 35 Datacomm- Modem V.32?

PC/AT- IEEE 896

8 Agency Approvals

Safety- UL/CSA approvals are provided for rack mountable units. Designed to meet TUV/VDE.

- 5 EMI- FCC Part 15 class A for rack mountable units.

Telecomm-

T1 connection- (AT&T?), DOC?, JATE?

FCC part 68- (only for analog voice connections. Excludes 4 wire E&M as these are all local to customer and MultiLink equipment.)

- 10 Canadian DOC- (only for analog voice connections. Excludes 4 wire E&M as these are all local to customer and MultiLink equipment.)

JATE- (only for analog voice connections. Excludes 4 wire E&M as these are all local to customer and MultiLink equipment.)

9 Deliverable Configurations

- 15 (In this section the specific models and options to be sold should be detailed much like a sales order)

10 Customer Documentation

10.1 Site Prep Guide

10.2 Installation Manual

- 20 10.3 Operation/Maintenance Manual

11 Future Product Migration Specifications**11.1. Networked Operator Attended Conferencing System**

The LAN/operator attended software option allows:

Operator terminals can be PCs on a LAN with terminal emulation software.

- 25 Up to 5(?) simultaneous remote operators can have sessions to the bridge in addition to the local operator.

The local operator station can access as many as 8(?) remote bridges at one time

High resolution displays with X Windows or Windows 3.0 allow multiple operator screens to be displayed simultaneously.

- 30 In the future the customer may access the bridge with his own workstation using MultiLink supplied software.

11.2. Reservation and Database System

A relational database can be added to support the advanced reservation of bridge resources for conferences. Conference, user, client and billing databases can be provided.

-67-

The reservation system can support attended operator usage and later unattended client reservations and inquiries. The client may make a reservation using his DTMF handset and the Interactive Voice Response (IVR) capability of the DCB or by dialing in with an ASCII terminal.

5 **11.3.3 Personal Teleconferencing**

4 The Digital Conferencing Bridge can be enhanced to incorporate the functions of a data bridge. The data bridge functionality allows personal computers at multiple conferee's desks to be bridged into a combined voice/data conference. This functionality requires the bridge to support a large number of data connections. The data connections may be from
10 users modems that enter the bridge as analog or T1 connections or from data networks such as LANs or X.25.

11.4. Additional Future Product Extensions

 The DCB is designed with an integrated digital voice and processor architecture that allows a wide variety of future products and options to be added to the base product. The following
15 are additional capabilities that might be needed:

 Fax- Notification of a conference via automatic sending of fax. Storage of fax to be used in personal teleconferences. Faxmail.

 Email/media mail-- storage of Email(including files, images and faxes) on the bridge. Email X.400 gateway to corporate or public Email systems.

20 Voice mail- to support the conferencing

 ISDN

 CEPT (2mbps, 30 channel) capability

-68-

1.0 Introduction

Digital signal processing involves the conversion of signals to sequences of numbers and the subsequent processing of these sequences. The principle governing conversion of continuous-time signals to discrete-time signals is expressed in the Sampling Theorem.

5

Sampling Theorem: A continuous-time signal can be completely recovered from its samples if, and only if, the sampling rate is greater than twice the signal bandwidth.

For telephone voice data this rate is 8000 samples/sec. The discrete-time signal can be operated upon by a software process, which is faithful to the invertibility, causality, stability, time invariance and linearity properties of the corresponding continuous-time system. Digital signal processing specific microprocessor architectures and instruction sets have made real-time execution of software algorithms possible. Now processing, which was previously accomplished in hardware, can be done in software. The Digital Conferencing Bridge will be realized using digital signal processing hardware and algorithms.

10

2.0 DSP Hardware Overview

The Digital Conferencing Bridge will consist of up to four DSP boards, connected by an MVIP bus. Each DSP board contains four Texas Instruments TMS320C31 digital signal processors. The TMS320C31 is a high performance CMOS 32-bit floating-point device. The processors are employed in the Microcomputer/Boot Loader Mode. In this mode a bootloader is mapped into locations 0000h through 0FFFh. Each processor communicates with the PC Host via a 4kx16 dual port ram, featuring arbitration control, 8 semaphore registers and interrupt generating mail-box registers. At the MVIP interface two DSP processors each share 2kx8 quad port rams. Passage of data between the quad port rams and the MVIP bus is facilitated by serial to parallel and parallel to serial conversion PLDs. The output serial line destination of quad port ram buffered data is controlled by time slot specific bytes, written by the host to the 1kx8 dual port control ram.

20

25

3.0 TMS320C31 Memory Map

Note: This memory map must also be incorporated into the linker command file. The Linker defines module addresses using the memory map as a reference.

30

35

40

45

50

0000000H - 0000FFFH	reserved for Boot Loader (see TMS320C3X User's Guide section 3.4)
0808000H - 08097FFFH	Peripheral Bus Memory-Mapped Registers (6K internal)
0809800H - 0809BFFFH	Ram Block 0 (1K internal)
0809C00H - 0809FC0H	Ram Block 1 (1K internal)
0809FC1H - 0809FFFFH	Interrupt and Trap Branches (64 internal)
0A00000H - 0A007FFFH	Quad Port Ram (2kx8) external MVIP input and output Buffers

-69-

0B00000H - 0BFFFFFFH Semaphore Registers

5 0EC0000H - 0ECFFFFH Code Ram
(SIMM, 64kx32)

0FC0000H - 0FC0FFFFH Dual Port Ram
(4kx16 external)

10 Host-Dsp Communication
Interrupt Generating Mail Boxes
Boot 3 - Loader Input File Area
MVIP Bus Reference Memory Window

4.0 Dual Port Memory Data Structures

15 The TMS320C31 Processors communicate with the host via data structures defined within the dual port memory. The intent is to define structures which enable the logical association of an MVIP time slot with an information port managed primarily by the Host. The association of a time slot and a port defines a channel. Secondly, lists and queues are maintained as means of communicating global information.

4.1 Data Transfer Buffers

20 Two buffers are provided for record and playback of voice data. The buffers are each 2 Kbytes and are located at DPM addresses Seg.:0 and Seg.:800. A semaphore is allocated to each of the buffers for access control.

4.2 Channel Data Structure Array

25 An array of eight Channel Data Structures is located at DPM address Seg.:0x1000. The structure is composed of the following items.

Dual Port Memory Port (0 - 191)(node < 3 + sequence number)(initialized to assigned port)

30	Command	(initialized to 0)
	Error	(initialized to 0)
	Conference	(initialized to 0)
	Mute (0 - 1)	(initialized to 0)
	AGC (0 - 1)	(initialized to 0)
	Music (0 - 1)	(initialized to 0)
35	Talk (0 - 1)	(initialized to 0)
	Time Slot Type	(initialized to 0)
	Event Queue Head Pointer	(initialized to 0)
	Event Queue Tail Pointer	(initialized to 0)
	Event Queue, 10 words	(initialized to 0)
40	Digits-Out, ascii string 50 bytes maximum	(initialized to null string)

4.3 Channel MVIP Time Slot List

45 The Channel Time Slot List contains one word entries, indicating the time slot numbers of channels. The list consists of 192 entries sorted by port number ((6 boards) x (8 channels/node) x (4 nodes/board)). Each entry consists of two parts; byte 0 = location within serial receive line, byte 1 = serial line. The list immediately follows the Channel Data Structures. During initialization the entire list is converted to quad port ram buffer indices and stored with other tables in the external coderam. The transmit buffer indices are equal to byte 0 of the dual port memory time slot entries.

-70-

4.4 Conference Number of Talkers List

91 (48 user + 8 operator + 8 annunciator + 1 enter + 1 input conferences) one word entries sorted by conference numbers. Each entry indicates the maximum number of simultaneous talkers allowed for each conference. Located immediately following the Channel MVIP

5 Time Slot List.

4.5 System Parameters

The 50 word System Parameters List is preceded by an unoccupied memory location which immediately follows the Conference Number of Talkers List. System parameters are constants which control certain aspects of the digital conferencing bridge, but which may be modified during execution. During initialization the parameters are read into the internal memory of each TMS320C31. Necessary conversions are done at that time. An item can be changed following system initialization. Entry 0 is a pointer to an item in the list which has been changed. Entry 0 is checked once every sample period. A value of zero implies no change to the list.

15	Item Pointer	pointer to changed item
	Node Number	node number
	Active Node Mask [part 0]	one bit per node (1=active, 0=inactive)
	Active Node Mask [part 1]	one bit per node (1=active, 0=inactive)
20		The mask determines nodal participation
	DTMF On Time	100 ms
	DTMF Off-Time	50 ms
	DIAL Tone-Wait	5 sec unused
	DTMF Level	-7 dBm
25	Forward Twist (receive)	8 dB unused
	Reverse Twist (receive)	8 dB unused
	Talk Detect Level	-35 dBm
	Maximum Talkers per Conference	8 unused
	Gain (pointer to multiplier in table)	00001000
30	Speech Level Out	-16 dBm unused
	Channels per DSP Node	6 channels/node

4.6 Channel Conference Queue and Pointers

Two pointers and a Channel Conference Queue immediately follow the system parameters. Muting and Movement of channels between conferences are controlled via this structure.

35 An entry consists of the port number concatenated with the new conference number; byte 0 = conference, byte 1 = port number. The host increments the head pointer when adding an item to the queue. The DSP increments the tail pointer when removing an item from the queue. The queue is empty when the pointers are equal. As items are removed from the queue, a table of conference numbers sorted in port number order is built internally. The table consists of 192 entries ((6 boards) x (8 channels/node) x (4 nodes/board)). Placing an item in this queue automatically causes the port number to be purged from the current conference talk list. This is why the queue also plays a role in the muting of channels. If a channel is muted it must be removed from the talk list. Prior to changing a channel's conference number the host should mute the channel, preventing transmission of a talk bit.

45 The Channel Conference Queue of the node on which the channel resides should be the last updated with the new conference number.

5.0 Internal Data Structures

-71-

5.1 Port Information Data Record

An information data record is maintained internally for each of the ports a node is responsible for. The data and history relevant to the port is maintained here and varies by sample period.

5

position	name	type	description
0	INFO_x	float	x[n]; current input sample
1	INFO_avm	float	average magnitude of observed voice samples
10 2	INFO_confavm	float	average magnitude of conference voice samples
3	INFO_confid	integer	conference number channel is assigned to
4	INFO_queue	integer	address of talk list corresponding to conference
5	INFO_type	integer	channel type; conferee, operator, annunciator,...etc
6	INFO_rcv	integer	input quad port ram buffer index (timeslot)
15 7	INFO_xmt	integer	output quad port ram buffer index
8	INFO_talker	integer	talklist resident indicator
9	INFO_mode	integer	tone or silence indication
10	INFO_time	integer	tone or slent period duration
11	INFO_switch	integer	tone initialization indicator
20 12	INFO_count	integer	digit buffer index
13	INFO_xtd1	float	double tone state variable; x[n-1]
14	INFO_xtd2	float	double tone state variable; x[n-2]
15	INFO_ytd1	float	double tone state variable; y[n-1]
16	INFO_ytd2	float	double tone state variable; y[n-2]
25 17	INFO_clo	float	coefficient of low member of tone pair
18	INFO_chi	float	coefficient of high member of tone pair
19	INFO_y1d1	float	dtmf filter #1 state variable; y[n-1]
20	INFO_y1d2	float	dtmf filter #1 state variable; y[n-2]
21	INFO_avmy1	float	dtmf filter #1 - output average magnitude
30 22	INFO_y2d1	float	dtmf filter #2 state variable; y[n-1]
23	INFO_y2d2	float	dtmf filter #2 state variable; y[n-2]
24	INFO_avmy2	float	dtmf filter #2 - output average magnitude
25	INFO_y3d1	float	dtmf filter #3 state variable; y[n-1]
26	INFO_y3d2	float	dtmf filter #3 state variable; y[n-2]
35 27	INFO_avmy3	float	dtmf filter #3 - output average magnitude
28	INFO_y4d1	float	dtmf filter #4 state variable; y[n-1]
29	INFO_y4d2	float	dtmf filter #4 state variable; y[n-2]
30	INFO_avmy4	float	dtmf filter #4 - output average magnitude
31	INFO_y5d1	float	dtmf filter #5 state variable; y[n-1]
40 32	INFO_y5d2	float	dtmf filter #5 state variable; y[n-2]
33	INFO_avmy5	float	dtmf filter #5 - output average magnitude
34	INFO_y6d1	float	dtmf filter #6 state variable; y[n-1]
35	INFO_y6d2	float	dtmf filter #6 state variable; y[n-2]
36	INFO_avmy6	float	dtmf filter #6 - output average magnitude
45 37	INFO_y7d1	float	dtmf filter #7 state variable; y[n-1]
38	INFO_y7d2	float	dtmf filter #7 state variable; y[n-2]
39	INFO_avmy7	float	dtmf filter #7 - output average magnitude
40	INFO_avmyt	float	0.5 * (avmylo + avmyhi)
41	INFO_peak	float	greatest magnitude of 256 samples
50 42	INFO_sum	float	sum of 256 sample magnitudes
43	INFO_intcnt	integer	inter digit count
44	INFO_pfcnt	integer	sample count; 0 - 256
45	INFO_rowcol	integer	dtmf digit row and column
46	INFO_talkdet	integer	talk detect indication

5.2 Channel Conference List

As entries are removed from the channel conference queue a list is maintained internally. The list is in port number order and contains the conference number a port is assigned to.

5.3 Talk Lists

- 5 Each conference has a Talk List assigned to it. The Talk List is a three member FIFO queue. As participants satisfy the talk list criteria they move onto the talklist until pushed off by future conference activity. If a port is moved to a new conference or muted, it is purged from the current talk list.

5.4 Talk Bit Translation Table

- 10 During each sample period a DSP node can transmit one byte to communicate new talk list candidates. The bit positions correspond to the sequential order of the ports serviced by the node. A non-zero bit indicates that the corresponding port is a candidate. The translation table members are 32 bit words. The table members are accessed using the talk bits as an index. A string of four bit numbers is recorded within each translation word to denote the
- 15 specific bits set in the index. Each number equals bit position plus one. The four bit numbers within the translation word are processed right to left. As numbers are processed the 8 nibble string is shifted right 4 bits to place the next nibble at the extreme right. A zero value in this location indicates end of string. The port numbers written to the talk lists are formed from these numbers; Port Number = (Node << 3) + (N-1).

20

Talkbits (byte) Translation (word)

25

00000000 => |0|0|0|0|0|0|0|0|

00000001 => |0|0|0|0|0|0|0|1|

00000010 => |0|0|0|0|0|0|0|2|

00000011 => |0|0|0|0|0|0|0|1|

00000100 => |0|0|0|0|0|0|0|3|

00000101 => |0|0|0|0|0|0|0|1|

00000110 => |0|0|0|0|0|0|0|2|

30

00000111 => |0|0|0|0|0|0|0|1|

00001000 => |0|0|0|0|0|0|0|4|

..... =>

..... =>

..... =>

35

11111100 => |0|0|8|7|6|5|4|3|

11111101 => |0|8|7|6|5|4|3|1|

11111110 => |0|8|7|6|5|4|3|2|

11111111 => |8|7|6|5|4|3|2|1|

6.0 Data and Interrupts**6.1 Data Input**

- 40 Input data is transmitted from the T1 interface via the input MVIP bus at 64 Kbits (8000 samples/sec). The serial to parallel converter deposits the input samples in the quad port ram. Prior initialization (by the host) of the Receive Control Register (value = 01H) positions four 256 byte buffers at address 0000H. One quad port ram contains buffers for
- 45 nodes A and B, while the other contains buffers for nodes C and D. The buffer pairs alternate within a quad port ram. The buffers automatically switch as interrupts occur. The external pin XF1 has been configured to indicate the buffer being filled. As XF1 toggles its current state is mirrored by bit #7 of the IOF Register. The IOF register is

-73-

queried following the MVIP interrupt ; TSTB 128,IOF. The result of this test causes the correct address to be loaded into the buffer pointer.

6.2 Data Output

Prior initialization (by the host) of the Transmit Control Register (value = 85H) positions four 32 byte buffers at address 0400H in the quad port ram. One quad port ram contains buffers for nodes A and B, while the other contains buffers for nodes C and D. The buffer pairs alternate within a quad port ram. The parallel to serial converter transfers the data from these buffers to the output MVIP bus at 64 Kbits (8000 samples/sec). The buffers automatically switch as interrupts occur. The external pin XF0 has been configured to indicate the buffer being transferred. As XF0 toggles its current state is mirrored by bit #3 of the IOF Register. The IOF register is queried following the MVIP interrupt; TSTB 8,IOF. The result of this test causes the correct address to be loaded into the buffer pointer.

6.3 Mulaw to Linear Conversion

The data entering the conference system is in eight bit u255 format (mulaw - psssqqqq). The polarity bit (p) determines the sign of the number. sss is the segment number of the piecewise linear logarithmic approximation curve. qqqq represents the quantization number within a segment. Conversion of mulaw data (psssqqqq) to floating-point linear is accomplished by table look up. The mulaw codeword is used as the table index.

6.4 Linear to Mulaw Conversion

The conversion has been implemented by indexing into an 8K table, based upon the following sequence of steps. The number is converted to an integer. The mulaw polarity bit (p) is set to 0 or 1, indicative of either a positive or negative number. The number is replaced by its absolute value. The bias factor 33 is added to the absolute value. If the value is greater than or equal to 8192, sss=7 and qqqq=F. Otherwise the bit position of the highest non-zero bit is determined. The segment number (sss) equals the bit position minus 5. The quantization bin number (qqqq) is equal to the four bits immediately following the high non-zero bit. Form the mulaw code word psssqqqq from the individual parts. Complement the code word prior to transmission.

6.5 Interrupt Service Vectors

Unlike the microprocessor mode, the microcomputer/boot loader mode uses a dual-vectoring scheme to service interrupt and trap requests. In a dual-vectoring scheme, branch instructions to an address, rather than direct interrupt vectoring are used. The TMS320C31's last 63 locations of RAM Block 1 (address 00809FC1H) are assumed to contain interrupt and trap branch instructions. The following code segment is written to that location prior to bootloader operations.

```

40  _INT0 BR mvip      ; MVIP data ready in quad port ram
    _INT1BRmailbox    ; Host/Dsp mailbox
    _INT2BR0000H      ; Boot Loader
    _INT3BRerrant     ; inactive interrupt

    _XINT0BRerrant    ; inactive interrupt
    _RINT0BRerrant    ; inactive interrupt
    .space 2
45  _TINT0BRerrant     ; inactive interrupt
    _TINT1BRerrant    ; inactive interrupt
    _DINT0BRerrant    ; inactive interrupt
    .space 20
    _TRAP0 BRerrant   ; inactive interrupt

```

.....

_TRAP27 BRerrant ; inactive interrupt

5 6.6 MVIP Data Ready Interrupt Service Routine

"mvip" is the MVIP frame interrupt service routine. In order to avoid context save, no work is actually done in the interrupt service routine. At the beginning of the processing loop, the program waits as long as register BK=0. The interrupt service routine sets register BK to 1 as a signal for program continuation. At program continuation BK is set to 0. The
 10 mulaw data is processed directly from the input buffer.

6.7 Node Mailbox Interrupt Service Routine

"mailbox" is the Node Command Processing interrupt service routine. The interrupt service routine reads the Host/DSP mailbox at dual port memory location FC0FFFH. The word in the mailbox indicates the action to be taken.

15 7.0 Node Command Processing

Some command processing is necessary at the Node level. At present I see this being used primarily to allow orderly progress through the initialization phase. During system initialization, a Node waits in a loop for mailbox commands from the Host. The commands are input via the Host/Dsp mailbox in the dual port memory at location FFE (1FFC in byte
 20 offset from the PC side). When the host writes a command to the mailbox, the DSP is interrupted. The DSP clears the interrupt by reading the mailbox and branches to the procedure which handles the command.

Commands	Actions
25 0000H	No command
0001H	Enter Node Command Mode (future use)
0002H	Invoke Boot Loader
0003H	Synchronize with other processors and enter Channel Command Mode

7.1 Invoke Boot Loader

30 The Host initially invokes the Boot Loader by resetting the processor. In this implementation the input file is expected to be input via the dual port memory. The dual port memory is of limited size (4Kx16). The Boot Loader will have to be re-entered as many times as required to transfer the entire input file. The first section of code to be loaded will consist of the command interpreter for Node Level Command processing, the interrupt
 35 service branches and a waiting loop. The Boot Loader entry point is read from address 0000H and written to the INT3 interrupt branch field at location 0809FC3H. Interrupts INT2 and INT3 are enabled. If the next command is *Invoke Boot Loader* (0002H), the DSP sets bit #3 in the CPU Interrupt Flag Register. This generates an interrupt, which causes a branch to the entry point at which the Boot Loader normally polls the IF. Subsequently, a
 40 branch is made to the Boot Loader section responsible for transfers from the dual port memory. Upon completion of each block transfer, control again returns to the waiting loop.

7.2 TMS320C31 Processor Synchronization

Each processor branches to a waiting loop following boot loader operations on its node. The Host issues the command *Synchronize* (0002H) by writing to the mailboxes. Each
 45 DSP branches to the mailbox interrupt service routine and retrieves the command. In response The DSPs branch to a synchronize procedure and enable interrupts. Each processor sets and transmits bit #0 in its Talk Bits Byte. Following the next interrupt, each

-75-

processor retrieves all the transmitted bits and arranges them in register bit positions corresponding to the sender's node number. The goal is to form a pattern, which mirrors the active node mask. All processors will repeat the process until the goal can be attained globally.

5 **8.0 Channel Command Processing**

The host communicates a command to a channel by writing a non-zero value to the Channel Command field. The DSP decodes the command, executes a specific software routine and sets the channel command field to 0000H indicating completion. The host writes a command to a channel only when the Channel Command field equals 0000H. If a command
10 processing error occurs, the DSP writes FFFFH to the Channel Command field and a numerical value to the Channel Error field. In this case the Host must take some corrective action.

8.1 Record Voice Data

Record allows an annunciator channel to transfer mulaw data, entering via the quad port ram,
15 to a disk file. The processor receives the command *Start Record* (0003H) on an annunciator channel. The Dual Port Memory resident buffers are filled alternately starting with #0. Prior to filling a buffer the DSP must first acquire its semaphore and subsequently set it active low. Completion of a fill operation requires the DSP to reset the semaphore, write the corresponding Data Buffer Ready value to the Channel Event Queue, and write
20 0xFFFF to the host mailbox at address FC0FFFH, generating an interrupt. If the channel is not an annunciator, the host has committed an error. FFFFH is written to the Channel Command field. The error indicator value 0001H is written to the Channel Error field. The host terminates Record by issuing the command *Stop Record* (0004H).

8.2 Play Voice Data

25 Play allows an annunciator channel to transfer mulaw data from disk to the output MVIP bus via the quad port ram. The processor receives the command *Start Play* (0001H) on an annunciator channel. The Dual Port Memory resident buffers are filled alternately starting with #0. Prior to emptying a buffer the DSP must first acquire its semaphore and subsequently set it active low. Completion of a empty operation requires the DSP to reset
30 the semaphore, write the corresponding Data Buffer Ready value to the Channel Event Queue, and write 0xFFFF to the host mailbox at address FC0FFFH, generating an interrupt. If the channel is not an annunciator, the host has committed an error. FFFFH is written to the Channel Command field. The error indicator value 0002H is written to the Channel Error field. The host terminates Play issuing the command *Stop Play* (0002H)

35 **8.3 Tone Generation**

Tone Generation is accomplished in software by recursive production of the unit sample response of a second order harmonic oscillator.

$$40 \quad y[n] - (2.0 * R * \cos(a)) * y[n-1] + (R * R) * y[n-2] = x[n]$$

$$a = (2.0 * p * f) / F$$

$$f = \text{tone frequency, } F = 8000.0 \text{ samples/sec, } p = 3.1415927, R = 1.0$$

45 The behavior of the oscillator is determined by the coefficients of the y terms. The frequency of oscillation depends upon alpha, while damping is controlled by R. R is the

-76-

distance of the pole from the unit circle in the complex Z-plane. For an oscillator R equals 1.0, placing a pole directly on the unit circle at the frequency of interest. Production of samples commences two sample periods beyond $t = 0$

$$5 \quad t = 2, \quad x[n] = 0, \quad y[n-1] = 2.0 * R * \cos(a), \quad y[n-2] = 1.0$$

The samples produced lie between -1.0 and +1.0. Multiplication by a scaling factor adjusts the samples to the proper power level. Scaling factors are provided to the DSP as Decibel values. Conversion to a linear scaling factor is accomplished prior to use. The scaled samples are converted to mulaw, complemented and written to the channel's quad port ram buffer. One new output datum is produced each sample period.

8.3.1 DTMF Acknowledge Tone

The Host issues the command *Generate DTMF Acknowledge Tone* (0007H) to a channel in response to reception of a valid DTMF tone. Sequence: {[single tone - 1477 hz, 200 msec], [single tone - 1447 hz, 200msec]}.

8.3.2 Conference Entry Tone

The Host issues the command *Generate Conference Entry Tone* (0008H) to all conference channels in response to entry of a new conference participant. Sequence: {[single tone - 1209 hz, 200 msec]}.

8.3.3 Conference Exit Tone

The Host issues the command *Generate Conference Exit Tone* (0009H) to all conference channels in response to the departure of a conference participant. Sequence: {[single tone - 1633 hz, 200 msec]}.

8.3.4 Security-On Tone

The Host issues the command *Generate Security-On Tone* (000AH) to all conference channels when the moderator toggles conference security on (DTMF 7). Sequence: {[single tone - 1209 hz, 200 msec], [single tone - 1336 hz, 200 msec]}.

8.3.5 Security-Off Tone

The Host issues the command *Generate Security-Off Tone* (000BH) to all conference channels when the moderator toggles conference security off (DTMF 7). Sequence: {[single tone - 1209 hz, 200 msec], [single tone - 1336 hz, 200 msec], [single tone - 1209 hz, 200 msec]}.

8.3.6 Dial a Telephone Number - DTMF Generation

DTMF generation is accomplished by summing the scaled output samples of two second order harmonic oscillators, implemented as described previously. The oscillator frequencies are taken one each from the row and column frequencies; row: 697, 770, 852, 941 column: 1209, 1336, 1477, 1633. The DTMF on and off times are specified as system parameters. A number to be dialed is placed by the Host in the Channel Digits-out field (ASCII). The Host issues the command *Dial a Telephone Number* (0005H) to a channel. The double tones corresponding to the ascii digits are generated one at a time separated by pauses. One output datum is generated each sample period.

-77-

8.4 Acknowledge

When the host wishes to determine if a DSP node is functioning, the command *Acknowledge* (0006H) is issued to a channel serviced by that DSP. If it can, the DSP responds by clearing the command field.

9.0 Talk

During a conference the speaking privilege is rationed among the active channels.

9.1 Talk Detection

The articulated speech signal exhibits non-stationary characteristics, which are the basis for distinguishing it from noise. A simplified model of the speech signal equates it to the product of two random processes: an "envelope" and a "carrier". The carrier has a spectrum lying between 300 and 3400 Hz, while the bandwidth of the much narrower envelope is 0 to 50 Hz. A channel's activity level is tracked continuously using a single pole integrator. The cut-off frequency of the integrator should completely eliminate the fine structure due to the carrier, but pass the rough structure due to the envelope undisturbed. Input to the integrator is the magnitude of the current codec sample on that channel. The output is considered the average magnitude of the input signal. This calculation is also done for the composite conference output to yield a conference average magnitude.

$$mk[n] = (1.0 - a) * mk[n-1] + a * ABS(x[n])$$

$$a = 0.01 = \text{"filter time constant"}$$

$$((1.0 - a) / a) = 99 = \text{number of samples integrated over}$$

A channel has to be on a Conference Talk List in order for its voice data to be broadcast. Two conditions must be satisfied for admission to the talk list. A channel is considered talking when its integrator output is greater than the talk level threshold (-35 dBm).

$$(1) \quad mk[n] > \text{TalkLevel} \Rightarrow \text{"talking"}$$

An above threshold channel is considered a candidate for the conference talk list, if its average magnitude is greater than one third the average magnitude of the conference.

$$(2) \quad mk[n] > (m1[n] + m2[n] + m3[n]) / 3 \Rightarrow \text{"talk list candidate"}$$

9.2 Talk Lists

Each processor has 8 bits reserved for MVIP bus broadcast of talk list candidacy. One bit is reserved in sequential order for each of the channels a processor is responsible for. If a channel satisfies both of the stated criteria its talk bit is set. Each processor writes its talk byte to the quad port ram for broadcast over the MVIP bus. The talk bytes are made available to all processors next sampling period. One talk byte is processed per sample period in round robin sequential order. Each node also transmits a sequential count variable which corresponds to the node numbers. The count variable specifies which node's talk bits are to be processed this sample period. Only the lowest active node's count variable is heeded. Synchronization is thus maintained by the lowest active node. The processor accesses the Channel Conference List to determine what conference the candidate belongs to. The talk byte acts as the index into the talk bits translation table. The corresponding talk list

-78-

is updated with port numbers formed by the concatenation of the count variable (node number) with sequence numbers removed from the translation table. The new candidates are added at the top of the list as current members are pushed down and eventually off. If a processor adds or removes one of its channels from the list, it must update the relevant items in its internal information data structure. A muted or current talk list channel is never eligible for Talk List consideration. When a talk list member talks or becomes quiet, the DSP informs the HOST. The DSP sets the Chan_talk field to either 1 (talking) or 0 (silent).

9.3 Broadcast

Each DSP node uses its channel conference assignments and the Conference Talk Lists to determine which quad port ram input samples are to be summed, scaled, and to whom broadcast. If a channel is on a Talk List his speech sample is not included in the sum broadcast to him. A channel, whose music indicator is set, receives music instead of voice data.

10.0 Music

Music can be supplied to any conference participant. If the Channel Data Structure's Music (CHAN_music) indicator equals "1", data samples from the music input time slot are routed to the channels time slot over the output MVIP bus.

11.0 Record/Playback

A channel is a Record/Playback Channel if its corresponding MVIP time slot is a record/playback time slot. The Time Slot Type field of the Channel Data Structure should equal 0005H. Though inanimate a Record or Playback Channel is treated virtually the same as a regular conference participant. The mode of operation is dependent upon the mute status. If unmuted the channel can gain access to the talk list and broadcast to conference participants. Otherwise the channel will act as a passive conference participant and listen (record). A Record/Playback Channel is placed in a conference by placing an entry in the dual port memory Conference Queue.

12.0 Link Line

A channel is a Link Line Channel if its corresponding MVIP time slot is a link line time slot. The Time Slot Type field of the Channel Data Structure should equal 0006H. A Link Line joins two DCBs and is capable of transmit and receive of voice data. A Link Line Channel is treated the same as a regular conference participant.

13.0 DTMF Detection

Dual Tone Multi-Frequency (DTMF) is the generic name for push button telephone signaling. DTMF signaling allows channels another means of communicating with the DCB. Valid DTMF digits include; "0" = Help Request, "1" = Add to Q&A queue, "#" = remove from Q&A queue, {"1" - "9"} = Polling responses. DTMF detection is performed on conferee channels constantly. A DTMF signal results from the addition of two sinusoids at different frequencies. The frequencies are selected from row and column frequency groups, having four members each. The row frequencies are 697, 770, 852 and 941 hertz. The column frequencies are 1209, 1336, 1477 and 1633 hertz. Decoding a DTMF tone requires separation and identification of the members forming the tone pair. The input samples are input to a parallel bank of eight infinite impulse response digital resonators, centered at the previously listed frequencies.

-79-

$$y_k[n] = (a_1 * x[n]) + (a_2 * x[n-1]) + (b_1 * y_k[n-1]) + (b_2 * y_k[n-2])$$

$$\text{bandwidth} = (0.03 * f) + 4.0$$

5	filter coefficients				
	frequency	a1	a2	b1	b2
10	697	0.0782560	-0.0668920	1.6912040	-0.9806259
	770	0.0851360	-0.0701440	1.6279699	-0.9789406
	852	0.0928640	-0.0729880	1.5507061	-0.9770511
	941	0.1012520	-0.0750560	1.4596493	-0.9750043
	1209	0.1265120	-0.0741800	1.1460505	-0.9688669
	1336	0.1384800	-0.0697680	0.9795147	-0.9659721
	1447	0.1517720	-0.0617200	0.7838895	-0.9627682
15	1633	0.1664720	-0.0489120	0.5571413	-0.9592359

Each resonator has associated with it a single pole integrator for measurement of its output.

$$m_k[n] = (1.0 - a) * m_k[n-1] + a * \text{ABS}(y[n])$$

$$a = 0.0119934$$

For a single tone the magnitude of the integrator output approaches the rms value of the signal. A DTMF digit is indicated when a row frequency and column frequency dominate their respective groups. To be valid the two magnitudes must lie between -30 dBm and +3 dBm. An integrator's output magnitude must represent more than half the total energy of its group. A DTMF signal is considered present as long as the two single tones are above -30 dBm. It is expected that these conditions will prevail for 32 milliseconds prior to further testing. When considered over the total time present, this becomes an exercise in repeated trials with the probability of a correct determination increasing with the number of observations. The statistical differences between tones and speech are used to increase the certainty of DTMF detection. The Gamma probability density function is a good approximation to the probability density function of speech amplitudes. A single tone's amplitude probability density function is uniform. The amplitude probability density function of a double tone is the convolution of two uniform probability density functions and is therefore triangular. These statistical differences manifest themselves in a factor called peak factor. Peak factor is defined as the ratio of peak magnitude to root mean square value during some time interval. The time interval chosen is 32 msec. To simplify the calculation the average magnitude rather than the root mean square value is used. For double tones embedded in white noise the resulting value falls within the interval; 2.344 - 2.714. In contrast, the peak factor range of speech is 3.5 - 27.0. A valid DTMF tone should be longer than 40 msec and above a threshold of -30 dBm. The difference in power between the tones should not exceed 8 dB. Any other energy must be 20 dB below the DTMF power for 40 msec to guarantee detection. When a new digit is detected it is written to the dsp/host channel event queue in the form xx02h. The DSP interrupts the host by writing 0xFFFF to the dsp/host mailbox at address FC0FFFh.

14.0 Volume Controls

The energy levels of output signals are controlled. This is necessary both for user comfort and conformity to compliance standards.

-80-

14.1 System Wide Gain

A system-wide multiplicative gain factor is always applied. The magnitude of this factor is indicated by a gain parameter, having 16 binary values (0000 - 1111). The gain parameter acts as index into a table containing the multipliers, which each correspond to a specific dB change. The gain factor is initialized on request or at initialization.

Gain Table

10	0000	0.3981	-8.0 dB
	0001	0.4467	-7.0 dB
	0010	0.5012	-6.0 dB
	0011	0.5623	-5.0 dB
	0100	0.6310	-4.0 dB
	0101	0.7079	-3.0 dB
15	0110	0.7943	-2.0 dB
	0111	0.8913	-1.0 dB
	1000	1.0000	+0.0 dB
	1001	1.1220	+1.0 dB
	1010	1.2589	+2.0 dB
20	1011	1.4125	+3.0 dB
	1100	1.4125	+3.0 dB
	1101	1.4125	+3.0 dB
	1110	1.4125	+3.0 dB
	1111	1.4125	+3.0 dB

14.2 Automatic Gain Control

A composite conference output sample is transmitted to each conference participant. These output samples are subjected to either automatic gain control or automatic limiting. In either case the necessary multiplier is read from a table containing 128 values. The mulaw equivalent of the conference average magnitude acts as the table index. The tables were computed by converting a power level input/output characteristic to one involving signal magnitudes.

Po = average output power

Pi = average input power

Mo = average output magnitude

Mi = average input magnitude

AGC Function

Po = -16.0 + 0.3*(16.0 + Pi)

yeilding in terms of average magnitude

Mo = 79.582009 * Mi^{0.3}

Limiting Function

Po = -13.0 + 0.1*(13.0 + Pi)

yeilding in terms of average magnitude

Mo = 379.21491 * Mi^{0.1}

-81-

The table values are the ratios of the Mi's to the Mo's. The Mi's are the linear values corresponding to the mulaw values 00H to 7FH. The resulting tables are piece wise linear and have the same quantization bin behavior as the mulaw table. The multiplier chosen from the table does not often change in response to a small change in the conference average magnitude

15.0 Program Flow

- (1) Wait for interrupt
- (2) Update parameters if necessary
- 10 (3) Process Channel Commands (if command field is non-zero)
- (4) Talk Detect
- (5) DTMF Detection
- (6) Output Voice Sums, Music, Annunciators or Playback to Channels
- (7) Update Talk Lists
- 15 (8) Service Conference Queue

16.0 Realtime Operation

- Each TMS320C31 DSP microprocessor comprising the Digital System 70 Conferencing Bridge must execute all of the tasks itemized in-item 15.0 completely every 125 microseconds. Successful operation of the system is dependent upon this. The distribution of tasks (i.e. channel type; conferee, annunciator, operator, linkline, record/playback) per node is itemized in document # 14002082, "DCB Tables for MVIP Bus and Related Assignments".

Introduction

The DCB-96 will be an all digital audio conference bridge, featuring 96 ports in the first release. Four T1 trunk interfaces provide access to the 96 conference ports. Digital Signal Processing will combine the required speech samples and transmit them to the conferees. Two analog ports provide the ability to expand a system -- linking it to another DCB-96 or an installed LINX system 60. Operators can monitor conferences through eight analog ports; and music may be sent to the conferees on another. The system will be available in three sizes, 24, 48, 72, and 96 ports initially. Future expansion to 144 ports will be studied, but will not be part of the initial release.

See Figure 1: Functional Block Diagram of DCB-96

Figure 1 is a functional block diagram of the DCB-96. The highlighted components provide the signal path for the conference speech. Once a conference is set up, these components can sustain the conference in the event of a failure on the other components. The T1 provides access to the bridge through the telephone network. The speech samples flow onto the DSI section of the MBIP Bus where they are accessible to all of the Quad DSP boards. The Digital Signal Processors can analyze the speech, analyze tones, generate tones, and combine add speech samples. The DSP can then output the speech onto the DSO section of the MBIP Bus. These output speech samples are transmitted to the listeners through the T1 card and the telephone network. The analog board provides access to the system for operator headsets, music, playback & record, and link lines to other bridges. The 486 processor runs the UNIX operating system, downloads codes to the QDSP Boards, controls the conferences, etc. The serial card provides access to the operator terminals, either directly or through modems. The modem card is for remote maintenance.

Table 1
System Features Vs System Size

	24	48	72	96	120	144
conference ports	24	48	72	96	120	144
local operators	2	4	6	8	8	8
link lines	1	2	2	2	2	2
music channels	1	1	1	1	1	1
record/playback	1	2	3	3	3	3
annunciators	2	4	6	8	8	8
modems	1	1	1	1	1	1
alarm contacts	4	4	4	4	4	4
printer	1	1	1	1	1	1
120 M hard drive	1	1	1	1	1	1
3 1/2 & 5 1/4 floppy	1	1	1	1	1	1

Interface Specifications

The following is a summary of the hardware specifications at the interfaces to the system. Some hardware features are not supported in the first software release.

-83-

T1 Interface

Frame Rate	8 kHz
Bit Rate	1.544 MHz
Framing Pattern	D3/D4 (12 frame pattern) or Extended SuperFrame (24 frame pattern)
Supervisory Signalling	Robbed bit A&B or A,B,C,&D Common Channel Signalling (Primary Rate D Channel)
Terminating Impedence	100 Ohms
Cable Type	Shielded twisted pair(1 pair transmit; 1 pair receive)
Plug	8 Pin Modular Plug
Maximum cable length	655 feet
Clocking	Normally received from network (+/- 130 ppm) Optionally internally generated

Operator Interface

Audio	4 wire headset, 6P4W modular plug; 24 VDC Max, 30 mA Max 600 Ohms, >30 db return loss
Data	RS-232, DB25

5 Other Audio Interfaces

Link Line	4 wire, 6P4W modular plug 600 Ohms, balanced dry connection
Record/Playback	2 wire, 6P4W modular plug 600 Ohms, balanced dry connection
Music	2 wire, 6P4W modular plug 600 Ohms, balanced dry connection

Alarm Interfaces

Major Alarm	2 contact closures rated at 100V, 1A Amber LED indication
Minor Alarm	2 contact closures rated at 100V, 1A Amber LED indication
CPU LED	flashing green LED

Local Maintenance Port

10 RS232,DB9

T1 Telephone Interface Board**T1 advantages**

15

Using T1 telephone interfaces in place of analog 2500 set interfaces provides the following advantages –

- Low noise,
- No attenuation,
- Low cost,
- 20 • Reduced cabling, and
- Dense packaging per telephone channel,
- Alarms for system maintenance.

T1 circuits are commonly restricted to trunk interfaces, which will provide quick call set up and disconnection and features such as ANI and DNIS.

25

-84-

Mitel

The DCB-96 will use the Mitel MB89110 Dual T1 Card. It provides 48 telephone trunk circuits with two T1 interfaces and offers the following features --

- 5 • Two T1 interfaces per card,
- Programmed through PC bus,
- Extended Super Frame, D3/D4, or SLC-96 Framing options,
- Robbed bit (channel associated) signalling of each trunk, or common channel signalling,
- Alarm detection and generation,
- 10 • Diagnostic loop back,
- DSX line equalization,
- MVIP interface with a Time Slot Interchange ability,
- Hand set jack for test purposes,
- Certified in US and Canada.
- 15 (MITEL also sells an E1 compatible card for Europe. Since E1 is a 32 channel system with 30 through channels, the E1 system will be an independent development.)

Description of Hardware

- 20 The card supports two independent, bi-directional T1 lines. Each T1 requires a Line Interface Unit Circuit which amplifies the received signal, recovers a clock signal from the received bit stream, amplifies and shapes the transmitted bit stream. Each T1 also requires a framer circuit. This framer circuit assembles the 24, 8 bit, Pulse
- 25 Code Modulated speech samples into a frame. It adds the framing bits and robbed bit signalling bits when required on the transmitted signal. It also reverses the process in the receive direction. All of the speech samples flow through a time slot interchange switch matrix. This matrix is programmed through the AT Bus. Once programmed, the switch repetitively connects any T1 time slot to any time slot on the MVIP bus, or connects a time slot to a data memory in the switch accessible by the AT Bus, or
- 30 connects a time slot to the other T1. This switch is discussed in more detail later in this section. The 48 port capacity provided by this card reduces the board count 24:1 over the LINX product.

- 35 See FIGURE 2: T1 Functional Block Diagram

Hardware Setup**T1 line connection**

- 40 The top connector (J1) is trunk A and the lower connector is trunk B. The board should be optioned as the user side of the line resulting in the standard jumper settings shown in Figure 5, providing the pin assignments shown in Table 2. Optioning the board for the network side reverses the transmit and receive pair assignments.

Table 2
Pin Assignments of T1 RJ48C Jack

PIN NUMBER	FUNCTION
1	TRANSMIT RING
2	TRANSMIT TIP
3	unused
4	RECEIVE RING
5	RECEIVE TIP
6	unused
7	unused
8	unused

T1 line Equalization

The output can drive up to 655 feet of cable. Equalization is provided in three steps from 0 to 655 feet. This cable equalization is for the cable distance from the DS60 to a DSX-1 crossconnect panel if there is one. (The DSX-1, crossconnect panel, is a restoration facility in large telephone offices. Where the DSX-1 is not used this is the demarcation point where service is handed with the far facility. If the far end equalizes the entire cable length, use a length of 0 feet in setting the cable length.) See Table 3 for the equalizer switch settings.

TABLE 3
T1 Cable Equalization Settings

Dist. to DSX	SW1	SW2	SW3	SW4	SW5	SW6	SW7
0 to 150'	on	off	off	off	off	off	off
150 to 450'	off	on	off	on	off	on	off
450 to 655'	off	off	on	off	on	off	on

PC Interrupt

Interrupt IRQ 12 is the standard selection on P4 (the jumper on header P3 would move to P4) of the board. The board offers IRQ 3, 4, 5, 6, 7, 9, 10, 11, 12, 14, and 15 as options. The first T1 board must use the termination selected by position 6 of header P3. All other boards using the same interrupt should remove the jumper from that position and reposition it so that the lower position of the jumper contacts the higher pin of the header at pin 6. This way the option is not selected, but the jumper is not lost for future reconfiguration.

PC Base I/O address

The first T1 board will use I/O address 300; the second 2300.

MVIP Bus

Positions 1, 2, 3, and 4 of P1 select the terminations for the MVIP bus. These should be optioned on the last board on the MVIP bus. Otherwise the jumpers should be positioned so that the jumper contacts only one pin on the header.

Software Options

T1 Framing Chip Setup

To initialize the framing device there are Master control words and Per Channel Control Words. There are two Master control words for each T1 framing chip.

-86-

Master Control Word 1

This controls the following functions

- D3/D4 Yellow Alarm -- returns the indication that a loss of frame condition was received if framing pattern is D3 or D4.
- Robbed Bit -- enables robbed bit signalling.
- ESF Yellow Alarm -- returns indication that a loss of frame condition was received if framing pattern is Extended Superframe.
- External Control Pin
- 8 kHz Output Select -- chip outputs a frame sync signal, only one framer can be enabled at a time.
- Binary Eight Zero Suppression -- used in wide-band data transmissions.
- Transparent Zero Code Suppression -- stops zero code transmission in data transmissions.
- Debounce -- removes 6 to 9 ms transitions in the received robbed bit signaling information.

Master Control Word 2

This controls the following functions

- Maintenance Mode -- 4 out of 12 consecutive errored Ft bit causes a RED alarm, out-of-frame.
- CRC/MIMIC -- determine the mode of finding frame in out-of-frame condition.
- SLC-96 Mode select -- not enabled in release 1.
- Reframe -- a change from high to low will force the framer to find frame again.
- ESF Select -- set for Extended Super Frame; clear for D3/D4 frame.
- All One's Alarm -- sends all 1's, blue signal.
- DGLOOP -- Used for diagnostics.
- Remote loopback -- Used in far end testing of T1 line.

Normally the Master Control Word2 is 00 for D3/D4 framing, and 10 for Extended Superframe.

Per Channel Control Word1

This controls three functions on each channel.

- Data Channel Enable -- disables the robbed bit signalling
- Per Channel Loopback -- loopback one channel.
- Polarity -- inverts the bits in the channel.

Normally the PCCW1 is 04.

Per Channel Control Word2

This contains the robbed bit signalling information. There is one PCCW for each channel.

Time Slot Interchange Setup

The time slot interchange circuit is composed of four, 256 channel, digital switches. One digital switch chip connects the framers to the MVIP Bus; one connects MVIP Bus to the framers; one connects framer to framer; and one connects MVIP channel to MVIP channel. Each device must be programmed to set the necessary connections between 256 inputs and 256 outputs.

Also, each switch device contains internal memory that may be connected to a channel input or output. The AT bus can access this memory to control the supervisory signaling. The memory is bank switched by a control word; therefore only a small portion of the memory is available at one time.

See Figure 3: Time Slot Interchange Switches

-87-

Control Register

The control register is accessed anytime that A5 bit is equal to 0 and the device is selected. The control registers control which serial bit stream can be accessed, and which control byte for each channel in the bit stream. There are four functions in the control register.

- 5 • Line Address Bits -- to select the serial line to control.
- Memory select bits -- select between the following three bytes --
 - Data memory
 - Connection Memory Low
 - Connection Memory High
- 10 • Message Mode --
- Split Memory -- When set to 1, reads are from data memory, writes are from Connection memory low.

Connection Memory High

15 This has three per channel control bits.

- Output Enable -- can tristate any given channel output
- CSto Bit -- (unused in switch #3 & 4, set to 1)
- Message Channel -- sends information from data memory on designated channel

Connection Memory Low Bits

20 This normally determines the input connection for this output time slot. It has two components.

- Channel Address -- selects the input channel
- Line Address Bits -- selects the input line

Alternatively, if the channel is designated a message channel, the contents of this register are sent.

25

Framing Format

This board supports the two most common framing formats -- the Extended Super Frame or D3/D4. The D3/D4 is the largest installed base, while the new ESF is common in new installations. This must be optioned to be compatible with the equipment on the other end of the line. Otherwise the system will not find the frame, resulting in a constant alarm condition. This option is set in bit 4 of the Master Control Word 2, offset address 0C1F. See the memory map Figure 3.

30

Supervisory Signalling

35 Release 1 of the DCB-96 product will offer channel associated signaling; also known as robbed bit signaling, or AB bit signaling, or ABCD bit signaling. This format transfers the on-hook/off-hook information in both directions of transmission.

Release 1 will support E&M format signalling. In this case the A bit transfers the information that a relay would otherwise send. When A = 0 the channel is idle; when A = 1 the channel is active. During a call set up period there may be transitions -- winks, etc. For E&M signalling the transmitted B, C, and D bits are defined to equal the A bit. On the receive line only the A bit is read. The signaling state is stored in a nibble in the PCCW, the Per Channel Control Word. These are located at offset addresses 0C00 to 0C1E h.

40

45

PC Interface**Interrupts**

The T1 boards will share interrupt IRQ12.

-88-

I/O Memory Map

Each T1 board must have a unique base address, set by the DIP switch on the board. Board 1 will use 300h; board 2, 2300h; and board 3, 4300. Eight blocks of memory are defined on each board based on this base address.

Table 4
T1 BOARD I/O MAP

BD NO.	CTRL	SW1	HDLC	SW2	PHONE	SW3	MISC.	SW4
1	300	700	B00	F00	1300	1700	1B00	1F00
2	2300	2700	2B00	2F00	3300	3700	3B00	3F00
3	4300	4700	4B00	4F00	5300	5700	5B00	5F00
X	6300	6700	6B00	6F00	7300	7700	7B00	7F00
X	8300	8700	8B00	8F00	9300	9700	9B00	9F00
X	A300	A700	AB00	AF00	B300	B700	BB00	BF00
X	C300	C700	CB00	CF00	D300	D700	DB00	DF00
X	E300	E700	EB00	EF00	F300	F700	FB00	FF00
X	200	600	A00	E00	1200	1600	1A00	1E00
X	2200	2600	2A00	2E00	3200	3600	3A00	3E00
X	4200	4600	4A00	4E00	5200	5600	5A00	5E00
X	6200	6600	6A00	6E00	7200	7600	7A00	7E00
X	8200	8600	8A00	8E00	9200	9600	9A00	9E00
X	A200	A600	AA00	AE00	B200	B600	BA00	BE00
X	C200	C600	CA00	CE00	D200	D600	DA00	DE00
X	E200	E600	EA00	EE00	F200	F600	FA00	FE00

Note: X is reserved.

Load and Drive

The data, address, and reset inputs will present a 0.1 ma load on the bus. The IOchrdr and the IOchrwr inputs will present a 20ua load to the PC bus. The drive capability is 24 ma except for IOchrdr that is 4ma.

Alarms

T1 has two important alarms Red (out-of-frame), and Yellow. The alarms are reported to status registers that must be polled. No LED's or alarm contacts are provided on the option board. When a fault occurs in a T1 line, the terminal on the receiving end generates a Red alarm, and sends a Yellow alarm to the far end. Another condition 'Blue Alarm' is only detected if the signal is unframed; and then it is reported as Red. The Blue alarm state is an all one's pattern generated as a keep alive signal when repeating equipment receives no input signal to transmit. If you receive a blue signal you know you are out-of-service, but you also know the problem is down stream. The T1 Board can send a Blue Alarm to indicate out-of-service conditions.

Customer Service Unit

If this board connects to the public telephone network from customer premise equipment, a Customer Service Unit is required. Also in installations where the T1 cable exceeds 655 feet a CSU may be necessary. The CSU is external box that

- Drives up to 6000 ft of cable,
- May terminate the 130 Volt power feed,
- Provides loopback functions and
- Provides a 'keep alive' signal when the conference bridge is serviced.
- Provides data buffering, necessary to tolerate clock variations.

Certifications

The MB89110, T1 board is certified in the USA and Canada by UL, CSA, FCC, part 68, and DOC CS-03. This board level certification reduces the required system level.

(The MB89120, E1 board is pending UK certification to BABT requirements. However, using this dumb board to support multiple E1 lines with common channel signalling is an open issue)

Digital Signal Processing Board

The T1 board connects to the Quad Digital Signal Processing Board through the MVIP Bus. The Receive gate array reads all 256 DSI time slots on the MVIP bus and stores them in a buffer. These PCM time slots are then available to the C31 Digital Signal Processor as required. The Digital Signal Processing detects signals, generates tones, and conferences channels together. DSP adds flexibility to the system. DSP provides functions described in code that were previously provided in hardware, allowing rapid changes and additions to functions. All code, commands, host to DSP interrupts, and data structures are sent through the dual port RAM. All output samples are sent in PCM format through the Transmit buffer. The Transmit gate array reads this buffer together with the reference memory and places the time slot on a DSI time slot. There are four TMS320C31 processors on each board in this system.

See FIGURE 4: QDSP Board Functional Block Diagram

See also FIGURE 5: DCB Block Diagram

MVIP INTERFACE

The telephone channels from the T1 boards occupy part of the first six MVIP Bus lines; each T1 uses the first 24 channels on the 32 channel line. The channels 24 to 31 are reserved for operator services, music, recording, etc. The last two lines, DSI(6&7), are reserved for inter-processor communication.

RECEIVE

A field programmable gate array writes all information received on the 256 channels into two quad port rams. Each of these RAMS is connected to two processors. This gives each DSP processor access to all of incoming telephone information. This information is double buffered, i.e. while the new bus information is written into one section of memory, the processors are reading it from another. The content of the RX control register determines the memory locations used.

The board provides an option to connect the last two receive lines to the transmit DSI(6&7) lines, providing inter-processor communication. This option will be enabled in all boards in release 1. The option is exercised by setting bit 1 in the Base Address Register.

TRANSMIT

The transmit connections to the MVIP bus attempt to reverse the receive process. The processor can write a speech sample into any of 32 memory locations, each
5 representing a channel on the MVIP Bus. The gate array will automatically retrieve the information and together with a line assignment from the reference memory. This process however contains blocking; because once a speech sample is stored in the location for channel 1; it is the only channel 1 that processor can transmit on. This complicates the time slot, or channel assignments on the MVIP bus. One processor
10 can transmit up to 32 channels of information as long as each has a unique channel number (0 to 31).

See FIGURE 6 (which is referred to as "Figure 5" in the accompanying text)

15 The PC loads the reference memory with a map of channel assignments while the system is out of service. Thereafter the gate array reads a location each time it reads from the quad port RAM and the content of the memory does not change. Every 125us frame, the gate array will access 32 locations in the quad port RAM and 32 locations in the reference memory looking to place the quad port information on the
20 bus. One bit in each reference memory is used to indicate if this channel is unused.

DIAGNOSTIC LOOPBACK

A diagnostic loopback circuit is provided at the MVIP interface. Position 8 of SW1 controls the clock connection at the interface. In the ON position, the clock is derived
25 from the 33Mhz board clock; in the OFF position, the MVIP Bus clock is used.

DSP

Each TMS 320C31 Digital Signal Processor operates at 33Mhz. It has static RAM for code and data space. The quad port RAM is used to communicate with the MVIP bus; and a dual
30 port ram provides communication with the PC Bus. The four processors on a board can communicate with each other through their serial port or they can communicate to a sibling through the quad port RAM.

35 PC INTERFACE

The switch S1 is used set a unique I/O address for each board between 10 to 300h. The standard settings are shown in Tables 5 and 6.

TABLE 5
QUAD DSP BOARD I/O BASE ADDRESS ASSIGNMENTS

BD NO	I/O ADD	CNFLT	6	5	4	3	2	1
1	240	none	off	on	on	off	on	on
2	250	none	off	on	on	off	on	off
3	2D0	EGA	off	on	off	off	on	off
4	2E0	GPIB	off	on	off	off	off	on
1	2B0	EGA	off	on	off	on	off	off
2	2C0	EGA	off	on	off	off	on	on

TABLE 6
QUAD DSP I/O MEMORY MAP

BD	BASE ADD	CTRL REG	SMPHR REG A	SMPHR REG B	SMPHR REG C	SMPHR REG D	MVIP RX REG	MVIP TX REG
1	2B0	2B0	22B0	26B0	2AB0	2CB0	32B0	36B0
2	2C0	2C0	22C0	26C0	2AC0	2CC0	32C0	36C0
3	2D0	2D0	22D0	26D0	2AD0	2CD0	32D0	36D0
4	2E0	2E0	22E0	26E0	2AE0	2CE0	32E0	36E0
5	240	240	2240	2640	2A40	2C40	3240	3640
6	250	250	2250	2650	2A50	2C50	3250	3650

TABLE 7
QUAD DSP MEMORY MAP

BD	BASE ADDRESS	NODE A	NODE B	NODE C	NODE D	REFERENCE MEMORY	VIRTUAL MODE
1	F00000	F00000	F02000	F04000	F06000	F00000	0F
2	F08000	F08000	F0A000	F0B000	F0C000	F08000	0F
3	F10000	F10000	F12000	F14000	F16000	F10000	0F
4	F18000	F18000	F1A000	F1B000	F1C000	F18000	0F
5	F20000	F20000	F22000	F24000	F26000	F20000	0F
6	F28000	F28000	F2A000	F2B000	F2C000	F28000	0F

Load and Drive

The Quad DSP presents a 0.6ma load on the AT bus and a 24 ma drive to the bus.

SCOPE OF DOCUMENT

5 This documents is intended as a design specifications document for the Multi-Link DSP Processor or MDP Card. It is organized into 5 Sections and 6 Appendices. A brief summary of each section is listed below.

SECTION 1

10 Provides a functional description of the MDP card, a summary of the various sub-sections in the MDP card is presented.

SECTION 2

15 Describes the PC Interface and Shared Memory Circuit Implementation and Related Timing.

SECTION 3

Describes typical TI320C31 based DSP Node circuit with reference to Related Timing. The Memory and Register MAPs for each Node is described.

SECTION 4

20 The MVIP Interface using PLD1 and PLD2 and is described. The functionality of the MVIP Transmit and Receive Sections are described in detail.

INTRODUCTION

25 The Multi-Link DSP Processor (MDP) is being designed to meet Multi-Link's performance objectives for Voice Conferencing applications. The MDP card is a full size PC-AT card which is based on a distributed processing architecture using four Texas Instruments TNS320C31 DSP Nodes. The MDP card is designed to process (voice) channel data from eight (TI/CEPT lines) on the MVIP bus. This design allows all four DSP Nodes access to a
30 total of 192/256 voice channels.

Figure 1-1 illustrates how the varlous sub-sections of the MDP are connected. A Feature summary of each sub-section of the MDP card is given.

35 FEATURE SUMMARY

PC Interface (detailed in Section 2)

- Full 16 Bit PC-AT Interface
- 40 - I/O Mapping Range 0x100 to 0x3FF
- Memory Mappable In full 16 Meg Range of PC-AT
- Window sizes of 16K & 32K supported.
- Jumper Selectable PC-AT Interrupts (IRQ3 - IRQ15)

45 DSP Node (ref Fig. 1-2, detailed in Section 3)

-93-

Processor 33 MHz Texas Instruments TMS320C31
 - 33 MFLOPs
 - 16.67 MIPS
 5 - 2 K 32-bit Internal RAM
 - 64 x 32 Internal Cache
 - 16 Megaword Addressing Range

Memory :

10 4 K x 16 Dual Ported SRAM (shared with the PC)
 64 K x 32 Private Code SFWM (expandable to 256R)
 (SIMM Connector)

Inter-Node Communications

15 This maybe accomplished via the Quad Port RAM or Dual Port RAM by the PC-Host.

MVIP Interface (detailed in section 4)

The MVIP Interface is to have the following features :

- 20 * 1 MVIP Interface Receive PLD
 * 1 MVIP Interface Transmit PLD
 * Dual Port reference memory which is shared with the PC.
 * Two Quad Port RAM which are accessible by all DSP Nodes.

25 INTRODUCTION

The MDP card is designed to meet the full 16-bit ISA (PC-AT) specification. The MDP may be Memory mapped in the full 16 Megabyte address range of the PC-AT.

30 The PC Interface allows the PC to reset, run, upload code via a shared memory window, exchange interrupts and data with all four DSP Nodes. This interface allows the MDP card to be uniquely I/O and Memory Mapped in the PC.

35 The main sub-sections of the PC Interface of the card which include the I/O Decode, Memory Decode and Interrupt/Control are shown in Fig. 2-1 and described with reference to the Schematics in Appendix A In this section.

See FIGURE 7 (which is referred to as "Fig. 1-1" in the accompanying text)

See FIGURE 8 (which is referred to as "Fig. 2-1" in the accompanying text)

40 I/O MAP

The MDP is I/O mapped into the I/O Address space of the PC Host Processor. The I/O base address of the MDP card is determined by the settings of the first six positions of switch S1. Figure 2-2 shows suggested I/O base address settings.

45 MDP registers are organized into seven Group Base Addresses by the decode logic performed by decoders U7, U9 and U10 in conjunction with PC Address Lines A10, A11, A12 and A13. This IO MAP is illustrated in Figure 2-3.

50 There are three functional I/O Mapped registers groupings illustrated by Figure 2-3 are follows :

a. PC-Interface Control Registers (IO Address Group 0

-94-

- b. Dual Port Semaphore Registers (IO Address Group 1-4)
- c. MVIP Interface Control Registers (IO Address Group 5&6)

These three groups are described in more detail in this section.

5

SWITCH S1						
IO BASE ADDRESS	6	5	4	3	2	1
220	OFF	ON	ON	ON	OFF	ON
240	OFF	ON	ON	OFF	ON	ON
250	OFF	ON	ON	OFF	ON	OFF
260	OFF	ON	ON	OFF	OFF	ON
2A0	OFF	ON	OFF	ON	OFF	ON
2B0	OFF	ON	OFF	ON	OFF	OFF
300	OFF	OFF	ON	ON	ON	ON

Fig. 2-2 Recommended I/O Address Assignments

A13	A12	A11	A10	A9-A6	IO ADDRESS GROUP	DESCRIPTION
0	0	0	0	+ BASE ADDR	0/0000+ BA	PC I/F CONTROL REGS.
1	0	0	0	+BASE ADDR	1/2000+ BA	NODE A SEMAPHORE REGS
1	0	0	1	+BASE ADDR	2/2400+ BA	NODE B SEMAPHORE REGS
1	0	1	0	+BASE ADDR	3/2800+ BA	NODE C SEMAPHORE REGS
1	0	1	1	+BASE ADDR	4/2A00+ BA	NODE D SEMAPHORE REGS
1	1	0	0	+BASE ADDR	5/3000+ BA	MVIP RX (PLD1) REGS
1	1	0	1	+BASE ADDR	6/3400+ BA	MVIP TX (PLD2) REGS


10

Fig 2.3 I/O BASE ADDRESS GROUPING

MEMORY MAP

- The MDP presents a 16K Shared RAM window which maybe opened or closed and rapped anywhere in the 16 MB range of the PC-AT. The Memory Decode and Control functions are performed by the PC Control Register, Base Address Register, Virtual Mode Register and associated control logic. The function of these Registers is described in the paragraph on PC-Interface Control Registers.

15

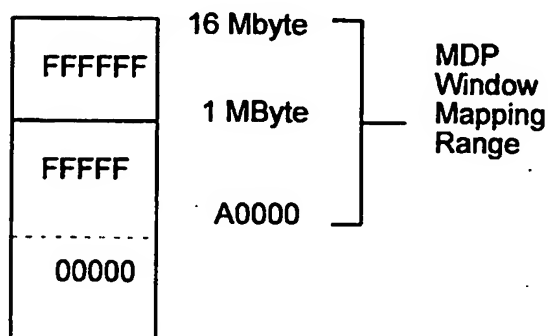

20

Fig. 2-4 PC HOST Memory MAP

PC-INTERFACE CONTROL REGISTERS (IO Address Group 0)

- The I/O MAP for these group of Registers is selected by PBA13 being low and completely decoded by U10 as shown in Figure 2-5. These registers provide the PC Host processor

25

-95-


access to several I/O registers for controlling shared RAM access parameters. Node Reset and Interrupt Control. The function of each host register is as described.

A13	A9-A4	R/W	REGISTER NAME
0	BASE ADDR + 0	R/W	PC CONTROL REGISTER (PCR)
0	BASE ADDR + 2	R/W	MEM BASE ADDR REGISTER (BAR)
0	BASE ADDR + 4	R/W	VPM MODE REGISTER (VMR)

Fig. 2.5 PC INTERFACE CONTROL REGISTERS

PC Control Register (PCR) (R/W) U8, Sheet 2 of Schematics

This is a PC Host controlled Read/Write register which controls resetting and running the C31 processors, opening and closing the shared RAM windows and resetting of the MVIP Interface Control logic (PLD1 & PLD2). This register is cleared on Power-up and by PC Reset. The function of each bit in this register is illustrated by Fig. 2-6.

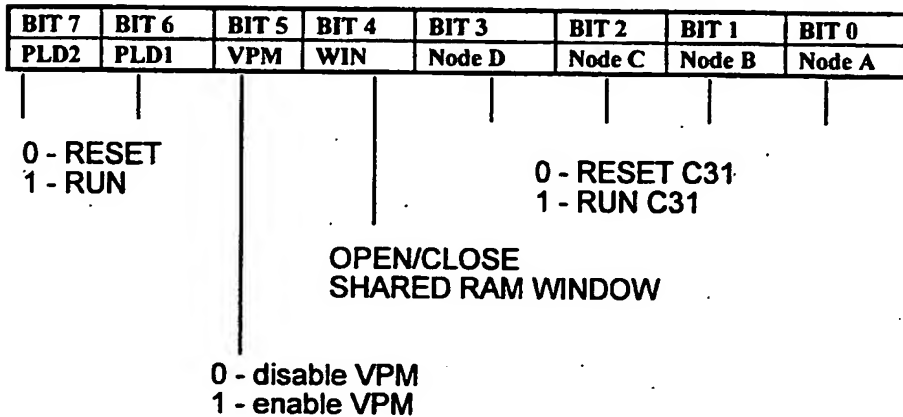

Base Address Register (BAR) (R/W) U11 Sheet 2 of Schematics

The base address of DSP Node Dual Port or MVIP Reference shared RAM Window in PC Memory is set and enabled by writing to this register. The MVIP Reference Memory is shadowed by the Dual Port RAM. In the intended application, the Reference Memory would be accessed by the PC-Host during initialization, after which it is switched back into the 'shadow'. Note that the Dual Port RAM interface for the Nodes is 16 bits, while the Dual Port Reference Memory for MVIP Transmit function is 8-bit. The format of the MVIP reference memory is described in more detail in Section 4.

The base addresses should be selected as increments/offsets of the window size of 16K, examples are given in Figure 2-7 below. This register is cleared on power-up but not by PC Reset.

eg.

BAR=80 for PC Base Address of 80000
BAR=A0 for PC Base Address of A0000

-96-

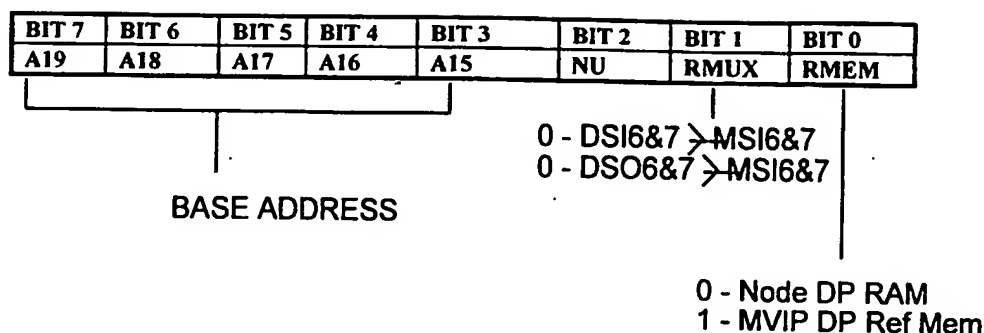


Fig. 2-7 Base Address Register (BAR)

Virtual Mode Register (VMR) (U13 Sheet 2 of Schematics)

This register is used in mapping the MDP in Extended PC Memory above the 1 MByte Intel Real Mode range. This register in combination with the BAR allows the shared RAM window to be located anywhere in the 16 Mbyte Addressing range of the 80236/803B6 PC Host. As indicated in Fig 2-8 below, Address AD20 to AD23 are programmed into Bits 0-3. The ENVPM bit in the PCR must be set to activate the Protected Mode Address defined by this register.

BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
NU	NU	NU	NU	AD23	AD22	AD21	AD20

Fig. 2-8 VMR Register

INTERRUPT CONTROL

The interrupt control logic allows each Node to Interrupt the PC Host or the PC Host to Interrupt each DSP Node separately. The generation of interrupts in both directions is performed by writing into two fixed mail-box locations (offset FFE from the PC-Host side and offset FFF from the DSP Node side) in the Dual Port RAM (IDT 7024).

PC to DSP Node Interrupts

The PC which has access to the Right Hand Port of each Dual Port RAM (U29, U35, U42, U48) writes into location FFE, (IFFC in byte offset from PC side) this causes an interrupt to be generated on the Left Hand Port (INTL). The INTL interrupt outputs of all DPRAM are synchronized by PALs U17 and U18 before being connected to the /INT1 input of each DSP Node. The DSP Node may clear the interrupt by reading location FFE.

DSP Node to PC Interrupt

Each DSP Node which has access to the Left Hand Port of the Dual Port RAM generates an interrupt to the PC by writing to location FFF. This causes an interrupt to be generated out of the Right Hand Side of the DP RAM, this INTR interrupt line (NDX INT) is fed to U16 which is responsible for or-ing all Node Interrupts to the PC and driving the selected IRQ Line. The PC has to determine the source of the Node Interrupt by polling software defined parameters in the DP RAM. Since the Interrupt Line may be shared through a 'WIRED-OR' arrangement, the PC-Host will have to determine the Interrupt Sources by polling the DP

-97-

RAM of all DSP Cards in the system. More details on interrupt handling are described in Appendix E.

- 5 The PC may clear each node interrupt by reading location FFF (IFFE in byte offset) in the appropriate DP RAM. The interrupt level to the PC-HOST is jumper selectable from among IRQs 3,4,5,9,10,11,12 or 15 at J1 (Sheet 2 of Schematics).

10 NODE SEMAPHORE REGISTERS (IO Address Group 1-4)

These eight registers located within the Dual Port RAM of each Node are IO Mapped for PC-Host access as shown in Figure 2-10 The decode down to each register is performed within each DP RAM. These registers are Memory mapped into each DSP Node which access the DP RAM from the Left Port.

I/O ADDRESS	DESCRIPTION (SINGLE BIT)
GROUP BASE ADDRESS + 0	SEMAPHORE REGISTER 0
GROUP BASE ADDRESS + 2	SEMAPHORE REGISTER 1
GROUP BASE ADDRESS + 4	SEMAPHORE REGISTER 2
GROUP BASE ADDRESS + 6	SEMAPHORE REGISTER 3
GROUP BASE ADDRESS + 8	SEMAPHORE REGISTER 4
GROUP BASE ADDRESS + A	SEMAPHORE REGISTER 5
GROUP BASE ADDRESS + C	SEMAPHORE REGISTER 6
GROUP BASE ADDRESS + E	SEMAPHORE REGISTER 7

15 Fig. 2.10 DP RAM SEMAPHORE REGISTERS

The group base address (PC Side) for each Node is as below:

- 20 Node A - 2000 + Board I/O base address
Node B - 2400 + Board I/O base address
Node C - 2800 + Board I/O base address
Node D - 2000 + Board I/O base address

For each C31 node Semaphore register address is as follows :

- 25 Reg0 B00000
Reg1 B00001
.....
Reg7 B00007

30 Example for Node A and semaphore Reg1

C31 node A attempts to set semaphore Reg1 by writing 0 to B00001.

- If C31 reads back 0. It has control.
If it reads back 0xff, PC has control.

- 35 PC attempts to set semaphore by writing 0 to I/O address 0x2002 + Board Base Address.
If PC reads back 0. It has control.
If PC reads back 0xff. C31 A has control.

To release semaphore register, C31 or PC must write 1 to the respective address.

40

-98-

MVIP INTERFACE CONTROL REGISTERS (IO Address Group 5 & 6) The third I/O decode grouping is for MVIP Receive Control registers internal to PLD1 (U52) and MVIP Transrit registers internal to PLD2 (U50). Upto eight (8 bit) individual registers for each Group Base Address is decoded within each PLD. These registers are listed in Figures 2-11 and 2-12. The functions of individual registers is described in Section 4.

I/O ADDRESS	R/W	DESCRIPTION
GROUP BASE ADDRESS + 0	R/W	CONTROL REGISTER
GROUP BASE ADDRESS + 1	R	RX LINE STATUS REGISTER
GROUP BASE ADDRESS + 2	W	CLEAR RX LINE STATUS
GROUP BASE ADDRESS + 3		NOT DEFINED
GROUP BASE ADDRESS + 4		NOT DEFINED
GROUP BASE ADDRESS + 5		NOT DEFINED
GROUP BASE ADDRESS + 6		NOT DEFINED
GROUP BASE ADDRESS + 7		NOT DEFINED

FIG. 2.11 MVIP RECEIVE CONTROL REGISTER8

I/O ADDRESS	R/W	DESCRIPTION
GROUP BASE ADDRESS + 0	R/W	TX CONTROL REGISTER
GROUP BASE ADDRESS + 1		NOT DEFINED
GROUP BASE ADDRESS + 2		NOT DEFINED
GROUP BASE ADDRESS + 3		NOT DEFINED
GROUP BASE ADDRESS + 4		NOT DEFINED
GROUP BASE ADDRESS + 5		NOT DEFINED
GROUP BASE ADDRESS + 6		NOT DEFINED
GROUP BASE ADDRESS + 7		NOT DEFINED

Fig. 2.12 MVIP TRANSMIT CONTROL REGISTERS

SECTION 3. DSP NODES

INTRODUCTION

The processing power of the MDP card is provided by four DSP Nodes. The main building blocks for each DSP Node is provided by a 33MHz Texas Instruments TMS320C31 DSP (RISC) Processor, an Address decoder/ wait state generator, up to 256 KBytes of Private (Code) Static RAM, a 4Kx16 Dual Port RAM and a Quad Port RAM. The C31 accesses the MVIP through a Shared Merory Interface for both Receive and Transmit functions. Figure 3-1 illustrates the organization of each building block of a DSP Node, each of these building blocks is described in greater detail in this section with reference to Node A which is located in Sheet 3 of the Schematics.

See FIGURE 9 (which is referred to as "Fig. 3-1" in the accompanying text)

-99-

TMS320C31 PROCESSOR

The TMS320C31 is a cost reduced version of the C30 Processor packaged in a 132-pin plastic quad flat pack. The following is a summary of its features :

- * 64x32 byte cache
- * Two 1K Internal RAM blocks
- * Addressing Range : 16 Meg
- * Data Bus : 32
- * 1 DMA Controller, 2 Timers & 1 Serial Port.

ADDRESS DECODER & WAIT STATE GENERATOR

The memory address decode function at each node is performed by a 5nS, 16L8 PAL (eg. U30 Node A Sheet 3 of Schematics). This PAL is selected because there are currently no standard Decoders that can meet the speed requirement.

For access to slower Code and Peripheral Memory, a wait state generator is implemented using a 16V8 GAL in conjunction with a two position jumper (J3 and U28 Node A). The output of this GAL is fed to the decoder PAL (U30) in order to assert wait states. The decoder PAL has a ready output which connects to the Ready input of the C31. Figure 3-2 shows Jumper positions and the corresponding wait states. The memory decode scheme for node A is illustrated in Figure 3-2. The resulting memory MAP is shown in Figure 3-3.

AWS1	AWS0	DESCRIPTION
0	0	0 WAIT STATE
0	1	1 WAIT STATE
1	0	2 WAIT STATE
1	1	3 WAIT STATE

Figure 3-2 : CODE RAM WAIT STATE JUMPER ASSIGNMENTS

SIGNAL NAME	MEMORY RANGE	DATA SIZE	DESCRIPTION
ACS3	A00000 - A007FF	8	QUAD PORT RAM
ACS2	EC0000 - EFFFFFF	32	CODE RAM
ACS1	B00000 - BFFFFFF	16	SEMAPHORE REGS
ACS0	FCX000 - FCXFFF	16	DUAL PORT RAM

Figure 3-3 Memory Decode Scheme

PRIVATE (CODE) RAM

Up to 256K of 32 bit private Code RAM Space mapped between EC0000 to EFFFFFF is available to each C31 processor. When 64K x 32 RAM SIMM modules are used, they are mapped from EC0000 to ECFFFF. The Speed of SRAM modules used dictate whether wait-states need to be asserted for accessing Private RAM code. (SRAM Speeds of 45 NS require 1 wait state, SRAM Speed of 25nS does not require wait states.) C31 wait state access to this RAM is illustrated by Figure 3-7.

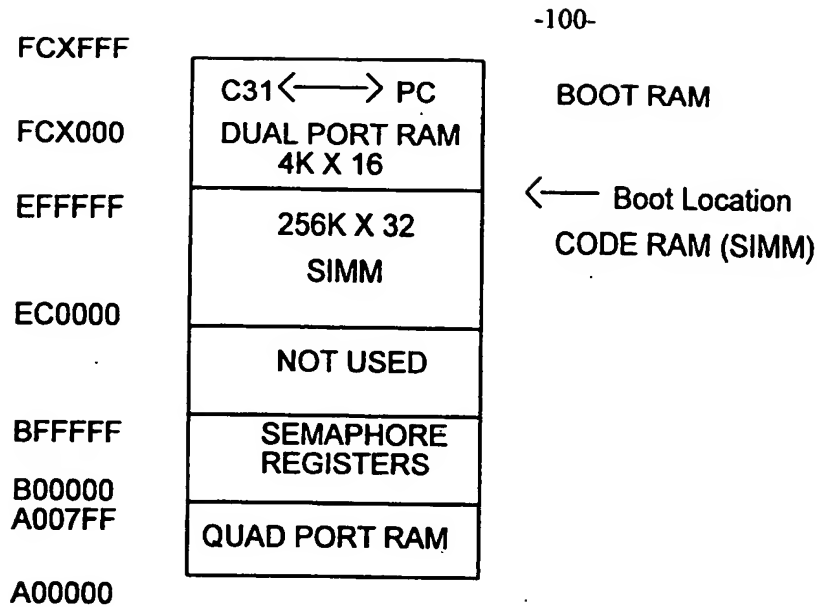


Fig. 3-4 C31 NODE Memory MAP

5

DUAL PORT RAM (BOOT & PC-INTERFACE) (U29, U35, U42, U48)

The Dual Port RAM is used for booting each DSP Node and for exchange of Code and Data with the PC Host.

- 10 Each DSP node has access to the left port of a (4K x 16) Dual Port RAM, the right port is accessible by the PC. Only the lower 16-bits read by the C31 Processor contain valid data, the upper 16-bits are in an undefined state. Software 'blanking' of the upper 16 bits is necessary to put them into '0' state
- 15 The IDT7024 has been selected for this application. The IDT7024 includes such features as arbitration control, semaphore registers and interrupt generating mail-box registers. The arbitration control feature asserts a BUSY output signal to hold-off any device trying to access a 'busy address'. The mail-box register locations may be used by the DSP nodes and the PC to interrupt each other. A more detailed explanation of this interrupt scheme is provided
- 20 in Section 2.

QUAD PORT RAM

- There are two IDT7052 2Kx8 Quad Port SRAM, these are shared by two DSP Nodes each. The QUAD Port RAM provide a shared RAM interface to the MVIIP Interface Circuit. Each
- 25 DSP Node may read and process received MVIIP DATA and output data to be Transmitted by the MVIIP Interface.

- This Quad Port RAM does not feature arbitration logic, for preventing address collisions. It is the responsibility of the applications (protocol) code to ensure data integrity. The functions of the QUAD PORT RAM in conjunction with the MVIIP Interface is described in
- 30 Section 4. The Memory MAP of the QUAD port RAM for each node is illustrated by Figure 3-4.

-101-

INTRODUCTION

The MVIP Interface performs two basic functions which include receiving MVIP Bus Data from the Serial Input Lines and transmitting MVIP data onto the MVIP Serial Output lines.

5

The Received MVIP Data is formatted and deposited in Quad RAM receive buffers for processing by DSP Nodes. The Data to be transmitted is formatted for transmit on the NVIP Serial Output bus. The functional block diagram of the NVIP interface as illustrated by Figure 1-1. is functional functionally described with reference to Sheets 7 and 8 of the Schematics.

10

MVIP RECEIVE INTERFACE (U52, Sheet 7)

The organization of functional blocks within PLDI (Actel-1020) device are illustrated by Figure 4-1. The main functional blocks in this device consist of a PC-Host Interface, Control Logic and a Serial to Parallel Converter.

15

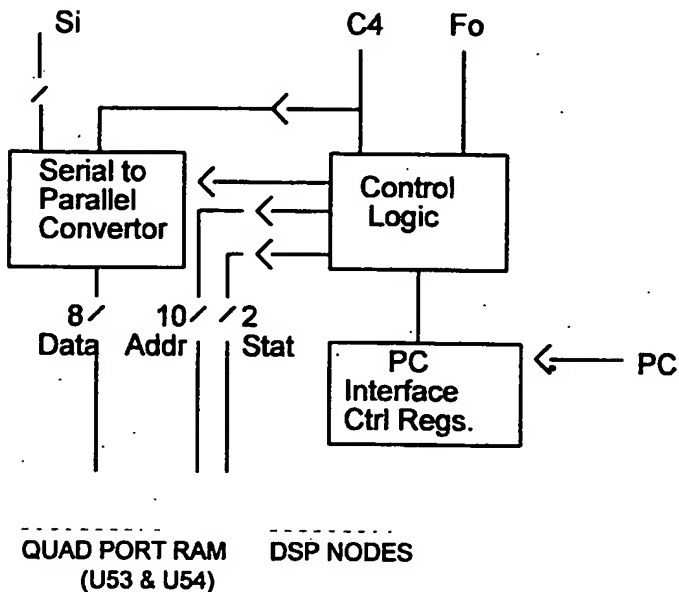


Fig. 4-4 Functional Block : MVIP Receive PLD

20

PC-Host Interface The PC has access to three registers for configuring and monitoring the status of this circuit. These registers are illustrated in Figures 4-2 and 4-3.

The Function of the Receive Control Register are illustrated by Figure 4-2. The 'run' bit (when in 1 state) is responsible for initializing and starting the Receive Interface. The 'Addr10' bit selects the level of address 10 line, this determines the 1 Kbyte block of the QPR to be written. Bit 3 of this register is Read Only, and provides the status of Address line 9 to the QPR. The Status of this 'Ping-Pong' bit points to the 256-byte block that is being currently written to by the MVIP Receive circuit.

25

STAT1 indicates the state of the 'ADDRESS' lines respectively. The 'CLKSEL' bit drives the SELECT line to PAL U55, to control clock muxing function.

30

-102-

The Receive and Clock Status registers are used for diagnostics purposes to monitor the state of the respective lines. An abnormal line state such as 'open' and 'stuck' line can be detected by reading these registers.

5 Test Mode

- The 'Test Mode' bit enables the local Test bus loopback path for testing functionality of both the Transmit and Receive MVIIP Interfaces. The Test Mode connect all four (4) transmit MVIIP lines to the MVIIP Receiver. Within the MVIIP Receiver these loopback receive lines are 'doubled' by connecting Line 0 to 4, 1 to 5, 2 to 6, and 3 to 7. This doubling of loopback lines allows all the Serial to Parallel conversion logic for 8 lines to be tested. (Note that the corresponding received data is also duplicated in the receive buffers).

NU	NU	CLKSEL	NU	Addr9 Status R	Test Mode W/R	Addr10 Set W/R	RUN
		W/R					


15 Fig. 4-2 Receive Control Register (R/W) I/O Addr. = 3000H + B/A

Si7	Si6	Si5	Si4	Si3	Si2	Si1	Si0
-----	-----	-----	-----	-----	-----	-----	-----

Fig. 4-3 Receive Line Status Register I/O Addr. = 3002H + B/A

20 MVIIP RECEIVE BUFFER ORGANIZATION

- The organization of the MVIIP receive buffer is illustrated in Figures 4-4 and 4-5. Figure 4-4 illustrates the organization of the Receive Buffers in 256 byte blocks starting from address location 0, (Address Bit 10 set to 0 in Receive Control Register).
- 25 The byte by byte organization of received data is illustrated in Figure 4-5. Note that in the Test Mode, bytes 0 to 3 will be duplicated by bytes 4 to 7, as explained by 'Test Mode' above.

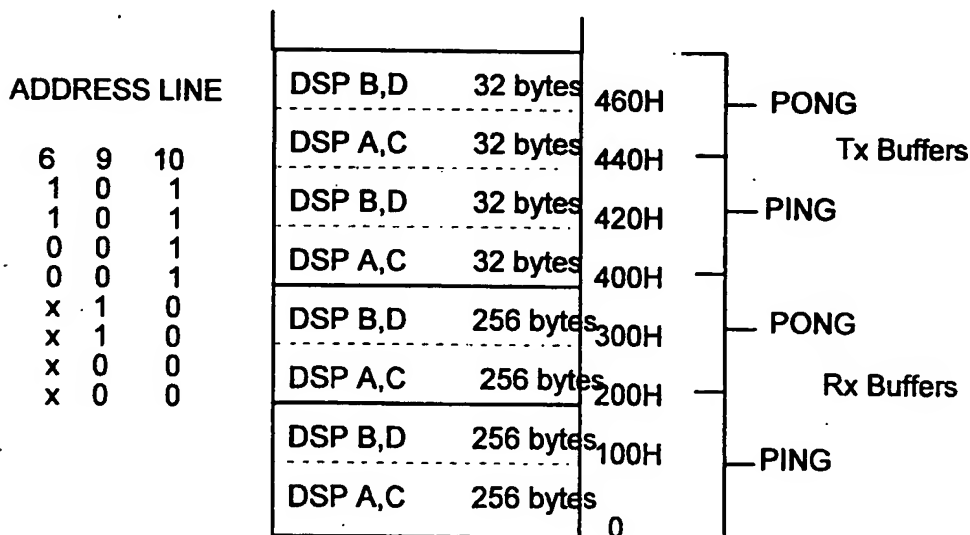

-103-

Fig. 4-4 MVIP Rx and Tx Buffer Organization in QP RAM

BYTE#s in Hex	MVIP	CHANNELS #
EO - FF	7	0 - 31
CO - DF	6	0 - 31
AO - BF	5	0 - 31
80 - 9F	4	0 - 31
60 - 7F	3	0 - 31
40 - 5F	2	0 - 31
20 - 3F	1	0 - 31
0 - 1F	0	0 - 31

Figure 4-5 Byte by Byte Received Frame Organization

5


Timing & Control Logic

This state machine is responsible for generating the basic timing, muxing, address generation (RAD0-RAD10), write strobes and status lines. This circuit block is responsible for writing received data in parallel to two Quad Port RAM U53 and U54. The received block for each Frame is written alternately to two 256 byte blocks, a status line (PING) which connects to the XFO input of all C31's is toggled to indicate the 'current' received buffer.

10

MVIP TRANSMIT INTERFACE (U52, Sheet 7)

- 15 The organization of functions within this device are illustrated in Fig. 4-6, is the opposite of the Receive Interface device. The main functional blocks include the PC-Host Interface, Control Logic and the Parallel to Serial Converter

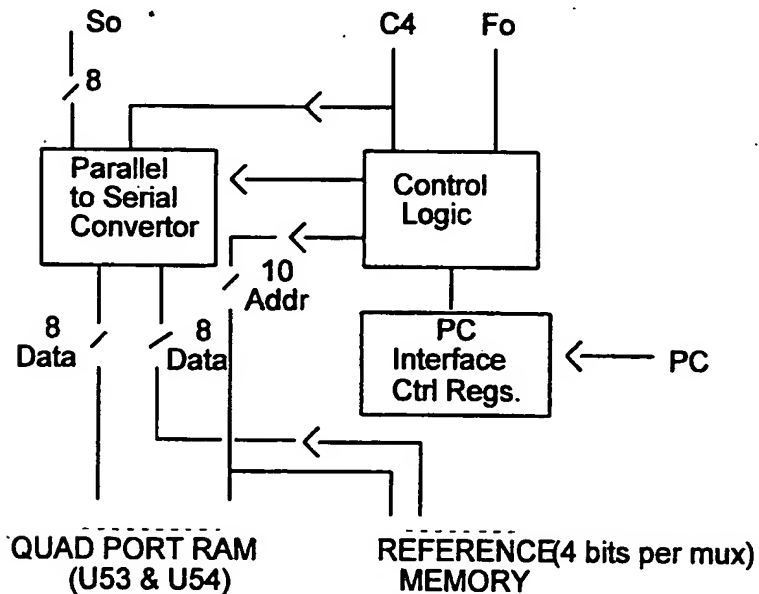

20

Fig. 4-6 Functional Block : MVIP TransmitPLD

- 25 **PC-Host Interface** This interface consists of one control register shown in Figures 4-5, for controlling and monitoring the Transmit Interface. The transmit control register as illustrated in figure 4-5, has similar functions to its counterpart in the Receive section.

-104-

Parallel to Serial Converter

This circuit is responsible for converting byte parallel data to bit serial data format for output onto the MVIP Bus. The logic for this function is the reverse of the Receive Circuit.

5

Control Logic

This circuit generates addresses and performs two data fetches from quad port (transmit buffers) and the 'steering' or reference dual port RAM.

Addr10	Addr9	Addr8	Addr7	Addr6 (PING) R	Master OE	Test Mode	RUN

10

Fig. 4-7 Tx Control Register (R/W IO Addr = 3400H + B/A)

Transmit Control Register

This register must be initialized appropriately by the PC Host.

- 15 This register is cleared to all '0's on power-up. A value of '1' indicated an active state. Bit 0, the 'RUN' bit is used to start or stop the Transmit 'State Machine'. The 'Test Mode' bit when active enables the four 'Test Output' line feedback to the MVIP Receive PLD. The 'Master Output Enable' bit enables the Transmit MVIP outputs to drive the MVIP bus. This bit must be inactive in 'Test Mode' but active in normal operation. The 'Addr6' bit is a read only bit which shows the status of the Address 6 line. This bit will 'toggle' when the MVIP Transmit State Machine is in the 'RUN' mode. Bits 4 to 7 of this register are used for
- 20 locating the base address of MVIP Transmit Buffer in the Quad Port RAM.

MVIP TRANSMIT BUFFER MEMORY ORGANIZATION

- 25 The MVIP Transmitter uses 2 Quad Port RAMS as the source of data which can be routed out to any of the 8 MVIP Bus output serial streams. The dual-port reference memory which provides the output routing information on a channel by channel basis is described in the next section.
- 30 The transmit buffer section of each Quad Port RAM is partitioned into four 32 byte buffer areas as shown in Figure 4-8. The transmit buffer may be located on any of the sixteen (16) 128 byte boundaries by programming Address lines 7,8,9 and 10 in the MVIP Transmit Control Register (Fig. 4-5).
- 35 The MVIP Transmitter will alternately transmit ('ping-pong') the buffer start address (0 and 40H in Fig. 4-8) on a frame by frame basis. Bit 3 of the Transmit control register when read by the PC will indicate the current transmit buffer. The Transmit 'PingPong' status is reflected by Address Line 6(TAD6) which is connected to the XFO flag pin at each C31 processor. Each Node processor can hence track and output to the appropriate transmit
- 40 buffer.

Each of the 32 bytes of the transmit buffer corresponds to the 32 time slots available on each of the 8 MVIP bus lines. The contents of the MVIP Transmit references memory determines which time slots and lines are to be driven.

45

-105-

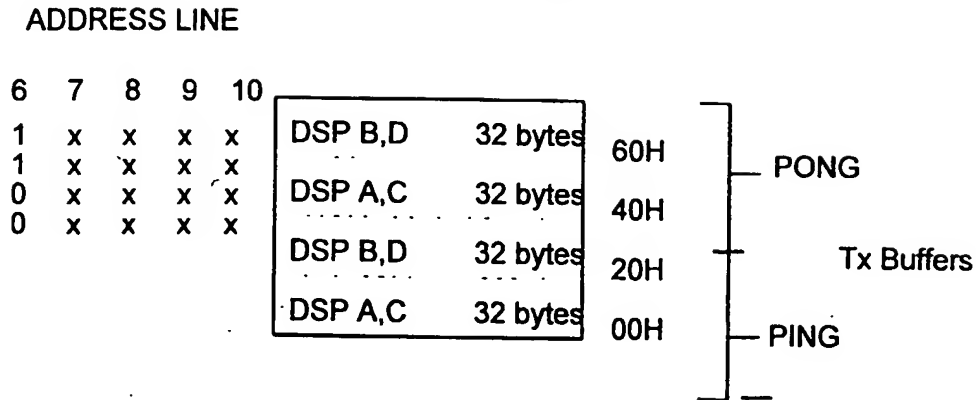


Fig. 4-8 Transmit Buffer Organization

5 MVIP TRANSMIT DUAL PORT REFERENCE MEMORY

This Dual Port Reference RAM is accessible by both the PC and the MVIP Transmit Control Logic. This steering memory should be initialized for each channel ('transmit byte time slot') as shown in Figure 4-11.

- 10 The dual port reference memory is partitioned into two 32 byte reference buffers as shown in Figure 4-9 below. This reference buffer is fixed at location 0 within the reference memory. Proper setup of this reference memory (from PC Host) allows data from the any DSP Processor to be steered onto any channel (time slot) of any of the 8 output MVIP lines. The bit format of each byte the reference memory is shown in Figure 4-10.

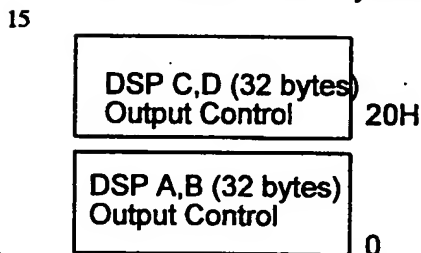


Figure 4-9 MVIP Transmitter Reference Memory Organization

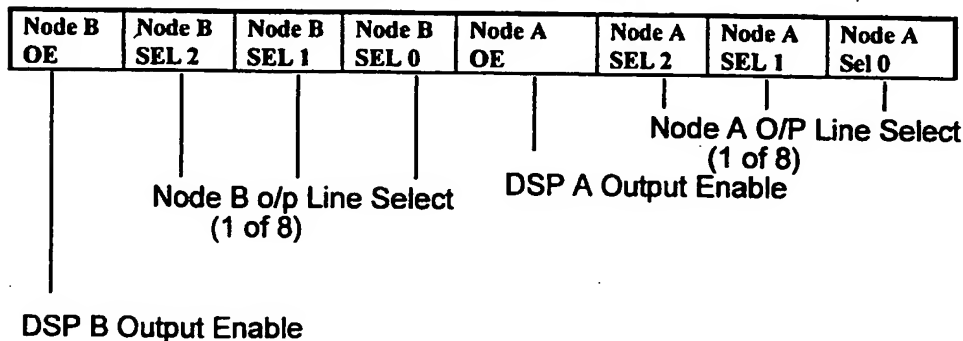


Figure 4-10 DSP A & B Output Control Byte Format

REFERENCE MEMORY SET-UP EXAMPLE

5 An example of a fill pattern for the TX MVIP reference memory as seen by the PC Host is illustrated by Fig. 4-11 below. The value of 98H for the first 32 bytes (0 to 1FH) directs the output of the (Quad Port RAM based) Transmit Buffers for Nodes A and B to MVIP Lines 0 and 1 respectively. All output channels (time slots) are driven. The value of BAH in bytes 20H to 2FH directs the output of Transmit Buffers for Nodes C and D to MVIP Lines 2 and 3 respectively.

10

By setting up the reference memory appropriately, any byte from the Transmit Buffers can be directed to any channel (time slot)-of anyone of 8 MVIP Transmit Lines.

15

```
BA-FF BA-FF BA-FF BA-FF BA-FF BA-FF BA-FF BA-FF 2FH
BA-FF BA-FF BA-FF BA-FF BA-FF BA-FF BA-FF BA-FF
BA-FF BA-FF BA-FF BA-FF BA-FF BA-FF BA-FF BA-FF
BA-FF BA-FF BA-FF BA-FF BA-FF BA-FF BA-FF BA-FF 20H
```

20

```
98A-FF 98-FF 98-FF 98-FF 98-FF 98-FF 98-FF 98-FF 1FH
98A-FF 98-FF 98-FF 98-FF 98-FF 98-FF 98-FF 98-FF
98A-FF 98-FF 98-FF 98-FF 98-FF 98-FF 98-FF 98-FF
98A-FF 98-FF 98-FF 98-FF 98-FF 98-FF 98-FF 98-FF 0
```

Figure 4-11 Sample Reference Memory Fill Pattern

-107-

1. Host Software Environment

The Host Application software consists of individual processes running under VENIX/386

3.2. This operating system was chosen for a number of reasons:

- | | | |
|----|----------------|--|
| 5 | UNIX standard: | VENIX conforms to the standard AT&T system V interface spec. (they are a source licensee of AT&T). This allows our software to conform to the industry standard (SVID). It also allows us to add "shrink wrapped" software in the future if needed (i.e. database, X-Windows support). |
| 10 | Networking: | VENIX supports standard TCP/IP and NFS implementations. This can be used both as a development tool, and can be integrated into the software for future applications (i.e. communicating to, monitoring multiple bridges). |
| 15 | Real Time: | VENIX has a pre-emptable kernel. This way, our software can respond appropriately to real time external events |

2. Data Flow Diagram

See Attached Data/Control Flow Diagram.

3. InterProcess Communications

This is a "message driven" system. Each process is assigned an input message queue. Receipt of a message will "wake up" a process if it is sleeping. Message sending/receiving will follow the standard UNIX guidelines for message passing between processes.

3.1 Standard Message Format

- | | | |
|----|-------------------|---|
| 25 | Source Process ID | Identifies which process sent the message. Each process is assigned a specific "process ID" that will be recognizable by all the other processes. These IDs are assigned at initialization time, and not the same as the UNIX PID. |
| 30 | Priority | Normal or High. High priority messages will get placed ahead of normal priority messages in the destination process's queue. |
| | Tag | 0= no response needed to this message; Nonzero= REPLY expected upon completion of operation (for example, digits dialed successfully). This tag number would be included in the REPLY message. This way, the sending process would know which message was being acknowledged. |
| 35 | MSGTYPE | The high byte of the message ID.
CF_COMMAND identifies this message as a low-level command to initiate some action for a channel, or list of channels. |
| 40 | | CF_EVENT identifies this message as one that is generated by an asynchronous event (i.e. a T1 line seizing in).
CF_REPLY identifies this message as a response to a command (i.e. dialed digits completed). |

-108-

CF_GENCMD identifies the message as a general conferencing command to initiate action for channel(s) or conference(s).

CF_HLCMD identifies the message as a high-level command. These commands typically get translated into multiple low-level commands.

CF_APPCMD identifies the message as an application-level command. These commands typically place an entire conference (or the system) into a particular state of operation. The low byte of the message ID. This identifies the actual message.

10 **MESSAGE**

wParam

Parameter word. Usage depends on the values in the CMD field.

lParam

Parameter long. Usage depends on the values in the CMD field.

15 **data**

Optional data field. Usage depends on the values in the CMD field.

3.2. Conference Messages

The following is a list of message descriptions. The following rules apply:

20

"Channel" refers to the logical channel number (LCN). LCNs get translated to MVIP timeslots by the various processes that deal with them. LCNs are expressed as hex numbers (0-255).

25

DIGITDATA refers to a data structure that contains DTMF digits. This is a null terminated ASCII string of digits (0-9, A-F).

CHANDATA refers to a data structure that contains a list of LCNs. This is a series of LCNs terminated by a -1:

30

3.2.1. Low Level Command Messages

Disconnect Out

35

Description: Physically hang up the line (i.e. go onhook). No DataBase update.

Destination Process: T1 Handler

MSGTYPE: CF_COMMAND

MESSAGE: CMD_DISCONNECT

wParam: channel (LCN)

lParam: -

40

Data: -

Seize Out

45

Description: Seize a line (i.e. go offhook). When this command is issued prior to dialing out, it acts as an offhook. When this command is issued in response to a Seize In event, it answers the line.

Destination Process: T1 Handler

MSGTYPE: CF_COMMAND

MESSAGE: CMD_SEIZE_OUT

wParam: channel (LCN)

50

lParam: -

Data: -

-109-

Fault Line	
5	Description: This command is a "toggle". The first time it is sent, it faults out a T1 line. This causes a "seize out" on this line, so it will appear to be offhook. The next time this command is sent, the line is placed back onhook. Destination Process: T1 Handler MSGTYPE: CF_COMMAND MESSAGE: CMD_FAULT wParam: - lParam: - Data: CHANDATA channel list
Hookflash Out	
15	Description: Initiate a hookflash on a line. Destination Process: T1 Handler MSGTYPE: CF_COMMAND MESSAGE: CMD_HOOKFLASH wParam: channel (LCN) lParam: - Data: -
Mute Line	
25	Description: This command is a "toggle". This command either connects or disconnects the "mouthpiece" of the specified line to/from the "earpieces" of the rest of the lines in the conference. Destination Process: DSP Command Processor MSGTYPE: CF_COMMAND MESSAGE: CMD_MUTE wParam: - lParam: - Data: CHANDATA channel list
Gain	
35	Description: This command either turns on or off the automatic gain control for a line. Destination Process: DSP Command Processor MSGTYPE: CF_COMMAND MESSAGE: CMD_GAIN wParam: On/Off flag lParam: - Data: CHANDATA channel list
Put Line Into Conference	
45	Description: Place line into a conference. This automatically removes the line from any previous conference it was in. This essentially connects the "earpiece" of this line to the "mouthpieces" of all the other lines in the specified conference. If this line is not muted, it also connects the "mouthpiece" of this line to the "earpieces" of all the other lines in the specified conference. Music can be played to this line as well. If music is played, the channel is automatically muted.
50	Destination Process: DSP Command Processor MSGTYPE: CF_COMMAND MESSAGE: CMD_PUT_INTO_CONF wParam: Music On/Off flag lParam: conference number Data: CHANDATA channel list
55	

-110-

Play Tone
 Description: Generates the specified tone to the specified channel(s)
 Destination Process: DSP Command Processor
 5 MSGTYPE: CF_COMMAND
 MESSAGE: CMD_PLAY_TONE
 wParam: Tone ID
 lParam: -
 Data: CHANDATA channel list
 10

Play Announcement
 Description: Plays a specified digitized voice message to the specified annunciator channel.
 Destination Process: Annunciator
 15 MSGTYPE: CF_COMMAND
 MESSAGE: CMD_PLAY_ANNUN
 wParam: message number (predefined to specific filename)
 lParam: -
 Data: **Annunciator channel number:** Specifies the dedicated annunciator channel that the message will be played to. Any line that is to hear this message must have previously been placed into conference with this channel.
 20 **Filespec:** Complete UNIX filename (including path) of file that contains the digitized voice data to be played.
 25 **Mode:** Single Play or Continuous Play. Continuous Play will cause the message to be repeatedly played until a Stop Announcement command is issued.

Record Announcement
 30 Description: Records a digitized voice message on the specified annunciator channel. Records until a Stop Announcement command is received, or the duration has expired.
 Destination Process: Annunciator
 35 MSGTYPE: CF_COMMAND
 MESSAGE: CMD_RECORD_ANNUN
 wParam: message number (predefined to specific filename)
 lParam: -
 Data: **Annunciator channel number:** Specifies the dedicated annunciator channel that will be used to record the message. The line that is "speaking" the voice message (typically an operator) must have previously been placed into conference with this channel.
 40 **Filespec:** Complete UNIX filename (including path) of file that will receive the recorded digitized voice data. If the file exists, it is overwritten. If not, it is created.
 45 **Duration:** Maximum duration of message (in seconds)

Stop Announcement
 Description: Stops the playing or recording of a digitized voice message on the specified annunciator channel. This will, in turn, trigger an Announcement Done event message for that channel.
 50 Destination Process: Annunciator
 MSGTYPE: CF_COMMAND
 MESSAGE: CMD_STOP_ANNUN
 wParam: annunciator channel number
 55 lParam: -
 Data: -

-111-

	Dial DTMF Digits	
	Description:	Outpulses DTMF digit(s) on specified line.
	Destination Process:	DSP Command Processor
	MSGTYPE:	CF_COMMAND
5	MESSAGE:	CMD_DIAL_DTMF
	wParam:	channel (LCN)
	lParam:	-
	Data:	DIGITDATA digit string
10	Start Timer	
	Description:	Start a timer. When the specified duration has elapsed, the sending process will receive a Timer Complete event message, containing the specified tag value. Many different timers (TBD) can be running concurrently. If a process needs to have multiple timers running, they must each contain a different tag value.
15	Destination Process:	Timer
	MSGTYPE:	CF_COMMAND
	MESSAGE:	CMD_START_TIMER
	wParam:	auto-repeat flag
20	lParam:	duration (increments of 100ms)
	TAG:	Tag value: Sending process assigns this value so it knows which timer has completed upon receipt of a Timer Complete event message.
	Data:	-
25	Stop Timer	
	Description:	Stops the specified timer. If this message is sent before the timer's duration has elapsed, no Timer Complete event message will be sent for that timer.
30	Destination Process:	Timer
	MSGTYPE:	CF_COMMAND
	MESSAGE:	CMD_STOP_TIMER
	wParam:	-
	lParam:	-
	TAG:	Tag value (matches the one specified in the Start Timer message)
35	Get T1 Statistics	
	Description:	Obtain current settings of T1 network management statistics. These values consist of cumulative data collected since the last time the statistics were reset.
40	Destination Process:	T1 Handler
	MSGTYPE:	CF_COMMAND
	MESSAGE:	CMD_GET_T1_STATS
	wParam:	starting line (?) (or T1 span?)
	lParam:	ending line (?)
45	Data:	T1 network statistic data (format TBD)
	Reset T1 Statistics	
	Description:	Resets the T1 network management statistics
	Destination Process:	T1 Handler
50	MSGTYPE:	CF_COMMAND
	MESSAGE:	CMD_RESET_T1_STATS
	wParam:	starting line(?) (or T1 span?)
	lParam:	ending line (?)
	Data:	-
55		

-112-

3.2.2. Asynchronous Event Messages

5	Seize In	
	Description:	This event message is sent when incoming line seizure is detected (i.e. someone has dialed in on a particular line). It is also sent when the far end has answered in response to our dialing out.
	Destination Process:	Call Handler
	Priority:	Normal
	MSGTYPE:	CF_EVENT
10	MESSAGE:	EVENT_SEIZE_IN
	wParam:	channel (LCN)
	lParam:	-
	Data:	-
15	Disconnect In	
	Description:	This event message is sent when far end disconnect has been detected on a line (i.e. the far end has gone onhook).
	Destination Process:	Call Handler
	Priority:	Normal
20	MSGTYPE:	CF_EVENT
	MESSAGE:	EVENT_DISCONNECT
	wParam:	channel (LCN)
	lParam:	-
	Data:	-
25	DTMF Digit(s) In	
	Description:	At least one DTMF digit has been received on a particular line.
	Destination Process:	Call Handler
	MSGTYPE:	CF_EVENT
30	MESSAGE:	EVENT_DTMF_DIGIT
	wParam:	channel (LCN)
	lParam:	-
	Data:	DIGITDATA digit string
35	DSP Failure	
	Description:	A failure has been detected on a DSP processor. This may mean that voice data is no longer being processed for the specified channels.
	Destination Process:	Call Handler
40	MSGTYPE:	CF_EVENT
	MESSAGE:	EVENT_DSP_FAILED
	wParam:	-
	lParam:	-
	Data:	CHANDATA channel list
45	T1 Alarm Set	
	Description:	A T1 alarm condition has been detected for the specified channels.
	Destination Process:	Call Handler
	MSGTYPE:	CF_EVENT
50	MESSAGE:	EVENT_T1ALARM_SET
	wParam:	type of alarm (red, yellow)
	lParam:	-
	Data:	CHANDATA channel list
55	T1 Alarm Clear	
	Description:	The T1 alarm condition for the specified lines has been cleared.
	Destination Process:	Call Handler
	MSGTYPE:	CF_EVENT

-113-

MESSAGE: EVENT_TIALARM_CLEAR
 wParam: type of alarm (red, yellow)
 lParam: -
 Data: CHANDATA channel list

5

Line Clear
 Description:

10

This event message is sent in response to a Disconnect Out command. Typically, when a line goes onhook, there is a "guard time" that must elapse before it can go offhook. Thus, when a Disconnect Out is executed for a line, one should wait for the Line Clear event message before attempting to seize out on the line again.

Destination Process: Call Handler
 MSGTYPE: CF_EVENT
 MESSAGE: EVENT_LINE_CLEAR
 wParam: channel (LCN)
 lParam: -
 Data: -

15

3.2.3. Reply Messages

20

Announcement Done
 Description:

25

This message is sent when the playing of an annunciator message has completed (in response to a Play Announcement command). This means that the specified annunciator channel is now available to play another message. It is also sent when the recording of an annunciator message has completed, either by timing out or the sending of a Stop Announcement command.

Destination Process: Call Handler
 MSGTYPE: CF_REPLY
 MESSAGE: REPLY_ANNUN_DONE
 wParam: annunciator channel
 lParam: -
 Data: -

30

Hookflash Done
 Description:

40

This message is sent in response to a Hookflash Out command. Typically, a hookflash takes about 500ms to 750ms to complete. This message informs the sending process that the hookflash has completed.

Destination Process: Call Handler
 MSGTYPE: CF_REPLY
 MESSAGE: REPLY_HOOKFLASH_DONE
 wParam: channel (LCN)
 lParam: -
 Data: -

45

Timer Complete
 Description:

50

This message is sent in response to a Start Timer command. This informs the sending process that the duration specified in the Start Timer command has elapsed.

Destination Process: Call Handler
 MSGTYPE: CF_REPLY
 MESSAGE: REPLY_TIMER_DONE
 wParam: -
 lParam: -
 TAG: tag (corresponds to the value specified in Start Timer message)
 Data: -

55

Dial Done

-114-

Description: This message is sent in response to the Dial Out command. This informs the sending process that the DTMF oupulsing has completed. It does not, however, indicate that the far end has answered.

Destination Process: Call Handler
MSGTYPE: CF_REPLY
MESSAGE: REPLY_DIAL_DONE
wParam: channel (LCN)
lParam: -
Data: -

3.2.4. General Commands

Hangup Channel(s)

Description: Tells the Call Handler to generate Disconnects to the specified channels. This also causes the Database entries for each channel to be updated (i.e. channels taken out of conferences).

Destination Process: Call Handler
MSGTYPE: CF_GENCMD
MESSAGE: CMD_HANGUP
wParam: -
lParam: -
Data: CHANDATA channel list

Toggle Music

Description: Tells the Call Handler to turn music on/off for a particular conference. This causes the the Call Handler to generate PUT INTO_CONF messages for each channel in the conference with the music flag set appropriately.

Destination Process: Call Handler
MSGTYPE: CF_GENCMD
MESSAGE: CMD_TOGGLE_MUSIC
wParam: Conference number
lParam: -
Data: -

Transfer Channel

Description: Causes a channel to be transferred from one PBX line to another. The Call Handler initiates the transfer by hookflashing and dialing the supplied dtmf digits (the new extension).

Destination Process: Call Handler
MSGTYPE: CF_GENCMD
MESSAGE: CMD_TRANSFER
wParam: channel (LCN)
lParam: -
Data: DIGITDATA digit string

Restore Previous Conference

Description: When the operator accesses a channel, that channel is placed into an operator conference. When that happens, the number of the conference that the channel was in is saved. This command places the channel back into that conference.

Destination Process: Call Handler
MSGTYPE: CF_GENCMD
MESSAGE: CMD_REST_PREV_CONF
wParam: channel (LCN)
lParam: -
Data: -

3.2.5. High Level Commands

5	Blast Dial	
	Description:	Initiates a Blast Dial sequence. Basically, the Call Handler finds a free outgoing line, places the operator into conference with it, and dials all the numbers in the specified list.
	Destination Process:	Call Handler
	MSGTYPE:	CF_HLCMD
	MESSAGE:	CMD_BLAST_DIAL
10	wParam:	index into dialing lists
	lParam:	-
	Data:	-
15	Hang Up Conference	
	Description:	Hangs up all the channels in a conference, and takes them all out of the conference.
	Destination Process:	Call Handler
	MSGTYPE:	CF_HLCMD
	MESSAGE:	CMD_HANGUP_CONF
20	wParam:	conference number
	lParam:	-
	Data:	-
25	Purge Disconnects	
	Description:	When a channel hangs up or is disconnected, it cannot be used again until it is "cleared". This command clears all the disconnects for a specified conference.
	Destination Process:	Call Handler
	MSGTYPE:	CF_HLCMD
30	MESSAGE:	CMD_PURGE_DISC
	wParam:	conference number (-1 = all conferences)
	lParam:	-
	Data:	-
35	Operator Play Annunciator Message	
	Description:	This sets up an annunciator conference with the specified operator, and initiates a Play Message sequence. The annunciator channel is allocated dynamically.
	Destination Process:	Call Handler
40	MSGTYPE:	CF_HLCMD
	MESSAGE:	CMD_OP_ANN_PLAY
	wParam:	operator channel (LCN)
	lParam:	annunciator message number
	Data:	-
45	Operator Record Annunciator Message	
	Description:	This sets up an annunciator conference with the specified operator, and initiates a Record Message sequence. The annunciator channel is allocated dynamically.
	Destination Process:	Call Handler
50	MSGTYPE:	CF_HLCMD
	MESSAGE:	CMD_OP_ANN_REC
	wParam:	operator channel (LCN)
	lParam:	annunciator message number
55	Data:	-

Operator Stop Annunciator Message

-116-

Description: This command stops the playback or recording of an annunciator message with the specified operator.
 Destination Process: Call Handler
 MSGTYPE: CF_HLCMD
 5 MESSAGE: CMD_OP_ANN_STOP
 wParam: operator channel (LCN)
 lParam: -
 Data: -

10 **Set Nighttime Mode**
 Description: Enabling this mode tells the Call Handler to ignore all incoming line seizures. Disabling it tells the Call Handler to use the original configurations for each channel.

15 Destination Process: Call Handler
 MSGTYPE: CF_HLCMD
 MESSAGE: CMD_SET_NIGHT_MODE
 wParam: Enable/Disable
 lParam: -
 Data: -

3.2.6. Application Level Commands

Place Conference Into Lecture Mode
 25 Description: This command basically mutes all the channels in a conference except that of the moderator. This can be enabled or disabled.

Destination Process: Call Handler
 MSGTYPE: CF_APPCMD
 MESSAGE: CMD_LECTURE_MODE
 wParam: conference number
 30 lParam: Enable/Disable
 Data: -

Place Conference Into Q & A Mode
 35 Description: This command basically sets up one moderator, enables digit recognition, and places conferees into the Q&A queue upon receipt of digit(s).

Destination Process: Call Handler
 MSGTYPE: CF_APPCMD
 MESSAGE: CMD_QA_MODE
 wParam: conference number
 40 lParam: Enable/Disable
 Data: -

Place Conference Into Polling Mode
 45 Description: This command basically sets up a moderator, enables digit recognition, and collects digits into various queues.

Destination Process: Call Handler
 MSGTYPE: CF_APPCMD
 MESSAGE: CMD_POLL_MODE
 wParam: conference number
 50 lParam: Enable/Disable
 Data: -

4. Host/DSP Interface

The host software will communicate to the DSP card(s) via the DSP Command Processor, the DSP Event Processor, and the DSP Driver. Refer to the individual descriptions of these
 55 processes for more information about them.

-117-

Each DSP card contains a block of dual ported RAM; 4k x 16 for each DSP processor. There are 4 DSP processors on each card (*refer to the DCB Block Diagram*). Each DSP processor handles 6 user channels. Each DSP processor also handles TBD annunciator channels, and TBD other internal channels. Thus, each 4k x 16 RAM is partitioned into areas to handle each channel. Each user channel area contains a data structure that describes the current state of the channel. This data structure will be defined as part of the Host/DSP design.

When an asynchronous event occurs (i.e. digit reported by the DSP), the DSP processor that handled the event will generate an interrupt. This will cause the card containing that DSP processor to generate an interrupt to the host (i.e. UNIX). The DSP Driver will process the interrupt. It will figure out which channel the interrupt occurred on, and signal the Event Processor, passing the channel number to it. The Event Processor, having the channel number, will look at the channel data structure for that channel, and figure out what the event was (i.e. incoming digit). At that point, the Event Processor can do what it wants with the information (i.e. signal the Call Handler).

If the host software wants to initiate some action for a channel via the DSP, it does it via the DSP Command Processor. This process initiates action for that channel via the corresponding channel data structure in the shared 4k x 16 RAM for the DSP processor that handles that channel. The actual command processing and handshaking between the DSP Command Processor and the DSP will be defined as part of the Host/DSP design.

The Annunciator also has direct access to the 4k x 16 RAM for dedicated annunciator channels. This is described further in the process description for the Annunciator. The actual mechanism of how the data is passed will be defined as part of the Annunciator process design.

5. Global Data Base

Global (system-wide) data structures will be accessible by all processes. For example, multiple Operator Console processes will access this data base for any information they need for their respective console displays. The issue of "data locking" would need to be addressed (multiple processes accessing the same data). Some of the data structures that need to be defined are:

- * per-channel configuration & real-time data
- * global system configuration parameters
- * per-conference data structures
- * per-operator configuration data
- * lists (names, phone numbers, conferences)
- * network management stats (gathered from T1 card)
- * partial CDR records
- * raw report data (conference & channel stats)

6. Conference Assignments

A conference is a virtual grouping of MVIP channels. Any channel within a conference is "connected" to all other channels within the same conference. Channels may individually be set to talk, listen, or both. If a channel is set to talk, its mouthpiece is broadcast to all the other channels in the conference. If a channel is set to listen, its earpiece is connected to all

-118-

other channels in the conference. Typically, a channel is always set to listen. However, it may be "muted", meaning that its mouthpiece is disconnected from the other channels.

The following conferences are predefined for various functions:

5

Conf. Assignment

- | | |
|------------|---|
| 0 | Quiet (no talkers). Channels are placed into this conference by default, when they are not connected to any other channel. |
| 1 - 48 | User conferences. These are the 48 conferences that are managed by the operators. |
| 10 49 - 56 | Annunciator. Each annunciator channel has a conference reserved for it. Any channel(s) listening to an annunciator message will be placed into one of these conferences. |
| 15 57 | Enter Conference. All channels that have "entered" the system are placed into this conference. This happens after a user has listened to an annunciator message. A music (or radio) channel is placed into this conference (permanently) so that users who enter this conference have something to listen to while they're waiting for an operator. |
| 20 58 | Input Conference. Any channel that calls into the system when no annunciator channels are available is placed into this conference. A music channel is permanently placed into this conference. The channel stays in this conference until an annunciator channel is available. Then it is placed into that annunciator's conference. |
| 25 59 - 66 | Operator Conference. Each operator (up to 8) is assigned one of these conferences. When an operator accesses a channel, it is placed into its corresponding operator conference with that channel. |

7. Error Handling

In this initial implementation of the DCB-60, our strategy is to detect errors whenever they occur. The process that detects the error will log an error message to the system error log file. In this release, we will not try to take corrective action. There are 3 levels of errors that we are concerned with:

"Normal" Hardware Errors: These are errors that we expect to happen every now and then, such as T1 alarms. The Call Handler can detect these conditions and take appropriate action, such as faulting out the affected T1 lines.

"Unexpected" Hardware errors: These are more serious hardware failures such as an interface card that fails to respond properly, or a DSP processor crashing. Our current strategy is to periodically "poll" our hardware interfaces. If we detect a failure, we will log the error, and take the affected lines out of service. We will not attempt to restart or reinitialize any faulty hardware component.

Software errors: In the unlikely event of a software error, the detecting process will log the error (if possible). These types of errors include: A process receiving an unexpected message type; A software condition that should not be met, etc. Another type of software error is when a process fails to respond to a poll from the Diagnostic process. In this case, the Diagnostic process would log an error message.

-119-

8. Process Descriptions

Note: The Data and Control flow is described for each process (w.r.t. the data flow diagram).
Type is listed as follows:

- 5 D Data flow
- C Control flow
- O Output from process
- I Input to process

8.1. Initialization Process

- 10 To begin with, we need to at least initialize & download code to the DSP and T1 cards. We need to set up the control RAM on the DSP (at least with some default configuration). This should have been done in the DSP Loader. Later, we can add more functionality to Init, such as starting up individual processes, initializing the global data areas, reading config data from disk, and eventually, some warm restart capability. This process will have to pay close
- 15 attention to any special requirements of Embedded VENIX.

This process could consist of 2 processes. The 1st would be the UNIX initialization process. This process is run once at system start up (boot). It performs all UNIX initialization. It then loads the 2nd init process. This would be the application init. This would load and start up the

20 appropriate application processes. It would determine if this was a cold or warm restart. Based on this, it would initialize all processes and data structures accordingly. For a cold restart, it would initialize and load all configured hardware (T1 card, DSP card(s), analog card(s), etc.). For a warm restart, it would have to "regenerate" some data structures from these cards (i.e. DSP cards' channel arrays and conference list).

25

	<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
	Analog Config Info	D,O	Data used to configure the analog interface cards
	Init Analog Card	C,O	Commands sent to analog interface cards to initialize them.
30	DSP Config Info	D,O	Data used to configure DSP card(s). This would include the code downloaded to the cards to run the DSP processors. Also, the dual port control RAM data that maps the MVIP channels to their TDM time slots.
	DSP Config Info	D,I	Data read from the dual port 4k x 16 RAM buffers on the DSP cards in the case of a warm restart.
35	Init DSP Board	C,O	Commands sent to DSP cards to initialize and start them.
	T1 Config Info	D,O	Data used to configure T1 interface cards.
	Init T1 Card	C,O	Commands sent to T1 interface cards to initialize and start them.
40	Config Info	D,I	System configuration data read from disk. This data is used to configure all hardware interface cards, and the system's Data Base.
	Start Process	C,O	This is the UNIX control mechanism that is used to start up the individual processes.
45			

8.2. DSP Driver

-120-

Assuming that a driver must be written to handle the interaction between the DSP and the host, this work would be done here. A probable design scenario would be as follows: The DSP would interrupt on some real-time condition (i.e. active talker). The driver would handle the interrupt, passing data and signaling the Event Processor of this condition. The Event Processor would then notify the appropriate process(es) accordingly. This minimizes the amount of time spent in the driver, allowing the user-mode processes to do most of the work.

The driver would have access to the shared RAM on the DSP card(s). This way, it could pass the channel number of the interrupting channel to the Event Processor. This would be sufficient for most event handling. Once the channel number is passed, the Event Processor could get any other information it needs from the channel data structures on the DSP card itself.

<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
Channel Event	C,I	This is the interrupt that occurs when an individual DSP processor wishes to report an asynchronous event. Examples of this are digit(s) in, talk indication.
Channel Info	D,O	Information about the channel for which the event occurs (typically the channel number).

8.3. DSP Command Processor

This process receives commands from various processes to initiate actions for a particular DSP channel. It sends the proper command to the appropriate DSP. It should not send a command for a particular channel unless that channel is ready to process it (i.e. the DSP may not be finished processing the previous command for the channel). Thus, this process could "buffer" multiple commands for a particular channel while performing an "ack/nak" procedure with the DSP for each command.

This process would "sleep" until it is woken up by receipt of a message.

We may want to build into this process a "statistics" area that keeps counts & other info about the commands that are sent to the DSP. This could be useful for later debugging, or general information gathering (i.e. system performance, loading, etc.).

This process should be able to run in a "simulation" mode. In this mode, it would send commands to the Application Test process instead of the DSP card. It would get its channel status information from this process rather than the channel data structures in shared RAM on the DSP card.

<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
Channel Commands	C,I	These are the commands that are intended to initiate some action for a channel via the DSP. For example, place a channel into a conference, dial digits, adjust gain, etc.
Channel Info	D,I,O	This is the data portion of a channel command. This may include the channel number, digits to be dialed, etc.

-121-

Send Channel Command C,O This is the mechanism used to communicate a channel command to the DSP. Refer to the Host/DSP interface for more details.

8.4. DSP Event Processor

- 5 This process handles events reported "up" from the DSP card(s). Typically, when an external event occurs asynchronously (i.e. active talker, dtmf digit detected), the affected DSP card will interrupt. The driver will field this interrupt, and notify the DSP Event Processor. The Event Processor will then obtain the appropriate information from the channel data structure in shared RAM on the DSP card. It will then take the appropriate action (i.e. send a message to the Call Handler Process, or modify a data structure in the Global Data Base, then signal the Operator Console Processes, etc.).

This process would "sleep" until it is woken up by receipt of a message, or a signal.

- 15 We may want to build into this process a "statistics" area that keeps counts & other info about the events that were detected from the DSP. This could be useful for later debugging, or general information gathering (i.e. system performance, loading, etc.).

- 20 This process should be able to run in a "simulation" mode. In this mode, it would respond to messages & signals from the Application Test process instead of interrupts from the DSP card. It would get its channel status information from these messages rather than the channel data structures in shared RAM on the DSP card.

	<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
25	Channel Event (in)	C,I	This is the message (or signal) that tells the Event Processor that an event has occurred on the DSP that needs attention.
	Channel Event (out)	C,O	This is the message that is sent to the Call Handler to inform it that an asynchronous event has occurred (i.e. digit in).
30	Channel Info	D,I,O	This is the data that is included in a channel event message. Input from the DSP Driver, it may only contain the channel number. Output to the Call Handler, it may contain digit(s), etc.
35	Talk Indication	C,O	This message is sent to all active Operator Console processes when reported by the DSP Driver.

8.5. T1 Handler

- 40 The 1st phase of development of the T1 handler is detection of far-end answer, incoming line seizure, or far end disconnect. It would also have to invoke outgoing line seizure, disconnect, and answer. This part of the process would periodically gather the A/B bits from the T1 card's registers. It would determine if answer, line seizure, or disconnect has occurred for any channel. If so, it would send a message to the Call Handler process. To invoke action for a channel, the appropriate A/B bit combination for that channel would be written to the card.

- 45 The second part of the T1 Handler process collects data from the T1 card and stores it in the Data Base. The frequency at which data is collected is TBD (per call? Per event? periodically?). The data is comprised of T1 statistical data, stored in the card's registers. The

-122-

data collected would be available to the Reports process. The actual mechanics of how this data is gathered will depend on what the Mitel card can offer us.

- 5 We may want to build into this process a "statistics" area that keeps counts & other info about the data collected from the T1 card. This could be useful for later debugging, or general information gathering (i.e. system performance, loading, etc.).

	<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
10	Incoming Line Seizure	C,O	Sent to the Call Handler when incoming line seizure has been detected for a channel on a T1 card (i.e. someone dialed in). Typically, the channel number is passed as data.
15	Outgoing Line Seizure	C,I	The Call Handler sends this message to the T1 Handler when it wants to "seize out" on a line, in preparation to dial out. It can also use this to "fault" a line.
	Far End Disconnect	C,O	Sent to the Call Handler when disconnect has been detected for a channel on a T1 card (i.e. someone went onhook - hung up).
20	Disconnect	C,I	The Call Handler sends this message when it wants to go onhook (i.e. hang up) for a particular T1 channel.
	Answer Detected	C,O	Sent to the Call Handler when an offhook (i.e. answer) is detected for a channel on a T1 card.
25	Answer	C,I	The Call Handler sends this message when it wants to answer (i.e. go offhook) a particular channel. Typically, this is in response to an incoming line seizure.
	T1 Alarm	C,O	This message is sent to the Call Handler whenever an alarm condition (red, yellow) is detected on a T1 span.
30	T1 Stats	D,I,O	This consists of any statistical data that is kept by the T1 card. This would consist of periodically polled registers on the card. This data is formatted (TBD) and kept in the global Data Base.
	Obtain T1 Stats	C,O	This is the mechanism that this process uses to obtain T1 statistical data from the T1 card(s).
35	Update Net. Mgmt.	C,I	This message tells the T1 Handler to reset any counters etc. on the T1 card(s), and also, if nec. in the global Data Base.
40	A/B Bits	D,I	The T1 Handler will periodically read the A/B bits from the T1 card's registers. From this, it can determine incoming line seizure, far end disconnect, or far end answer. It can also write the A/B bits to invoke outgoing line seizure, disconnect, or answer.
	Hookflash	C,I	This message tells the T1 Handler to invoke a hookflash for the indicated channel.
45	Fault	C,I	This message tells the T1 Handler to "fault out" the indicated channel.

-123-

8.6. Annunciator Process

This process handles the recording and playing back of digitized voice messages. Special channels on the MVIP bus will be dedicated for Annunciator use. It keeps track of which annunciator channels are in use, and which ones are available. Upon initialization, this process will just load the messages from disk into a set of buffers (one for each message). When a message is to be played, it will just read it from RAM and send it to the DSP that is responsible for that particular annunciator channel. This eliminates real-time disk latency problems upon playback. We will probably change this in the future if we wish to add more messages for voice-response applications. The recording of messages will send the data to RAM and disk.

The actual mechanisms used to record & play digitized voice messages will be determined in the design of the Host/DSP Interface, and the Annunciator process. However, the general theory of operation is as follows:

Play A Message: This process receives a *Play Message* message for a selected annunciator channel. This process then populates a specified buffer on the 4k x 16 dual port RAM with a digitized voice message (from disk or host RAM), and signals the DSP that the data is there. The DSP then "plays" the data on the selected annunciator channel, and signals when the buffer has become available. Any channels in conference with that annunciator channel will hear the message. We will probably use a double-buffering scheme, so that the host can be filling one buffer while the DSP is playing the other buffer. The actual handshaking mechanism will be determined as part of the Host/DSP interface. When the Annunciator process has finished sending the digitized voice message, it sends a message to the Call Handler, indicating that the annunciator channel is available.

Record A Message: This process receives a *Record Message* message for a selected annunciator channel. This process then reads a specified buffer on the 4k x 16 dual port RAM, and stores it in host RAM and disk. It does this until the specified duration has expired or receipt of a Stop Record message. Again, a double buffering scheme would be used. The record procedure has a maximum duration of TBD seconds, for safety.

This process has the capability to inform the Call Handler process of the availability of annunciator channels. The Call Handler is signaled when 1) no channels are available, and 2) a channel has become available. This process will also stop playing a message when signaled to do so. Note that this will cause a "channel available" message to occur.

This process will have the capability of playing a message in "continuous play" mode. That is, it will play the same message over and over until it receives a message to stop.

<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
Digitized Voice (disk)	D,I,O	The input data is read from disk upon initialization, and stored in a local RAM buffer. It contains the digitized voice messages for each annunciator channel. The output data is stored to disk when annunciator messages are recorded.
Digitized Voice (DSP)	D,I,O	The input data is read from the appropriate DSP dual port RAM buffer while an annunciator message is being

-124-

recorded. The output data represents the digitized voice data sent to the DSP dual port RAM buffer while an annunciator message is being played.

5	Start/Stop Record	C,I	This message tells the Annunciator process to either start or stop the recording procedure for a designated annunciator channel.
10	Start/Stop Play	C,I	This message tells the Annunciator process to either start or stop the play procedure for a designated annunciator channel. This message may tell the Annunciator to play a message repeatedly until told to stop.
15	Channel Available	C,O	The Annunciator process sends this message to the Call Handler whenever an annunciator channel has finished playing a digitized message. It tells which channel has become available.

8.7. Call Handler

This process handles all calling scenarios for each channel. It keeps track of which state each channel is in, and takes the appropriate action depending on the input received concerning that channel, the state it is in, and its configuration at that time. Input can be received from an operator console action (i.e. dial a number, move a line from conf. x to conf. y), by the DSP Event Processor (i.e. receive digits, etc.), by the T1 Handler (offhook, line seizure, disconnect), or by the Annunciator (annunciator channels available - yes/no). Some real-time events (such as talk indication) can be reported by the DSP Event Processor directly to the Operator Console processes, without needing to bother this process.

This process operates on each configured channel according to a state diagram (TBD). When it receives input from another process pertaining to this channel, it will perform whatever action is called for, according to the type of message received, and the current state of the channel.

All channel information is updated in the central Data Base. The Operator Console processes are notified of any changes that require an update to the console display.

The state diagrams can be designed as "templates", so that they may be more easily modified to handle various calling scenarios in the future (i.e. unattended operation). Initially, these templates may just consist of some code and their associated data structures (i.e. "objects" ?). These would be maintained in house "by hand". In the future, we may want to develop a utility that configures these templates, so that call handling scenarios can be developed by 3rd party vendors (or the customers themselves?).

This process would "sleep" until it is woken up by receipt of a message.

<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
45 Channel Event	C,I	This tells the Call Handler that an event has occurred for a particular channel. It contains the necessary information for that channel about the event. For example, a Digit In message would contain the channel number and the digit(s).

-125-

	Channel Command	C,O	This message is sent to the Command Processor to initiate action for a particular channel. It contains the necessary information for that channel for the DSP to initiate the action.
5	Channel Available	C,I	Says that an annunciator channel has become available.
	Start/Stop Play	C,O	Tells the Annunciator to start or stop playing a digitized voice message.
	Channel Info	D,I,O	This represents any information about a channel that resides in the Global Data Base.
10	Console Update	C,O	Tells the Operator Console processes that some information about a particular channel has changed (in the Global Data Base).
	CDR Update	C,O	Tells the CDR process that a call on a particular channel has been completed. Passes all info for that call to the CDR process.
15	T1 Alarm	C,I	Alarm message from the T1 Handler. Call Handler may have to "fault" out a T1 span by seizing out on all 24 channels. Minor alarms may just have to be tracked.
20	Seize,Disconnect,Answer, Hookflash, Fault		<i>Described in T1 Handler process description.</i>

8.8. Login Process

A copy of this process is attached to each TTY port. Up to 8 TTY ports are used as functioning operator consoles. The others are used for maintenance, and admin functions. This process allows someone to log into the system as an operator, system administrator, or maintenance person. Depending on how one logs in, the corresponding process will be spawned from the Login process. For example, if the operator login is given, the Operator console process will be spawned from the Login process that is attached to that TTY port. Each TTY port capable of running the Operator Console process will be assigned to a specific analog port for its headset (voice path).

30	<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
	Maint. Login	C,O	Spawn Maintenance process. Only one Maint process allowed to run at any given time.
	Operator Login	C,O	Spawn Operator Console process. This process may be run on each TTY port.
35	Admin Login	C,O	Spawn Admin process. Only one Admin process allowed to run at any given time.

8.9. Operator Console Process

This process maintains the operator console screen, and handles all interaction with the operator. It responds to keystrokes from the operator, and sends messages to other processes, informing them of action initiated by the operator (i.e. place a line into a conference). It maintains the "state" of the console, depending on which keystrokes have been hit (i.e. how many lines are displayed, which status display is active, which menu are we in). It also updates the console according to messages it receives from other processes (i.e. show active talker).

-126-

Multiple copies of this process may be running to support multiple operator consoles. Each Console process knows which data it must display (i.e. which channels, conferences, etc.). This data is made available by the "Data Base". Each Console process accesses the Data Base for whatever information it needs to store or retrieve.

5

The physical console itself would be any ASCII terminal that supports the necessary screen features (i.e. 43 line mode). Refer to the Product Specification for more details. We could use CURSES to provide a nice color operator console interface for the console if it were running an EGA/VGA monitor.

10

<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
Start/Stop Record	C,O	Starts/Stops the recording of a digitized voice message on a particular annunciator channel.
Channel Command	C,O	Initiates action for a particular channel on the DSP. Sent to either the Call Handler, or directly to the Command Processor.
Talk Indication	C,I	Indicates active talker currently on designated channel. Operator Console process must flash '*' next to channel if displayed.
Console Update	C,I	Information for designated channel has been updated. Console display must be updated to reflect new info. The channel info resides in the Global Data Base.
Channel Info	D,I,O	This represents any information about a channel that resides in the Global Data Base.
Hookflash	C,O	Tells T1 Handler to initiate hookflash for indicated channel.
Fault	C,O	Tells T1 Handler to fault out indicated channel.

8.10. Maintenance Console Process

This process allows various reports to be run. It also allows initializing of network management data. It allows the user to perform various system maintenance functions such as the formatting of diskettes, running diagnostics, etc. It does this by "wrapping a shell" around various UNIX utilities, if necessary, to shield the user from UNIX (we don't want to ship UNIX manuals with this product!). It also allows the operator console function to be run in a "display only" mode. In this mode, no voice path is provided, and no access to lines or conferences is allowed. Line and conference activity can only be monitored in this mode.

<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
Initiate Report(s)	C,O	Message sent to the Reports process. This initiates any reports to be printed (TBD).
Update Net. Mgmt.	C,O	Tells the T1 Handler to initialize any T1 network stats it happens to be keeping track of.

8.11. Administrator Console Process

This process allows various system configuration parameters to be set (per line, per conference, per operator, etc.). It also allows other system configuration such as the adding/deleting of user accounts and passwords. Disk backups may be performed here. It may do this the same way as in the Maintenance process (hiding UNIX from the user).

-127-

<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
Config Data	D,I,O	Represents System configuration data read or written to/from disk or the global Data Base.

5 8.12. Reports Process

This process generates all the required reports. It accesses data resident on disk, formulates reports, and prints them. The data that it uses was collected by other processes. This process may clear or initialize certain data after running a report (i.e. network management statistics). It may be beneficial to support various types of printers. This process could use UNIX to
 10 keep the actual printer type "transparent" (similar to the way different terminal types could be used for operator consoles).

<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
Raw Report Data	D,I	This represents any data stored in the global Data Base that must be formatted into reports. This data can be collected by any process.
Initiate Report(s)	C,I	Message sent to the Reports process. This initiates any reports to be printed (TBD).

20 8.13. Status/Error Logging

This process collects messages from other running processes. It formulates these messages into status or error logs. It writes these logs to disk file(s). Certain messages may need to be reported to the operator console(s). This could be done by sending a message to the desired operator console process queue. Other messages may need to go to the printer.
 25 Error logs can be generated by any process. A process may run into an error condition during the various phases of its operation. There are at least 2 categories of error conditions: (1) Internal software errors. These can be attributed to faulty data, conditions which shouldn't exist, and so forth. (2) System errors. These can be hardware faults, etc. Some errors may only need to be reported & logged, while others may require a system restart.

<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
Update Log	C,I	This message tells this process to update either the Status Log, or the Error Log.
Log Info	D,I,O	This is the log data that is part of the above message. It is formatted, and written to the disk log file(s).

40 8.14. CDR Process

This process collects CDR records from the Call Handler. These records are generated when a call is completed, and contain all the information needed to log the call (i.e. start/end time, channel #, dialed digits if outgoing). This process merely formats the record and writes it to a disk file. This process thus acts as a "buffer" for the Call Handler, eliminating the need for the Call Handler to access the disk.

<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
CDR Update	C,I	This message tells the CDR process that a call has completed for a particular channel. It contains all the information needed to log the call.

-128-

CDR Record

D,O This represents the formatted CDR records that are written to disk.

8.15. Diagnostics Process

- 5 This process periodically sends a message to each host process, just looking for an acknowledgment. If it gets an ACK, then it knows that the host process is running, or at least able to receive and respond to messages. If it doesn't receive an ACK, it will log an error message. In the future, it could kill & restart that process (individual process initialization becomes an issue here). Another (more undefined) thing it could do is to periodically execute
- 10 some real-time diagnostics on the various configured pieces of hardware that are installed.

It could execute the set of power-up diagnostics when the system is started from a cold boot. It could also execute some set of tests that could be run from the Maintenance menu. These all have to be defined in more detail before we can get into specifics.

15

<u>Data/Control Flow</u>	<u>Type</u>	<u>Description</u>
Poll Process	C,O	This message polls the destination process to see if it is running and able to respond.
ACK	C,I	This represents the ACK that would be received as a correct response to a Poll message.

20

8.16. Timer Services

- This process manages all of our system timers (maximum number TBD). When a process wants to know when a specific time duration has elapsed, it sends a Start Timer message to this process. A tag value identifies the timer, and is defined by the sending process. A
- 25 duration value is also set (increments of 100ms). This process allocates a timer, and decrements the timer every 100ms. When the timer has reached zero, it sends a timer event message, containing the tag value, to the sending process. If it receives a Stop Timer message from the process, it will stop the timer that contains the matching tag value. No timer event
- 30 message is sent in this case.

This process combines the tag value with the sending process's ID to identify the timer. This eliminates any problems with multiple processes using the same tag values.

- 35
- | <u>Data/Control Flow</u> | <u>Type</u> | <u>Description</u> |
|--------------------------|-------------|--|
| Start Timer | C,I | Starts a timer operation for the sending process. |
| Stop Timer | C,I | Stops a timer operation for the sending process |
| Timer Event | C,O | Sent to the sending process when the timer's duration has expired. |

-129-

1. Introduction

The principal areas for which the Digital Signal Processor (DSP) board and the host computer need to communicate are:

- DSP initialization,
- 5 • command and information exchange, and
- notification of events (digits in, talk indication, etc.) acquired by the DSP.

The DSP-Host interface design:

- specifies the commands and data structures that need to be exchanged,
- assigns the Dual Port Memory (DPM) locations used for these purposes, and
- 10 • relates the sequence of steps needed to initialize and to communicate with the DSP.

The global header files, *dsp_cnfg.h*, *dsp_host.h* and *dsp_regs.h*, contain manifest constants and macros defining the data structures, member values, DSP registers, register contents, and operations on the registers.

2. System Data

- 15 Most configuration information is maintained in the DPM. Per channel, per conference, and per DSP node information are supported. As used in this document, a node refers to that part of the system supported by a single DSP.

2.1. DPM Data Structures

Each DSP Node contains the following data structures:

- 20 A. Two Data Transfer Buffers (0 and 1) used for the transfer of voice data during record and playback operations each of size 2 KBytes located at DPM Addr. Seg.:0 and DPM Addr. Seg.:800, respectively. One semaphore each is used to control access to these buffers (see later section on semaphores).
- 25 B. An array of eight Channel Data Structures located at (DPM Addr Seg.:0x1000). Six of these structures are used for T1 channels, one is used by an annunciator or operator channel, and one is reserved for future use. Each structure member is two bytes (1 word) in size except as noted below. The structure is comprised as follows:
 - DPM Port (0-191) (initialized to the assigned port)
 - Command {see command section} (initialized to 0)
 - 30 • Error (TBD) (initialized to 0)
 - Event {see command section} (initialized to 0)
 - Mute (0-1) (initialized to 0)
 - Gain (0-1) (initialized to 0)
 - Music (0-1) (initialized to 0)
 - 35 • Time Slot Type {see type section} (initialized to 0)
 - Digits-in - ASCIIZ string 50 bytes max. (initialized to null string)
 - Digits-out - ASCIIZ string 50 bytes max. (initialized to null string)
- 40 C. Channel Conference List following the Channel Data Structure Array.
 - 192 (6 boards × 4 DPM's/board × 8 channels/DPM) entries sorted by channel (one word each containing the conference number)
- D. MVIP Time Slot List following the Channel-Conference List.
 - 192 (6 boards × 4 DPM's/board × 8 channels/DPM) entries sorted by channel (one word each containing the channel MVIP time slot)
- 45 E. Conference Number of Talkers List following the Channel MVIP Time Slot List.
 - 67 (48 user + 8 operator + 8 annunciator + 1 enter + 1 input + 1 null line conferences) entries sorted by conference (one word each containing the maximum number of talkers allowed)
- F. Node Information located following the Conf. Number of Talkers List.
 - Node Number (0-15) (initialized to assigned node)
 - 50 • Active node mask - one word (16 bits) with one bit per node (1=active; 0=inactive)

-130-

G. System Parameter List Buffer located following the Node Information.

- 50 words will be reserved for the System Parameters including those currently defined (see later section on System Parameters) and possible future items.

5 2.2. Command Values

The DSP commands recognized in the Channel Data Structure are:

- No command (Command value = 0x0000)
- Start playing a message (Command value = 0x0001)
- Stop playing a message (Command value = 0x0002)
- 10 • Start recording a message (Command value = 0x0003)
- Stop recording a message (Command value = 0x0004)
- Dial a telephone number (Command value = 0x0005)
- Acknowledge (Command value = 0x0006)
- Generate DTMF acknowledge tone (Command value = 0x0007)
- 15 • Generate conference entry tone (Command value = 0x0008)
- Generate conference exit tone (Command value = 0x0009)
- Generate Security-in tone (Command value = 0x000A)
- Generate Security-out tone (Command value = 0x000B)

2.3. Event Indicators

20 The set of event indicators recognized in the Channel Data Structure is:

- No change (value = 0x0000)
- Talk indication (value = 0x0001)
- DTMF digits in (value = 0x0002)
- Data buffer 0 ready (value = 0x0003)
- 25 • Data buffer 1 ready (value = 0x0004)
- Dial done (value = 0x0005)
- Play-tone done (value = 0x0006)

2.4. Time Slot Types

The set of time slot indicators supported in the Channel Data Structure is:

- 30 • Unused (value = 0x0000)
- Conferee (value = 0x0001)
- Local Operator (value = 0x0002)
- Remote Operator (value = 0x0003)
- Annunciator (value = 0x0004)
- 35 • Tape Record (value = 0x0005)
- Tape Playback (value = 0x0006)
- Link Line (value = 0x0007)
- Music (value = 0x0008)

2.5. System Parameters

40 Each system parameter is stored in one word (2 bytes) with units as indicated below. The System Parameter List in order of contents is:

- DTMF On Time (default = 100 ms.)
- DTMF Off Time (default = 50 ms.)
- Dial Tone Wait (default = 5 sec.)
- 45 • DTMF Level (default = -7 dBm)
- Forward Twist - Receive direction (10 dB)
- Reverse Twist (10 dB)
- Talk Detect Level (-35 dBm)
- Max. Talkers/conf. (default = 8 talkers/conf.)
- 50 • Max. Gain (10 dB)
- Speech Level Out (-16 dBm)
- Channels Per DSP Node (default = 6 channels/node)

2.6. Semaphores

55 Eight semaphores are supplied for use with each node. The content of a semaphore is 0x0001 when not in use. The semaphores are acquired when either side successfully writes and then

-131-

reads a value of 0x0000 from the location specified below. The side that acquires the semaphore must return it when finished using the resource by writing 0x0001 to the same location. The current assignment of semaphores is as follows:

- Control access to Data Transfer Buffer 0 (0x2000 + I/O Addr. + 0)
- 5 • Control access to Data Transfer Buffer 1 (0x2000 + I/O Addr. + 1)
- Unassigned (0x2000 + I/O Addr. + {2-7})

2.7. Interrupts - DSP to Host Event Notifications

When a DSP detects one of the previously specified *events*, the occurrence will be indicated by writing the *event* number in the corresponding Channel Data Structure. Subsequently, the DSP will generate an interrupt by writing 0x00FF to DPM internal address 0xFC0FFF, which corresponds to the host's *mailbox* located at byte offset 0x1FFE in the DPM. The host clears the interrupt by reading its *mailbox*.

2.8. Interrupts - Host to DSP Mode Control

Several interrupt commands have been defined to control the operating mode for a DSP node. They currently provide a means of controlling the installation of the load module, initialization, and DSP start synchronization.

- No command (value = 0x0000)
- Enter Node Command Mode (future use) (value = 0x0001)
- 20 • Invoke Boot Loader Mode (value = 0x0002)
- Synchronize and Enter Channel Command Mode (value = 0x0003)

The first value is not actually issued by the host; rather it is the mailbox value after the DSP reads the mailbox. The second value is reserved for future use. A later section on downloading DSP code describes how the last two commands are used.

3. DSP Initialization

The initialization operations required for each DSP board are described in the following sections. Up to four I/O Addresses are configured by unique jumper settings on each board and acquired during installation from the set: {0x220, 0x240, 0x250, 0x260, 0x2A0, 0x2B0, 0x300}. The Base Memory Address Segments for the boards are assigned contiguously in virtual memory.

3.1. Reset each DSP Board

- A. Write Base Addr. Reg. (BAR) (I/O Addr + 2) \leftarrow Mem. Addr. Seg. > > 8
- B. Write Virtual Mode Register (VMR) (I/O Addr + 4) \leftarrow 0x00
- C. Write PC Control Reg. (PCR) (I/O Addr. + 0) \leftarrow 0x10
- 35 D. Reset Receive Control Reg. (3000 + I/O Addr.) \leftarrow 0x00
- E. Reset Transmit Control Reg. (3400 + I/O Addr.) \leftarrow 0x00
- F. Write Clear RCV Line Status Reg. (3000 + I/O Addr + 2) \leftarrow 0x00

3.2. Clear Interrupts and Semaphores for Nodes A, B, C, & D

- A. Read Mailbox for each node (Mem. Addr Seg.: 0x1FFE + {0x0000, 0x2000, 0x4000, 0x6000})
- 40 B. Clear 8 Semaphores per node (({0x2000, 0x2400, 0x2800, 0x2A00} + I/O Addr + {0-7}) \leftarrow 0x01

3.3. Write Reference Memory

- A. Read PCR (I/O Addr. + 0)
- B. Write PCR (I/O Addr. + 0) \leftarrow PCR | 0x10
- 45 C. Write BAR (I/O Addr + 2) \leftarrow 0xD1
- D. Transfer 32 bytes to MVIP DPM (Mem. Addr. Seg + {0-63}) \leftarrow ref. mem. data
- E. Write BAR (I/O Addr + 2) \leftarrow 0xD0

-132-

3.4. Download DSP Code on all Nodes

Avoiding the interrupt mailbox addresses, the host uses the rest of the DPM to download to the DSP its code/data from the COFF file, *dsp_code.out*, generated by a DSP cross-compiler on DOS. Source code for a COFF loader was obtained from the Texas Instruments bulletin board; this loader is used to translate the DSP code file to the download module. The loader includes a host supplied software module to write the loader output to the DPM. The following procedure is used to download the first block to the DSP:

- A. Read PCR (I/O Addr. + 0)
- B. Write PCR (I/O Addr. + 0) \leftarrow (PCR & ~current node bit) | 0x10
- 10 C. Write boot code (Mem. Addr. Seg.:{0-0xFFFF}) \leftarrow COFF loader output
- D. Write PCR (I/O Addr. + 0) \leftarrow PCR | current node bit

The built-in DSP Boot Loader takes over from there, moves the block to the destination address(es) and starts the DSP at the first destination named in the download. The host will write the same block to all nodes before returning to the COFF loader to download another block of the DSP load module. To avoid writing boot code for the DSP, the first block includes code in which the DSP waits for the host to download another block from the COFF loader and to interrupt the DSP by writing the *Invoke Boot Loader* interrupt command to its mailbox before proceeding. The DSP will, in turn, vector to the start of the DSP Boot Loader. The host will repeat the above procedure for each block of the DSP load module. The host includes enough of the first block with each download to cause the built-in DSP Boot Loader to start the DSP at the original entry point after each pass.

3.5. Initialize DPM Data Structures

For all nodes, the host initializes the Channel Data Structures, the Channel-Conference List, the Node Information, and transfers the System Parameter List to the DSP.

- 25 A. Read PCR (I/O Addr. + 0)
- B. Write PCR (I/O Addr. + 0) \leftarrow PCR | 0x10
- C. Write data structures (Mem. Addr. Seg.:{0-x}) \leftarrow initial data

3.6. Enable MVIP Registers

- A. Read PCR (I/O Addr. + 0)
- 30 B. Write MVIP Receive Register (I/O Addr. + 0x3000) \leftarrow 0x01
- C. Write MVIP Transmit Register (I/O Addr. + 0x3400) \leftarrow 0x85
- D. Write PCR (I/O Addr. + 0) \leftarrow PCR | D0

3.7. Mark all active nodes and Start Full DSP Operation on all Nodes

The host updates the Active Node Mask in the Node Information structure on all active nodes. The host then interrupts the DSP one final time by writing the *Synchronize* interrupt command to the DSP's mailbox. After that, the DSP's begin full operation.

4. Command and Information Exchange

The major operations required are:

- Send channel information and commands to the DSP.
- 40 • Send node configuration information to the DSP.
- Acquire channel *events* from the DSP.
- Detect DSP failures.

4.1. Channel Commands

For the commands identified in the earlier section on commands, the host checks for a clear *command* member in the Channel Data Structure which indicates that the DSP has completed any previous command for that channel. If the DSP encounters an error before completing a command, it returns an error code in the *error* member of the Channel Data Structure and then sets the *command* member to 0xFFFF instead of clearing it. When the host encounters an error return from the DSP, the host's Command Processor sends an appropriate message to the Log process.

-133-

For the Dial command, the telephone number is first placed in the Channel Data Structure of the target channel. For the Dial and the Play-Tone commands, the command value is set in the *command* member of the Channel Data structure. When these commands are completed, the DSP interrupts the host with the appropriate event indication as described later in the acquire events section.

- 5 For Playback and Record commands, control of the Data Transfer Buffers is detailed in the next section. The command value is then set in the *command* member of the Channel Data Structure. The DSP clears this member when the command has been started.

To change the conference for a channel or to mute a channel, the host notifies the DSP as described later in the update talker-conference section.

10 4.2. Record and Playback Voice

The Data Transfer Buffers are used alternately beginning with Buffer #0 to record or playback voice data. These operations are required, respectively, by an Operator or an Annunciator channel. Access to each buffer is controlled by a designated semaphore.

- 15 For recording, the host first issues the *start record* command. The DSP then acquires the Buffer #0 semaphore, fills the corresponding buffer, releases the semaphore, sets the Data Buffer 0 Ready event, interrupts the host, acquires the Buffer #1 semaphore, fills its buffer, releases that semaphore, sets the Data Buffer 1 Ready event, interrupts the host, and continues at the beginning. At the same time, the host waits for an interrupt, acquires the first semaphore, transfers data from the first buffer, releases the first semaphore, waits for another
20 interrupt, acquires the second semaphore, transfers data from the second buffer, releases the second semaphore, and continues at the beginning. The host must issue the *stop record* command to terminate this action.

- For playback, the host acquires the Buffer #0 semaphore, fills the corresponding buffer with voice data, releases the semaphore, issues the *start playback* command, waits for an interrupt,
25 acquires the second semaphore, fills its buffer, etc. The host issues the *stop playback* command to end the playback action. The DSP follows with actions analogous to the record scenario. Unless the playback is aborted, the host will terminate the playback by filling an extra buffer with zero level data (0x7F) and wait until the DSP acquires the semaphore for that buffer before issuing the *stop playback* command.

30

4.3. Change Node Configuration

- When it is necessary to update the *Channel-Conference List*, *Channel MVIP Time Slot List*, *Conference Number of Talkers List*, *Node Information*, or *System Parameters List*, data structures that concern an entire node, the host will update the appropriate data structure. The
35 host will make a single change in the lists at any one time. To minimize differences in information among nodes, the change is made as quickly as possible to all nodes in a round-robin fashion. No additional indication of the change will be made to the DSP's.

4.4. Acquire Events

- When a DSP detects one of the previously specified *events*, the occurrence will be indicated
40 by writing the *event* number to the Channel Data Structure. Subsequently, the DSP will generate an interrupt by writing 0xFF to DPM internal address 0xFC0FFF, which corresponds to the host's *mailbox* located at byte offset 0x1FFE in the DPM.

- Upon receipt of the interrupt, the host will examine the Node Interrupt Status Registers for each board. The register is located at address (I/O Addr. +6). Within the register, bits 0-3
45 indicate which node generated the interrupt. More than one register may have a bit set. The host side determines which channel or channels on an interrupting node are reporting events by detecting a non-zero *event* field in the Channel Data Structure. The host side will acknowledge receipt of the event by setting the event field to zero.

-134-

4.5. DSP Failure Detection

The host will periodically transmits the Acknowledge command to one or more channels on a node to determine the DSP's ability to respond.

5. Issues

- 5 • Before initialization, we may need to determine if we are doing a warm restart and if the DSP board is already in operation.
- Does the DSP/Host interface suffer from the big-endian/little-endian syndrome; i.e., does one side need to do byte-swapping? If so, the host will do the byte-swapping.

6. Appendices

- 10 The attached header files are snapshots of software documents. This document is not intended to represent the current or official version of those files. Refer to the source code documents before relying on specific information contained in the appendices.

-135-

Appendix A - dsp_cnfg.h

```

/* EMACS_MODES: tabstop=4 */
/* FILE: dsp_cnfg.h
5  *
  * DESCRIPTION: Constants used for DSP Configuration information
  *
  * CHANGES: 920407 PJB Initial issue
  */
10 #ifndef DSP_CNFG_H
#define DSP_CNFG_H

#define BASE_TX_BUFR 0x400
15 #define DPMSIZE 0x2000
#define DPM_MAP_ADDR 0x8D0000L /* Use bits 23-15 only */

#define VMBASE (DPM_MAP_ADDR & 0xF00000L) /*Bits 23-20 */
#define DPM_MEM_BASE (DPM_MAP_ADDR & 0xF80000L) /*Bits 19-15 */
20 #define DPM_VM_BASE (VMBASE | DPM_MEM_BASE)

#define BOARDSPerSYSTEM 6
#define NODESPerSYSTEM 4
#define CHNLSperNODE 8
25 #define CHNLSperSYSTEM (CHNLSperNODE*NODESPerBOARD*BOARDSPerSYSTEM)
#define SEMSPerNODE 8
#define MAXCONFS 67
#define MAXSYSPARAMS 50
#define MAXDIGITS 49
30 #endif /* DSP_CNFG_H */

```

-136-

Appendix B - dsp_host.h

```

/* EMACS_MODES: tabstop=4      */
5  /* FILE: dsp_host.h
   *
   * DESCRIPTION: Constants and macros used by the DSP-Host Interface
   *
   * CHANGES: 920325 PJB Initial issue
10  */

#ifndef DSP_HOST_H
#define DSP_HOST_H

15  #include <sys/types.h>
#include "dsp_cnfg.h"

/* Default System Parameters */
#define DTMFONTIME 100 /* Tone on duration (ms) */
20 #define DTMFOFFTIME 50 /* Tone off duration (ms) */
#define DIALTONEWAIT 5 /* Max time to wait for dial tone (sec) */
#define DTMFPLVL -7 /* Power level to make call xfer (-dBm) */
#define FRWRDTWST 10 /* Forward twist - rcv direction (dB) */
#define RVRSETWST 10 /* Reverse twist - rcv direction (dB) */
25 #define TALKLVL -35 /* Talk detection level (-dBm) */
#define TALKERLMT 8 /* Number to talkers allowed/conf. */
#define MAXGAIN 10 /* Max. Gain factor (dB) */
#define SPEECHLVLOUT -16 /* Power of xmt'd speech (-dBm) */

30 /* Recognized commands for the CHANNEL data structure */
#define NULL_COMMAND 0x0000
#define START_PLAYBACK 0x0001
#define STOP_PLAYBACK 0x0002
#define START_RECORD 0x0003
35 #define STOP_RECORD 0x0004
#define DIAL_NUMBER 0x0005
#define ACKNOW 0x0006 /* Are you alive command */
#define ACK_DTMF_TONE 0x0007 /* Generate receipt of DTMF tone */
#define ENTRY_TONE 0x0008 /* Generate conference entry tone */
40 #define EXIT_TONE 0x0009 /* Generate conference exit tone */
#define SECURE_IN_TONE 0x000A /* Generate security_in tone */
#define SECURE_OUT_TONE 0x000B /* Generate security_out tone */

/* Mailbox commands to DSP for node processing */
45 #define NO_COMMAND 0x0000
#define ENTER_NODE_MODE 0x0001
#define INVOKE_BOOT_LOADER 0x0002
#define SYNCHRONIZE 0x0003

50 /* Error indicators returned by DSP */
#define NULL_ERROR 0x0000
#define ILLEGAL_COMMAND 0x0001
#define RECORD_ERROR 0x0002
#define PLAYBACK_ERROR 0x0003
55 #define DTMF_CHAR_ERROR 0x0004

```

-137-

```

/* Mute, gain, music, and talk flags */
#define MUTE_OFF 0
#define MUTE_ON 1
#define GAIN_OFF 0
5 #define GAIN_ON 1
#define MUSIC_OFF 0
#define MUSIC_ON 1
#define NOT_TALKING 0
#define TALK_PRESENT 1

10 /* Semaphore allocation (2-7 are available) */
#define DATA_BUFRO_SEMA 0
#define DATA_BUFRI_SEMA 1

15 /* Event indicators for CHANNEL data structure */
#define NULL_EVENT 0x0000
#define TALK_EVENT 0x0001
#define DTMFIN_EVENT 0x0002
#define DATA_BUFRO_RDY 0x0003
20 #define DATA_BUFRI_RDY 0x0004
#define DIAL_DONE_EVENT 0x0005
#define TONE_DONE_EVENT 0x0006

/* Slot Types for CHANNEL data structure */
25 #define UNUSED_SLOT 0x0000
#define CONFERENCE_SLOT 0x0001
#define LOCALOPER_SLOT 0x0002
#define REMOTEOPER_SLOT 0x0003
#define ANNUNCIATOR_SLOT 0x0004
30 #define RECORD_SLOT 0x0005
#define PLAYBACK_SLOT 0x0006
#define LINKLINE_SLOT 0x0007
#define MUSIC_SLOT 0x0008

35 /* Channel Data */
typedef struct {
    ushort dpm_port; /* System wide index to channel (0-127) */
    ushort command; /* See list of commands for DSP */
    ushort error; /* See list of errors returned by DSP */
40 ushort event; /* See list of events reported to host */
    ushort mute; /* Host sets muting off(=0) or on(=1) */
    ushort gain; /* Host sets agc gain off(=0) or on(=1) */
    ushort music; /* Music off(=0) or on(=1) indicator */
    ushort talk; /* Talk present on channel(=1) or not(=0) */
45 ushort type; /* See list of slot types */
    char digits_in[MAXDIGITS+1]; /* ASCIIZ string for incoming DTMF */
    char digits_out[MAXDIGITS+1]; /* ASCIIZ string to be dialed */
} CHANNEL;

50 typedef struct {
    ushort this_node; /*Node number assigned to this DSP (0-15) */
    ushort active_nodes; /*Mask of bits per active ndoe on system */
} NODE;
#define node_bit (board,node) ( 1 << ( (board<<2) + node ) )
55 typedef struct {
    ushort DtmfOnTime; /*Tone on duration */
    ushort DtmfOffTime; /*Tone off duration */
    ushort DialToneWait; /*Maximum time to wait for dial tone */

```

-138-

```

short DtmfLvl;          /*Power level to make call of transfer */
ushort FrwrTwst;        /*Forward twist factor */
ushort RvrseTwst;       /*Reverse twist factor */
short TalkLvl;          /*Talk detection level */
5  ushort TalkerLmt;     /*Number to talkers allowed */
ushort Gain;            /*Gain factor */
short SpeechLvlOut;     /*Power level of transmitted speech */
ushort ChanPerDSP;      /*Channels per DSP node */
} SYS_PARAMS;

10  /* All non-reserved space remaining in DPM */
#define DPM_AVAILABLE ( (DPMSIZE>>1) - ( CHNLSperNODE*sizeof(CHANNEL) +\
( ( CHNLSperSYS<<1) + MAXCONFS + MAXSYSPARAMS + 2 ) * sizeof(ushort) +\
sizeof(NODE) ) )

15  typedef struct {
    unchar buf1[DPMSIZE>>2]; /* First two quarters of DPM */
    unchar buf2[DPMSIZE>>2]; /* Second quarter of DPM */
    CHANNEL chan[CHNLSperNODE]; /* Channel Data Structures */
20  ushort conf[CHNLSperSYS]; /* Conferene indexed by chan. */
    ushort time_slot[CHNLSperSYS]; /* Channel MVIP time slot */
    ushort nbr_talkers[MAXCONFS]; /* Max talkers in the Conf. */
    NODE node;
    SYS_PARAMS param; /*rsvd allows for param growth */
25  ushort rsvd[MAXSYSPARAMS-sizeof(SYS_PARAMS)/sizeof(ushort)];
    unchar available[DPM_AVAILABLE]; /* Non-reserved space */
    ushort dsp_mbox; /* Host to DSP mailbox */
    ushort host_mbox; /* DSP to host mailbox */
} DPM;

30  #define NODEBASE(dspbase,board,node)\
    ((DPM*) ((unsigned)dspbase+(board<<15)+(node<<13)))

#endif /* DSP_HOST_H */

```

-139-

Appendix C - dsp_regs.h

```

/* EMACS_MODES: tabstop=4      */
5  /* FILE: dsp_regs.h
   *
   * DESCRIPTION: Constants and macros used by MultiLink DSP Processor (MDP)
   *
   * CHANGES: 920310 PJB Initial issue
10  */

#ifndef DSP_REGS_H
#define DSP_REGS_H

15  #include "rtxproto.h"
#include "dsp_cnfg.h"

extern int iobase[];

20  /*Recommended Base I/O Address Assignments
   * Board# Base I/O Address (IOBASE)
   * 0 220
   * 1 240
   * 2 250
25  * 3 260
   * 4 2A0
   * 5 2B0
   * 6 300

30  #define BOARDBASE(board) (DPM_MEM_BASE+(board<<15))

/*
   * Base I/O Address Grouping
   */
35  /* PC Interface Control Registers Mode Desc */
#define PCR(board) (iobase[board]) /* RW PC Control Register */
#define BAR(board) (iobase[board]+2) /* W Mem. Base Addr Reg. */
#define VMR(board) (iobase[board]+4) /* RW Virtual Mode Reg. */
#define NISR(board) (iobase[board]+6) /* R Node Intrpt Status */
40  /* Node Semaphore Registers (0-7) (single bit), for nodes 0-3 (A-D) */
#define SEMAPHORE(board,node,reg) (iobase[board]+0x2000+(node<<10)+reg)

/* MVIP Interface Control Registers Mode */
45  /* Receive - PLD1 */
#define RX_CTRL_REG(board) (isobase[board]+0x3000) /* RW */
#define RX_LINE_STAT(board) (isobase[board]+0x3001) /* R */
#define RX_CLR_LINE_STAT(board) (isobase[board]+0x3002) /* W */
/* Transmit - PLD2 */
50  #define TX_CTRL_REG(board) (isobase[board]+0x3400) /* RW */

/* PCR functions - (RW) - PC Control Register */
#define RUN_C31(node) (1<<(node))
#define RUN_ALL_NODES 0x0F
55  #define ENABLE_SHWIN_VPM ((1<<4) | (VMBASE?(1<<5):0))
/*
#define OPEN_SHARED_WIN (1<<4)

```

-140-

```

#define ENABLE_VPM          (1<<5)
*/
#define RUN_PLD1             (1<<6)
#define RUN_PLD2             (1<<7)
5  /* BAR functions - (W) - Base (Memory) Address Register (BAR) */
#define NODE_DP_RAM(board) ((short) (BOARDBASE(board)>>12)&0xF8)
#define MVIP_DP_REPMEM      1

10 /* VMR functions - (RW) - Virtual Mode Register */
#define VM_ADDR              ((short) (VMBASE>>20))

/* NISR functions - (R) - */
/* PC interrupts DSP node by writing to byte offset 1FFC in DPM */
15 /* PC clears DSP interrupts by reading from byte offset 1FFE in DPM */
#define DSP_INTRPT(node) (1<<node)

/* RX_CTRL_REG functions */
#define RX_RUN                (1<<0)          /* RW */
20 #define RX_ADDR10_SET       (1<<1)          /* RW which half */
#define RX_TEST_MODE          (1<<2)          /* RW */
#define RX_PONG_BUFR          (1<<3)          /* R ping-pong indicator */
#define RX_CLKSEL             (1<<5)          /* RW use with test mode */

25 /* RX_LINE_STAT functions - (R) */
/* RX_CLR_LINE_STAT functions - (W) */
#define RX_STATUS(line)      (1<<line)

/* TX_CTRL_REG functions - (RW) */
30 #define TX_RUN                (1<<0)          /* RW */
#define TX_TEST_MODE          (1<<1)          /* RW */
#define TX_MASTER_OE          (1<<2)          /* RW */
#define TX_PONG_BUFR          (1<<3)          /* Rping-pong indicator */
#define TX_ADDR               ((BASE_TX_BUFR>>3)&0xF0)

35 #define put_sema(board,node,sema) \
    rtio_outb ( SEMAPHORE(board, node, sema), 1 )
#endif /* DSP_REGS_H */

```

-141-

1. Introduction

The Command Processor is one of the processes that comprise MultiLink's Digital Conferencing Bridge (DCB). It accepts messages from other DCB processes to control the operation of a line connected to the DCB. The operations include:

- 5 • dialing a number on one of the lines,
- setting the gain factor on or off for a group of lines,
- muting or unmuting a group of lines,
- playing an acknowledge dtmf, conference entry, conference exit, security on, or security off tone on a group of lines, and
- 10 • putting a group of lines into a specific conference with or without music.

The Command Processor will execute these requests by passing the command to the Digital Signal Processor (DSP) that handles the affected line.

2. Design Description

- At a high level, each of the requests is performed through an interface provided by the Command Processor for one of the purposes already enumerated. A non-blocking interface is provided for each of those purposes. With the exception of dialing a number, the command is performed without an indication of completion to the requestor. When a number is dialed, a completion reply is provided to the caller. Commands directed to failed lines will be recorded in the Error/Status Log.
- 20 At the low level, the Command Processor will determine the board, node, and DSP channel associated with each requested line. The appropriate channel data structure will be checked for an error indication due to a previous request. If an error is indicated by the DSP, the Command Processor will record it in the Error/Status Log and report the affected lines as failed to the Call Handler. After the DSP performs *dial-dtmf* and *play-tone* requests, the
- 25 Command Processor expects to receive a *completed* event message via the Event Processor.

3. Data Structures

- The Command Processor will keep a bitmask of the active nodes to determine which nodes are active. Upon initialization of the Command Processor, all possible nodes will be assumed active until proven otherwise. In the first release of the DCB once a node is marked inactive,
- 30 it will remain so until the Command Processor is restarted. A node will be marked inactive if an error is encountered or if the node does not respond to an *acknowledge* command, discussed later in the detailed design section.

- The Command Processor communicates with each DSP via data structures located in the associated Dual Port Memory (DPM). These structures are defined and their usage is described in the DSP-Host Interface Design, see Document 14002059.
- 35

When the Command Processor can not immediately execute a *dial-dtmf* or a *play-tone* request because the DSP is busy with a previous request, it will temporarily acquire memory to store the request and repeat the execution attempt after a fixed period of time.

4. Detailed Design

- 40 For requests on nodes that have been marked inactive, the Command Processor will log an error in the Error/Status Log and ignore the request.

- When the request is to change the gain factor or muting for a group of lines, the Command Processor will simply update the corresponding flag located in the appropriate DSP channel data structures. If the request is to place lines in a conference, the Command Processor will
- 45 set the music indicator on or off as requested for the specified lines and update the Channel-Conference structures on all active nodes as quickly as possible.

-142-

For *dial-dtmf* or *play-tone* requests, the Command Processor will individually determine if each requested DSP channel is ready to accept a new command. If it is not, the Command Processor will privately store the request for that channel in a queue. The request will be attempted again when the appropriate *completed* event message arrives from the DSP Event Processor. The Command Processor provides an interface for the *completed* event messages. When the DSP is ready to accept another command on a desired channel, any associated data will first be placed in the associated channel data structure followed by the command. If the request is *dial-dtmf*, each DSP channel will be checked when the corresponding *completed* event arrives from the DSP Event Processor and if the dialing was successfully completed, the line number will be returned to the caller with a `REPLY_DIAL_DONE` reply. An alarm will be set approximately every 5000 ms. which will cause the Command Processor to interrogate each active node with the *acknowledge* "are you active?" command. If the DSP does not respond by clearing that command before the next alarm arrives, the incident will be recorded in the Error/Status Log, the Call Handler will be informed of the lines affected through its interface provided for that purpose, and the associated node will be marked inactive both internally and in the DSP node data structures for all DSP's that remain active. Finally, a *dsp-failed* interface is provided for use by the Annunciator Process. Its purpose is to consolidate knowledge of DSP failures in the Command Processor. The Command Processor will handle this notification as it handles internally detected DSP failures, just described.

5. Appendices

The attachments include a process diagram and a pre-release version of the `cmd_lib.h` header file. Refer to the software documentation for the latest version. Manual pages for the command interfaces are also attached.

1. Introduction

The **Event Processor** is one of the processes that comprise MultiLink's Digital Conferencing Bridge (DCB). It reads a bit-array of Digital Signal Processor (DSP) nodes that are interrupting the host from the **DSP Driver**. It then accesses the DSP's Dual-Port Memory (DPM) to determine the event(s) causing the interrupt(s) and processes those event(s). The events include:

- Digits have arrived from a specific user channel,
- The talk-present flag has been set or reset for a specific user channel,
- A data buffer is ready for a specific annunciator or operator channel,
- A play-tone request previously issued by the **Command Processor** has been completed, and
- Dialing has been completed for a previous dial-digits command issued by the **Command Processor**.

The design of the **DSP Driver** is also described in this paper. It provides the following functionality for the host software:

- Access to the DSP device through the `open()` interface.
- A bit-array of interrupting DSP nodes through its `read()` interface, and
- A means to reset each node, get the physical address of the DPM's, get and put a bit-array of active DSP nodes, get and put I/O register contents, and enable or disable printing of register accesses through its `ioctl()` interface.

The reader should refer to the DSP-Host Interface Design Specification (Doc. 14002059) for details of the DSP interface and data structures.

2. Design Description

The existence of a **DSP Driver** is closely associated with the **Event Processor** because of a desire to reduce possible process context switches when handling interrupts from the DSP.

2.1. Event Processor Design

The **Event Processor** blocks while waiting for an interrupt from the **DSP Driver**. It determines which channels indicate an event and it processes each event. The possible events are enumerated in the introduction section. Depending on the event, the **Event Processor** executes an interface provided for the purpose by another interested process. After processing all the indicated events, the **Event Processor** waits for another interrupt to occur. A process transition diagram is provided in the appendix.

2.2. DSP Driver Design

The **DSP Driver** handles all DSP interrupts and provides the sole interface to the DSP registers. It is also the source for information such as the address of the DPM's and the active DSP nodes.

The **DSP Driver** is a character device. It provides handlers for `dspinit()`, `dspopen()`, `dspiocctl()`, `dspread()`, `dspintr()`, and `dspclose()`. During initialization, the driver attempts to determine the existing boards from a list of possible I/O base addresses specified in the driver's **System** installation file. The contents of the driver's installation files are given in the appendices. The driver assigns the starting address of the physical memory for the DPM to the first memory address indicated in the **System** installation file.

The driver allows any number of cooperating processes to *open* the DSP device. *ioctl* calls are used to reset each DSP node, to get and put information about the DSP's from and to the driver, and to control printouts of each register access on the console for debugging purposes. The supported *ioctl* commands are defined in the `dsplib.h` header file which is included in the appendix. In a future software release, an *ioctl* command may be added to support a DSP test function.

When an interrupt occurs, the *intr* section of the driver forms a bit array of all interrupting nodes and stores it in a buffer managed by existing kernel routines. The information is subsequently acquired by the read interface.

-144-

The device is closed when the last process having the DSP open issues its *close* call.

3. Data Structures

The device *read()* interface uses an unsigned long to provide a bit array of the interrupting nodes in the first 24 bits.

5 Arguments for the various *ioctl()* commands are defined below.

- An unsigned short is used to specify the board to be reset in a RESET_DSP request. This will be used only by the InitDCB Process.
- An unsigned integer is used to get and put a bit array of active DSP nodes in the first 24 bits for GET_ACTIVE and PUT_ACTIVE requests. The active-nodes information is acquired and saved during the higher level interface *open_dsps()* call, described in the attached dsp manual page.
- 10 • A long integer is used to get the starting physical memory address of the DPM's via the GET_DSPMEM request. This information is also acquired and used during the *open_dsps()* call.
- A DSPIO structure, defined in the dsplib.h header file, is passed through the interface to get and put DSP register contents for GET_REGISTER and PUT_REGISTER requests.
- 15 • For debugging purposes, a long integer is used to define a bit array of interrupting nodes to simulate an interrupt via the PUT_INTERRUPT request. This value is returned during a subsequent *read* request.
- An array of six integers is used to get the base I/O address of each possible DSP board via the GET_IOBASE request. Since the information contained therein is automatically inserted by the driver during register accesses, this interface is currently used only to provide debugging information.
- 20 • No argument is necessary for the DEBUGON or DEBUGOFF requests.

-145-

4. Detailed Design

Additional details of the design outlined above are provided here.

4.1. Event Processor Details

When started, the **Event Processor** initializes the interprocess communication routines, opens the DSP device, and initializes the shared database. It then enters an infinite loop in which it reads the bit array of interrupting nodes, processes each event and reads again. To process each interrupt, the event member of each channel data structure on each node having a bit set in the bit array is examined for the presence of an event. If an event is detected, the logical channel number (lcn) is determined and further processing is dependent on the type of event as described below. A set of functions providing translations between DSP channel numbers and logical channel numbers is specified in the attached **lcn** manual page.

For a talk event, the talk flag is obtained from the DPM and stored in the talk indication slot of the shared database for the **lcn**.

For a dtmf-digits-in event, the digit(s) are copied to a **DIGITDATA** structure, the source in the DPM is set to a **NULL** string, and *ReportDigits()* interface is used to send the information to the **Call Handler**.

When a data-buffer-ready event occurs, the *annun_bufrdy()* interface is used to send the information to the **Annunciator Process**.

When a dial-done or tone-done event is received, the **Command Processor** is informed via the *cmd_dial_done()* or *cmd_tone_done()* interface, respectively.

Finally, to signal the DSP that the event has been processed, the event member of the DSP channel is cleared by storing **NULL_EVENT** in it.

4.2. DSP Driver Details

During driver installation, a system-wide **config.h** file is formed from the **System** file of all device drivers. The **Space.c** file, included in the appendix, will be supplied in source form to each DCB software installation site and used to obtain configuration information from the **config.h** file. Through global variables initialized in the **Space.c** file from the **config.h** information, the DSP Driver learns the assignment of the starting DPM address and the base addresses for each board's I/O registers.

On system startup, the driver's *init* handler prints MultiLink's copyright notice and indicates whether each of the the six possible DSP boards was detected or not. With this, a DCB system administrator is assured that the driver is present and that it has recognized the presence of all installed boards. Since the DSP has no ID register, the **Receive Control Register** of each board mentioned in the **System** file is examined. This address (offset 0x3000) is seldom used by other devices. The register is clear on power-up and is never purposely set to 0xFF, which is returned when no device is present. Therefore, if 0xFF is not read, a DSP is assumed to be present.

When a board is detected, its I/O base address is stored in an array of *iobases* for future reference.

The first process to *open* the driver causes the initialization of read buffers managed by existing kernel routines. The buffers are used to store a bit array of interrupting nodes formed from the Node Interrupt Status Register on each DSP board by the interrupt handler. Subsequent device *open* calls simply increment the count of processes having the device open.

The *close* routine decrements the count of processes having the device open. When the count goes to zero, the read buffers are actually closed.

-146-

The *read* routine is simply a call to the aforementioned buffer handler managed by the kernel. *ioctl* commands control specific requests including DSP resets and all I/O register operations. The user arguments are copied from user memory to kernel memory, acted upon, and returned by copying from kernel memory to user memory, depending on the specific command.

The attached **dsp** manual pages specify high level interfaces to access driver functionality while hiding some of the low level interface details.

5. Issues

A DSP semaphore is probably needed to signal when the host is removing digits following a dtmf-digits-in event.

The **DSP Driver** could provide a means for software manufacturing to insert source level identification of version or configuration information through initialization of an additional character string in the *Space.c* file that could be printed upon DCB system startup.

6. Appendices

The appendices include a pre-release versions of the **dsplib.h** header file and several DSP driver configuration files. Refer the software documentation for the latest versions. Manual pages for the DSP driver interfaces are also attached.

-147-

1. Introduction

The **InitDCB Process** is one of the processes that comprise MultiLink's System 70 Conferencing Bridge. It manages the System 70 start-up and sanity operations:

- pre-service diagnostics,
- resource initialization or recovery,
- process creation,
- process sanity checks with deadman placation,
- alarm reporting, and
- System 70 reinitialization or shutdown.

2. Design Overview

Initdcb is the first System 70 process to be invoked. It is designed to be called by the UNIX [®] **init** process from an entry in the **inittab** file. Depending on the *boot status*, described below, it performs a sequence of preliminary diagnostics and initializations, as required, including but not limited to Digital Signal Processors (DSP's), T1 boards, the analog board, serial board, shared memory, databases, displays and the deadman timer. It creates the remaining System 70 processes, providing each with prescribed startup arguments.

Initdcb finally enters a lifelong loop in which it periodically placates the System 70 deadman circuit and requests a reply to the **CMD_RU_THERE** message from each process that accepts messages. It sends signals to other processes, to which the receiver similarly replies by message. The *init_signals()* interface, described in the appendix, is provided for this purpose. If any process does not respond within a limited time, an error message is logged and an alarm is fired.

Initdcb accepts messages to set and to retire major and minor alarms. It also accepts a message requesting System 70 reinitialization or shutdown. It subsequently sends a **CMD_SHUTDOWN** message or corresponding signal to all processes, thereby requesting them to exit gracefully. When all processes have exited, up to a specified time limit, **initdcb** causes the UNIX kernel to reinitialize or shutdown.

3. Data Structures

Initdcb keeps an array of child process names, process id's, process priorities, message queue id's, and process alarm states for use by system reinitialization, interprocess communication, or system shutdown. It also keeps a count of the number of outstanding requests for major and minor alarms.

The multi-processor architecture of the DCB allows conferences to remain active while the system is reinitialized. This process is called a 'warm boot.' While the host processor reinitializes, the conferences remain active because the DSP processors and T1 Network Interfaces run asynchronously from the host processor. However, the host software must correctly recover the information required to restore the conference and channel data structures to their correct state. All conference and channel data, which is updated in real-time (e.g. call counts and timers), are stored in the dual-port memory of the DSP. Other channel and conference data, that are not updated in real-time, are stored on disk. This information includes conference and channel names, conference modes, etc.

Data structures stored in the Digital Signal Processor's (DSP's) Dual-Port Memory (DPM) are examined by **initdcb** to determine the warm vs. cold boot-up status of the system and, for a cold boot, initialized as described in the DSP-Host Interface Design Specification (see Doc. 14002059). Information stored in the DPM data structures survives System 70 warm boot-up reinitializations and is sufficient to recover per-channel and per-conference data, including

-148-

time and billing records. Thus, the reinitialization has a minimum impact on pre-existing conference calls.

4. Detailed Design

Initdcb processing is performed in the order of the following sections describing its functionality.

4.1. DCB Environment

The root of the DCB directories is defined by *DCBPATH* to be */usr/dcb* in the attached *init_lib.h* header file. **Initdcb** first adds *DCBPATH* to the set of environment variables and sets the current directory to that value. There are sub-directories of *DCBPATH* for various functions:

- *announce* contains voice data files,
- *bin* contains the DCB process executable files,
- *cdr* contains call detail record files,
- *dbase* contains database, dial lists, password and related configuration files, some of which are stored in subdirectories of *dbase*,
- *new* contains updated executable files to replace those in the *bin* directory on the next DCB restart,
- *log* contains files with error and status messages,
- *reports* contains DCB report files, and
- *tmp* contains temporary files destined for the print spooler.

4.2. DPM Access

Access to the array of DPM data structures is through interfaces described in the DSP-Host Interface Design Specification. These interfaces obtain the physical starting address of the array of DPMs and map that address to virtual memory in the current process. A global pointer to the array of DPM structures is saved. Using this, DPM data is obtained simply by de-referencing the pointer.

4.3. Boot and Pre-service Test Status

The following algorithm is used to decide when to declare a cold/warm boot situation and when to perform pre-service diagnostics:

When **initdcb** is started, the *warmboot* boolean variable is initialized to TRUE and the *testdsp* boolean variable is initialized to FALSE.

If **initdcb** was executed with the *-t* option, *testdsp* is set to TRUE.

If **initdcb** was executed with the *-0* option, *warmboot* is set to FALSE.

If *warmboot* is now TRUE, **initdcb** examines known information stored in active DSP nodes. The *active_nodes* value must match the DSP driver's value. The value of *this_node* must match the assigned value. For all ports, the *dpm_port* value must match the assigned value. If any of these conditions are false, *warmboot* is set to FALSE.

4.4. Pre-Service Diagnostics

Using the results of the initialization status algorithm described in the previous section, if *warmboot* is FALSE and *testdsp* is TRUE, pre-service diagnostics are performed. **Initdcb** performs hardware diagnostics on the serial board, DSP's, T1 boards, and an integrated diagnostic that verifies operation of DSP's, T1 boards and analog ports. No hardware diagnostics are performed upon a warm boot.

- The serial card ports are checked by looping back the outputs and detecting the transmission of a prescribed sequence of ASCII characters. The operator may visually determine proper baud rate compatibility and display operation when presented with the first console display screen.
- DSP diagnostics are based on SDL provided source code for the DSP and the host that have been translated to DCB callable functions (see Doc. 14002097).
- T1 diagnostics primarily checks that registers can be written and read back correctly.

-149-

- An integrated diagnostic loops back and detects DSP generated signals through the T1 board, analog card and back to verify signal connectivity (see Doc. 14002094).

4.5. Hardware and Resource Initialization

Hardware and resource initializations are performed as follows:

- 5 • if there are executable or DSP code files in the *new* directory, *initdcb* will move them to the *bin* directory (if present, a new version of *initdcb* will be *exec*'ed to replace the one executing),
- *InitSHM()* initializes the memory database and the alarm database,
- *init_dsp()* is called to initialize the DSP's for cold boots,
- the warm/cold boot initialization procedure for T1 boards is called, and
- 10 • *InitDBCold()* initializes system databases for cold boots; *InitDBWarm()* does the same for warm boots while taking into account the per channel conference numbers, in-conference time, and signaling information derived from the hardware. *InitDBWarm()* recovers the conference number per logical channel unit and in-conference minutes from the DSP's Dual-Port Memory (DPM) and the per channel signaling information from the T1 Status registers (polling and Q&A data will be lost). The algorithm used for warm boot initialization and conference recovery is outlined below:
 - 15 ♦ For each channel in the system, obtain the channel's current voice path information (this includes the conference number, mute state, gain state and music state) and network hook state settings (both incoming and outgoing).
 - ♦ Channels which are idle (on-hook in both directions) are placed in the *Null Conference*.
 - 20 ♦ Channels which are connected (off-hook in both directions) and are in a user or operator conference are left in that conference. Channels in any other conference are placed in the *Enter Conference*. The channel's status information is recovered from both dual-port memory and from disk. A delta-time operation is performed on the channel's seizure time and the current time to recover any time information lost during the reinitialization.
 - 25 ♦ Channels which are disconnected (off-hook in one direction only) are placed in the *Null Conference*. The channel's status information is recovered from both dual-port memory and from disk for Call Detail Record (CDR) reporting.
 - ♦ Conference status information is recovered both from dual-port memory and from disk for conferences which have 1 or more user channels.
 - 30 ♦ Record, Playback, Operator and Annunciator channels are all left in their current conferences.

4.6 Process Creation

Next, *initdcb* creates the other DCB processes using their assigned priorities and provides the *boot status* as their first argument. The order of process creation is:

- 35 • first, processes providing low level services - Error/Status Log, Timer, DSP Event and T1 Event processes,
- processes providing higher level services - DSP Command Processor, Annunciator, Call Handler, and T1 Handler,
- 40 • lastly, user interface processes - Netmgr, Cdr, Report, Display Handler, and Login's (8). Admin, Maint, Opcon's (8) and Display Update's (8) will be *exec*'d by the Display Handler and Login processes.
- If any diagnostic problems or missing boards have been detected, *initdcb* executes an interface provided by *opcon* to relate the problem to the operator(s) and an interface provided by the Error/Status Log to record the problem in a disk file and send it to the system printer.

4.7. Sanity Checks and Deadman Placation

- 45 *Initdcb* then sets a repetitive timer alarm for 3 second intervals and automatically placates the deadman circuit each time the timer reply is received. As each timer reply is received, *initdcb* requests a sanity check reply by sending a message or signal to one of its child processes. It sends the request to each child process in round robin fashion and expects a reply before the same process is addressed again. *Disphand* and the *login* processes will
- 50 answer with knowledge of the sanity of their child processes in mind. If the process has not replied to the sanity check request when it is due for another message, *initdcb* sets a major or minor alarm, depending on whether or not the process is a *core* process (critical to

-150-

conferencing). It then repeats the deadman placation and sanity check processing continuously.

4.8. Alarm Reporting

5 **initdcb** accepts messages, through an interface described in the appendix, for reporting major and minor alarms. It keeps a count of the number of times each alarm is exercised. If the count is greater than zero, the corresponding alarm is fired. It retires an alarm only when the count for the corresponding alarm drops to zero.

initdcb sets the major alarm if the following *core* processes do not respond the sanity check: Timer, DSP Event, T1 Event, DSP Command, Call Handler, and Display Handler.

10 The minor alarm is set if the following, non-core, processes fail to reply to the sanity check: Error/Status Log, Annunciator, Login's, Cdr, and Netmgr.

4.9. System Shutdown

15 Finally, **initdcb** also accepts a message for a system reinitialization or shutdown. This is expected to originate only from the **maint** process so that maintenance personnel can install new boards, new lines, etc. or cleanly shutdown the system for any reason. It is the **maint** process's responsibility to insure that no conferences are still active before issuing this request. **initdcb** then sends a message or signal to each process requesting that the process exit gracefully. After allowing 20 seconds for processes to close resources and to exit, **initdcb** then:

- 20 • kills any surviving child processes,
- closes the DSP's with the *close_dsp()* interface,
- closes other resources that have provided an appropriate interface, and
- exits .

25 When **initdcb** exits for shutdown, the **inittab** script is designed to shutdown the UNIX kernel and wait for interaction from maintenance personnel; for reinitialization, a warm reboot is automatically invoked.

5. Appendices

30 The attachments include the process transformation graph and a pre-release version of the **init_lib.h** header file. Refer the software documentation for the latest version. Manual pages for the Initialization Process interfaces are also attached.

-151-

1. Introduction

MultiLink's Digital Conferencing Bridge (DCB) MVIP bus and ST bus time slot assignments and related tables are documented here. These tables view the data from various points of view as described in the tables section.

- 5 One T1 line is assigned to each of the first six MVIP bus rails; only four T1 lines are planned for the first DCB release. On each rail, the first 24 time slots are allocated to T1 channels in channel order.

- 10 MVIP rails 6 and 7 are reserved for DSP internal communication. The first 24 time slots of these rails are allocated for talked and talk lists, respectively. A node sync is assigned to one of the remaining time slots on rail 6.

- 15 One operator or one annunciator channel is assigned to each of the first 16 Digital Signal Processor (DSP) nodes for a total of eight channels each, evenly distributed on the first four DSP boards (there are four DSP nodes per board). The operators and annunciators are assigned the remaining (i.e. last) eight time slots of separate MVIP bus rails. The transmit and receive sides of the operator channels are assigned to the lower and upper of two adjacent rails, respectively.

- 20 A music channel, the receive side of two link lines, and three record/playback channels are assigned to unused time slots on another MVIP bus rail. The transmit side of the two link lines is assigned to the lower adjacent rail. One link line and one record/playback channel are allocated to each of the first two and first three DSP boards, respectively.

2. Tables

- 25 Table 1 enumerates the MVIP reference memory location data for all the DCB nodes foreseen. This data is inserted in the corresponding reference Dual-Port Memory (DPM) located on each DSP board. The data is stored in a byte per node pair with the control for the low numbered node in the low nibble. The nodes are shown ordered in reverse numerical order so that the nibble data can be shown in node sequence (albeit reverse). Zero is stored in the reference memory for unused slots; for clarity, zeros are not shown in the table. The memory locations have a one-to-one correspondence with the MVIP bus time slots. The nibble values are the MVIP rail number used, or'ed with 0x8 which is used to enable output for the corresponding time slot. Only one node may provide output on a given rail for any one time slot; therefore the same nibble value, greater than or equal to 0x8, may appear only once in any one row of this table. This table is perhaps the best way of detecting violations of that restriction. It contains much of the information required by the remaining tables and, in a sense, is a progenitor of much included in the remaining tables in this document.

- 35 Table 2 is the MVIP rail map. It shows which T1 channel, talk list node number, operator number, etc. uses each time slot on each MVIP rail.

- 40 Table 3 depicts the data stored in the time slot member of each Channel Data Structure in the DPM of each DSP node. The upper bytes contain the MVIP rail and the lower bytes contain the associated time slot on that rail. The time slots used by each node for the talk and talked lists are included for the sake of completeness. The footnotes also show the time slot for the node sync and the music channel and give algorithms that may be used to compute the time slots for the talk and talked lists as a function of node number.

-152-

Table 4 shows the allocation of logical channel numbers used throughout the DCB host software to reference to T1 channels, operators, annunciators, record/playback channels, and link lines.

5 Tables 5 through 10 are per board compilations of DCB node and port data. They give the reference memory data, quad-port addresses, MVIP bus assignments, T1 channel assignments, 2-wire channel assignments, logical channel numbers, and functional allocations.

10 Tables 11 and 12 depict the Mitel T1 board switch initialization as a function of board, ST bus stream number and time slot. Unused switch connections are not shown or are shown with a dash (-).

Table 1: MVIP Node and Slot Reference Memory Map¹

Ref. Memory Addr. ²	Board 5		Board 4		Board 3		Board 2		Board 1		Board 0	
	Node s 23- 22	Node s 21- 20	Node s 19- 18	Node s 17- 16	Node s 15- 14	Node s 13- 12	Node s 11- 10	Node s 9-8	Node s 7-6	Node s 5-4	Node s 3-2	Node s 1-0
0=0x00		0x0D		0x0C		0x0B		0x0A		0x09	0xFE	0x08
1=0x01		0x0D		0x0C		0x0B		0x0A	0xFE	0x09		0x08
2=0x02		0x0D		0x0C		0x0B	0xFE	0x0A		0x09		0x08
3=0x03		0x0D		0x0C	0xFE	0x0B		0x0A		0x09		0x08
4=0x04		0x0D	0xFE	0x0C		0x0B		0x0A		0x09		0x08
5=0x05	0xFE	0x0D		0x0C		0x0B		0x0A		0x09		0x08
6=0x06		0xD0		0xC0		0xB0		0xA0		0x90	0xEF	0x80
7=0x07		0xD0		0xC0		0xB0		0xA0	0xEF	0x90		0x80
8=0x08		0xD0		0xC0		0xB0	0xEF	0xA0		0x90		0x80
9=0x09		0xD0		0xC0	0xEF	0xB0		0xA0		0x90		0x80
10=0x0A		0xD0	0xEF	0xC0		0xB0		0xA0		0x90		0x80
11=0x0B	0xEF	0xD0		0xC0		0xB0		0xA0		0x90		0x80
12=0x0C	0x0D		0x0C		0x0B		0x0A		0x09		0x08	0xFE
13=0x0D	0x0D		0x0C		0x0B		0x0A		0x09	0xFE	0x08	
14=0x0E	0x0D		0x0C		0x0B		0x0A	0xFE	0x09		0x08	
15=0x0F	0x0D		0x0C		0x0B	0xFE	0x0A		0x09		0x08	
16=0x10	0x0D		0x0C	0xFE	0x0B		0x0A		0x09		0x08	
17=0x11	0x0D	0xFE	0x0C		0x0B		0x0A		0x09		0x08	
18=0x12	0xD0		0xC0		0xB0		0xA0		0x90		0x80	0xEF
19=0x13	0xD0		0xC0		0xB0		0xA0		0x90	0xEF	0x80	
20=0x14	0xD0		0xC0		0xB0		0xA0	0xEF	0x90		0x80	
21=0x15	0xD0		0xC0		0xB0	0xEF	0xA0		0x90		0x80	
22=0x16	0xD0		0xC0	0xEF	0xB0		0xA0		0x90		0x80	
23=0x17	0xD0	0xEF	0xC0		0xB0		0xA0		0x90		0x80	
24=0x18												0xFC
25=0x19											0xFC	
26=0x1A										0xFC		0xA0
27=0x1B									0xFC	0xA0		
28=0x1C								0xFC			0x0B	
29=0x1D							0xFC		0x0B			
30=0x1E						0xFC	0x0B					
31=0x1F					0xFC							0x0E

Notes: ¹ The non-highlighted numbers in the first 24 memory addresses assign the T1 channels. The bold numbers in the first 24 memory locations assign the talk (nibble = 0xF) and talked (nibble = 0xE) lists. The *italicized* numbers in the last eight memory addresses assign the operators (nibble = 0xC) and annunciators (nibble = 0xF). A second rail (rail 5) is also reserved for the receive side of operators. The *bold italicized* numbers in the lower right corner of the table assign the node sync (nibble = 0xE), the link lines (nibble = 0xA), and the record/playback channels (nibble = 0xB). Two time slots on a second rail (rail 3) are also reserved for the receive side of link lines. MVIP time slot 31 of rail 3 is reserved for the music channel.

² Add 0x20 to the Reference Memory Address for the upper node pair of each DSP board.

Table 2: DCB Function versus MVIP Rail Map

Slot	Rail 0	Rail 1	Rail 2	Rail 3	Rail 4	Rail 5	Rail 6	Rail 7
0=0x00	Ln0 Ch0	Ln1 Ch0	Ln2 Ch0	Ln3 Ch0	Ln4 Ch0	Ln5 Ch0	Talked2	Talk3
1=0x01	Ln0 Ch1	Ln1 Ch1	Ln2 Ch1	Ln3 Ch1	Ln4 Ch1	Ln5 Ch1	Talked6	Talk7
2=0x02	Ln0 Ch2	Ln1 Ch2	Ln2 Ch2	Ln3 Ch2	Ln4 Ch2	Ln5 Ch2	Talked10	Talk11
3=0x03	Ln0 Ch3	Ln1 Ch3	Ln2 Ch3	Ln3 Ch3	Ln4 Ch3	Ln5 Ch3	Talked14	Talk15
4=0x04	Ln0 Ch4	Ln1 Ch4	Ln2 Ch4	Ln3 Ch4	Ln4 Ch4	Ln5 Ch4	Talked18	Talk19
5=0x05	Ln0 Ch5	Ln1 Ch5	Ln2 Ch5	Ln3 Ch5	Ln4 Ch5	Ln5 Ch5	Talked22	Talk23
6=0x06	Ln0 Ch6	Ln1 Ch6	Ln2 Ch6	Ln3 Ch6	Ln4 Ch6	Ln5 Ch6	Talked3	Talk2
7=0x07	Ln0 Ch7	Ln1 Ch7	Ln2 Ch7	Ln3 Ch7	Ln4 Ch7	Ln5 Ch7	Talked7	Talk6
8=0x08	Ln0 Ch8	Ln1 Ch8	Ln2 Ch8	Ln3 Ch8	Ln4 Ch8	Ln5 Ch8	Talked11	Talk10
9=0x09	Ln0 Ch9	Ln1 Ch9	Ln2 Ch9	Ln3 Ch9	Ln4 Ch9	Ln5 Ch9	Talked15	Talk14
10=0x0A	Ln0 Ch10	Ln1 Ch10	Ln2 Ch10	Ln3 Ch10	Ln4 Ch10	Ln5 Ch10	Talked19	Talk18
11=0x0B	Ln0 Ch11	Ln1 Ch11	Ln2 Ch11	Ln3 Ch11	Ln4 Ch11	Ln5 Ch11	Talked23	Talk22
12=0x0C	Ln0 Ch12	Ln1 Ch12	Ln2 Ch12	Ln3 Ch12	Ln4 Ch12	Ln5 Ch12	Talked0	Talk1
13=0x0D	Ln0 Ch13	Ln1 Ch13	Ln2 Ch13	Ln3 Ch13	Ln4 Ch13	Ln5 Ch13	Talked4	Talk5
14=0x0E	Ln0 Ch14	Ln1 Ch14	Ln2 Ch14	Ln3 Ch14	Ln4 Ch14	Ln5 Ch14	Talked8	Talk9
15=0x0F	Ln0 Ch15	Ln1 Ch15	Ln2 Ch15	Ln3 Ch15	Ln4 Ch15	Ln5 Ch15	Talked12	Talk13
16=0x10	Ln0 Ch16	Ln1 Ch16	Ln2 Ch16	Ln3 Ch16	Ln4 Ch16	Ln5 Ch16	Talked16	Talk17
17=0x11	Ln0 Ch17	Ln1 Ch17	Ln2 Ch17	Ln3 Ch17	Ln4 Ch17	Ln5 Ch17	Talked20	Talk21
18=0x12	Ln0 Ch18	Ln1 Ch18	Ln2 Ch18	Ln3 Ch18	Ln4 Ch18	Ln5 Ch18	Talked1	Talk0
19=0x13	Ln0 Ch19	Ln1 Ch19	Ln2 Ch19	Ln3 Ch19	Ln4 Ch19	Ln5 Ch19	Talked5	Talk4
20=0x14	Ln0 Ch20	Ln1 Ch20	Ln2 Ch20	Ln3 Ch20	Ln4 Ch20	Ln5 Ch20	Talked9	Talk8
21=0x15	Ln0 Ch21	Ln1 Ch21	Ln2 Ch21	Ln3 Ch21	Ln4 Ch21	Ln5 Ch21	Talked13	Talk12
22=0x16	Ln0 Ch22	Ln1 Ch22	Ln2 Ch22	Ln3 Ch22	Ln4 Ch22	Ln5 Ch22	Talked17	Talk16
23=0x17	Ln0 Ch23	Ln1 Ch23	Ln2 Ch23	Ln3 Ch23	Ln4 Ch23	Ln5 Ch23	Talked21	Talk20
24=0x18					TX Op1	RX Op1		Annun1
25=0x19					TX Op2	RX Op2		Annun2
26=0x1A			TX Link Ln1	RX Link Ln1	TX Op3	RX Op3		Annun3
27=0x1B			TX Link Ln2	RX Link Ln2	TX Op4	RX Op4		Annun4
28=0x1C				Rcd/Pbk1	TX Op5	RX Op5		Annun5
29=0x1D				Rcd/Pbk2	TX Op6	RX Op6		Annun6
30=0x1E				Rcd/Pbk3	TX Op7	RX Op7		Annun7
31=0x1F				Music	TX Op8	RX Op8	NodeSync	Annun8

-155-

Table 3: MVIP Slot Data for DSP Node Channel Data Structures

Node	Chan 0	Chan 1	Chan 2	Chan 3	Chan 4	Chan 5	Chan 6	Chan 7	Talk	Talked
0	0000	0001	0002	0003	0004	0005	0518-o1		0712	060C
1	0006	0007	0008	0009	000A	000B	0718-a1	031A-ll1	070C	0612
2	000C	000D	000E	000F	0010	0011	0519-o2	031C-rp1	0706	0600
3	0012	0013	0014	0015	0016	0017	0719-a2		0700	0606
4	0100	0101	0102	0103	0104	0105	051A-o3		0713	060D
5	0106	0107	0108	0109	010A	010B	071A-a3	031B-ll2	070D	0613
6	010C	010D	010E	010F	0110	0111	051B-o4	031D-rp2	0707	0601
7	0112	0113	0114	0115	0116	0117	071B-a4		0701	0607
8	0200	0201	0202	0203	0204	0205	051C-o5		0714	060E
9	0206	0207	0208	0209	020A	020B	071C-a5		070E	0614
10	020C	020D	020E	020F	0210	0211	051D-o6	031E-rp3	0708	0602
11	0212	0213	0214	0215	0216	0217	071D-a6		0702	0608
12	0300	0301	0302	0303	0304	0305	051E-o7		0715	060F
13	0306	0307	0308	0309	030A	030B	071E-a7		070F	0615
14	030C	030D	030E	030F	0310	0311	051F-o8		0709	0603
15	0312	0313	0314	0315	0316	0317	071F-a8		0703	0609
16	0400	0401	0402	0403	0404	0405			0716	0610
17	0406	0407	0408	0409	040A	040B			0710	0616
18	040C	040D	040E	040F	0410	0411			070A	0604
19	0412	0413	0414	0415	0416	0417			0704	060A
20	0500	0501	0502	0503	0504	0505			0717	0611
21	0506	0507	0508	0509	050A	050B			0711	0617
22	050C	050D	050E	050F	0510	0511			070B	0605
23	0512	0513	0514	0515	0516	0517			0705	060B

Notes: Slot data is shown in hex form. Upper byte contains MVIP rail number. Lower byte contains the time slot.

5 Unused slots (shown blank) will be set to 0xFFFF.

Node Sync (transmitted by node 0) Time Slot = 0x061F

Music Time Slot = 0x031F

TalkedTimeSlot(node) = 0x060C + (node >> 2) + 6*((node & 0x01) - (node & 0x02))

TalkTimeSlot(node) = 0x0712 + (node >> 2) - 6*(node & 0x03)

10

-156-

Table 4: Logical Channel Number vs DSP Node Channel Data Structures

Node	Chan 0	Chan 1	Chan 2	Chan 3	Chan 4	Chan 5	Chan 6	Chan 7
0	0	1	2	3	4	5	152-o1	
1	6	7	8	9	10	11	144-a1	163-l1
2	12	13	14	15	16	17	153-o2	160-rp1
3	18	19	20	21	22	23	145-a2	
4	24	25	26	27	28	29	154-o3	
5	30	31	32	33	34	35	146-a3	164-l2
6	36	37	38	39	40	41	155-o4	161-rp2
7	42	43	44	45	46	47	147-a4	
8	48	49	50	51	52	53	156-o5	
9	54	55	56	57	58	59	148-a5	
10	60	61	62	63	64	65	157-o6	162-rp3
11	66	67	68	69	70	71	149-a6	
12	72	73	74	75	76	77	158-o7	
13	78	79	80	81	82	83	150-a7	
14	84	85	86	87	88	89	159-o8	
15	90	91	92	93	94	95	151-a8	
16	96	97	98	99	100	101		
17	102	103	104	105	106	107		
18	108	109	110	111	112	113		
19	114	115	116	117	118	119		
20	120	121	122	123	124	125		
21	126	127	128	129	130	131		
22	132	133	134	135	136	137		
23	138	139	140	141	142	143		

-157-

Table 5: DCB Node and Port Data for DSP Board 1

Node	Port	Ref. Mem ¹		Quad	Port ¹	M V	I P	Bus	Tel.	Line	2W	Logical	Function
		TX	Data	TX	RX	TX		RX	Ti	Ti	Ch#	Chan.	
						Addr ²	Addr ³						
0	0	00	08	00	00	0	0	0	0	0		0	conferee
0	1	01	08	01	01	0	1	0	0	1		1	conferee
0	2	02	08	02	02	0	2	0	0	2		2	conferee
0	3	03	08	03	03	0	3	0	0	3		3	conferee
0	4	04	08	04	04	0	4	0	0	4		4	conferee
0	5	05	08	05	05	0	5	0	0	5		5	conferee
0		12	EF	12	F2	7	18	*					talk list 0
0		0C	FE	0C	CC	6	12	*					talked list 0
0	OP1	18	FC	18	B8	4	24	5			9,17	152	operator 1
0		1F	0E	1F	DF	6	31	*					node sync.
1	6	06	80	26	106	0	6	0	0	6		6	conferee
1	7	07	80	27	107	0	7	0	0	7		7	conferee
1	8	08	80	28	108	0	8	0	0	8		8	conferee
1	9	09	80	29	109	0	9	0	0	9		9	conferee
1	10	0A	80	2A	10A	0	10	0	0	10		10	conferee
1	11	0B	80	2B	10B	0	11	0	0	11		11	conferee
1		0C	FE	2C	1EC	7	12	*					talk list 1
1		12	EF	32	1D2	6	18	*					talked list 1
1	AN1	18	FC	38	1F8	7	24	*				144	annunciator 1
1	LL1	1A	A0	3A	15A	2	26	3			1,2	163	link line 1
2	12	2C	08	0C	0C	0	12	0	0	12		12	conferee
2	13	2D	08	0D	0D	0	13	0	0	13		13	conferee
2	14	2E	08	0E	0E	0	14	0	0	14		14	conferee
2	15	2F	08	0F	0F	0	15	0	0	15		15	conferee
2	16	30	08	10	10	0	16	0	0	16		16	conferee
2	17	31	08	11	11	0	17	0	0	17		17	conferee
2		26	EF	06	E6	7	6	*					talk list 2
2		20	FE	00	C0	6	0	*					talked list 2
2	OP2	39	FC	19	B9	4	25	5			10,18	153	operator 2
2	RP1	3C	0B	1C	7C	3	28	3			6,6	160	rcd/pback 1
3	18	32	80	32	112	0	18	0	0	18		18	conferee
3	19	33	80	33	113	0	19	0	0	19		19	conferee
3	20	34	80	34	114	0	20	0	0	20		20	conferee
3	21	35	80	35	115	0	21	0	0	21		21	conferee
3	22	36	80	36	116	0	22	0	0	22		22	conferee
3	23	37	80	37	117	0	23	0	0	23		23	conferee
3		20	FE	20	1E0	7	0	*					talk list 3
3		26	EF	26	1C6	6	6	*					talked list 3
3	AN2	39	FC	39	1F9	7	25	*				145	annunciator 2
-	MU				7F ⁴	*	31	3			*.5		music

¹Hexadecimal data5 ²Add 0x40 on alternate frames based on ping-pong status³Add 0x200 on alternate frames based on ping-pong status⁴Add 0x100 for nodes 1 and 3

SUBSTITUTE SHEET

-158-

Table 6: DCB Node and Port Data for DSP Board 2

Node	Port	Ref. Mem ¹		Quad Port ¹		M V I P Bus			Tel. Line		2W Ch# TX RX	Logical Chan. #	Function
		TX	Data	TX Addr ²	RX Addr ³	TX RX		Tl #	Tl Ch				
						DSO	Ch			DSI			
0	24	00	09	00	20	1	0	1	1	0		24	conferee
0	25	01	09	01	21	1	1	1	1	1		25	conferee
0	26	02	09	02	22	1	2	1	1	2		26	conferee
0	27	03	09	03	23	1	3	1	1	3		27	conferee
0	28	04	09	04	24	1	4	1	1	4		28	conferee
0	29	05	09	05	25	1	5	1	1	5		29	conferee
0		13	EF	13	F3	7	19	*					talk list 4
0		0D	FE	0D	CD	6	13	*					talked list 4
0	OP3	1A	FC	1A	BA	4	26	5			11,19	154	operator 3
1	30	06	90	26	126	1	6	1	1	6		30	conferee
1	31	07	90	27	127	1	7	1	1	7		31	conferee
1	32	08	90	28	128	1	8	1	1	8		32	conferee
1	33	09	90	29	129	1	9	1	1	9		33	conferee
1	34	0A	90	2A	12A	1	10	1	1	10		34	conferee
1	35	0B	90	2B	12B	1	11	1	1	11		35	conferee
1		0D	FE	2D	1ED	7	13	*					talk list 5
1		13	EF	33	1D3	6	19	*					talked list 5
1	AN3	1A	FC	3A	1FA	7	26	*				146	annunciator 3
1	LL2	1B	A0	3B	15B	2	27	3			3,4	164	link line 2
2	36	2C	09	0C	2C	1	12	1	1	12		36	conferee
2	37	2D	09	0D	2D	1	13	1	1	13		37	conferee
2	38	2E	09	0E	2E	1	14	1	1	14		38	conferee
2	39	2F	09	0F	2F	1	15	1	1	15		39	conferee
2	40	30	09	10	30	1	16	1	1	16		40	conferee
2	41	31	09	11	31	1	17	1	1	17		41	conferee
2		27	EF	07	E7	7	7	*					talk list 6
2		21	FE	01	C1	6	1	*					talked list 6
2	OP4	3B	FC	1B	BB	4	27	5			12,20	155	operator 4
2	RP2	3D	0B	1D	7D	3	29	3			7,7	161	rcd/pback 2
3	42	32	90	32	132	1	18	1	1	18		42	conferee
3	43	33	90	33	133	1	19	1	1	19		43	conferee
3	44	34	90	34	134	1	20	1	1	20		44	conferee
3	45	35	90	35	135	1	21	1	1	21		45	conferee
3	46	36	90	36	136	1	22	1	1	22		46	conferee
3	47	37	90	37	137	1	23	1	1	23		47	conferee
3		21	FE	21	1E1	7	1	*					talk list 7
3		27	EF	27	1C7	6	7	*					talked list 7
3	AN4	3B	FC	3B	1FB	7	27	*				147	annunciator 4

¹Hexadecimal data5 ²Add 0x40 on alternate frames based on ping-pong status³Add 0x200 on alternate frames based on ping-pong status

SUBSTITUTE SHEET

-159-

Table 7: DCB Node and Port Data for DSP Board 3

Node	Port	Ref. Mem ¹		Quad	Port ¹	M V I P Bus			Tel. Line		2W Ch# TX RX	Logical Chan. #	Function
		TX				TX	RX	T1	T1				
		Addr	Data							Addr ²			
0	48	00	0A	00	40	2	0	2	2	0		48	conferee
0	49	01	0A	01	41	2	1	2	2	1		49	conferee
0	50	02	0A	02	42	2	2	2	2	2		50	conferee
0	51	03	0A	03	43	2	3	2	2	3		51	conferee
0	52	04	0A	04	44	2	4	2	2	4		52	conferee
0	53	05	0A	05	45	2	5	2	2	5		53	conferee
0		14	EF	14	F4	7	20	*					talk list 8
0		0E	FE	0E	CE	6	14	*					talked list 8
0	OP5	1C	FC	1C	BC	4	28	5			13,21	156	operator 5
1	54	06	A0	26	146	2	6	2	2	6		54	conferee
1	55	07	A0	27	147	2	7	2	2	7		55	conferee
1	56	08	A0	28	148	2	8	2	2	8		56	conferee
1	57	09	A0	29	149	2	9	2	2	9		57	conferee
1	58	0A	A0	2A	14A	2	10	2	2	10		58	conferee
1	59	0B	A0	2B	14B	2	11	2	2	11		59	conferee
1		0E	FE	2E	1EE	7	14	*					talk list 9
1		14	EF	34	1D4	6	20	*					talked list 9
1	AN5	1C	FC	3C	1FC	7	28	*				148	annunciator 5
2	60	2C	0A	0C	4C	2	12	2	2	12		60	conferee
2	61	2D	0A	0D	4D	2	13	2	2	13		61	conferee
2	62	2E	0A	0E	4E	2	14	2	2	14		62	conferee
2	63	2F	0A	0F	4F	2	15	2	2	15		63	conferee
2	64	30	0A	10	50	2	16	2	2	16		64	conferee
2	65	31	0A	11	51	2	17	2	2	17		65	conferee
2		28	EF	08	E8	7	8	*					talk list 10
2		22	FE	02	C2	6	2	*					talked list 10
2	OP6	3D	FC	1D	BD	4	29	5			14,22	157	operator 6
2	RP3	3E	0B	1E	7E	3	30	3			8,8	162	rcd/pback 3
3	66	32	A0	32	152	2	18	2	2	18		66	conferee
3	67	33	A0	33	153	2	19	2	2	19		67	conferee
3	68	34	A0	34	154	2	20	2	2	20		68	conferee
3	69	35	A0	35	155	2	21	2	2	21		69	conferee
3	70	36	A0	36	156	2	22	2	2	22		70	conferee
3	71	37	A0	37	157	2	23	2	2	23		71	conferee
3		22	FE	22	1E2	7	2	*					talk list 11
3		28	EF	28	1C8	6	8	*					talked list 11
3	AN6	3D	FC	3D	1FD	7	29	*				149	annunciator 6

¹Hexadecimal data5 ²Add 0x40 on alternate frames based on ping-pong status³Add 0x200 on alternate frames based on ping-pong status

SUBSTITUTE SHEET

-160-

Table 8: DCB Node and Port Data for DSP Board 4

Node	Port	Ref. Mem ¹		Quad	Port ¹	M	V	I	P	Bus	Tel.	Line	2W Ch# TX RX	Logical Chan. #	Function				
		TX	RX													TX	RX	T1	T1
0	72	00	0B	00	60	3	0	3		3	0			72	conferee				
0	73	01	0B	01	61	3	1	3		3	1			73	conferee				
0	74	02	0B	02	62	3	2	3		3	2			74	conferee				
0	75	03	0B	03	63	3	3	3		3	3			75	conferee				
0	76	04	0B	04	64	3	4	3		3	4			76	conferee				
0	77	05	0B	05	65	3	5	3		3	5			77	conferee				
0		15	EF	15	F5	7	21	*							talk list 12				
0		0F	FE	0F	CF	6	15	*							talked list 12				
0	OP7	1E	FC	1E	BE	4	30	5				15,23	158		operator 7				
1	78	06	B0	26	166	3	6	3		3	6			78	conferee				
1	79	07	B0	27	167	3	7	3		3	7			79	conferee				
1	80	08	B0	28	168	3	8	3		3	8			80	conferee				
1	81	09	B0	29	169	3	9	3		3	9			81	conferee				
1	82	0A	B0	2A	16A	3	10	3		3	10			82	conferee				
1	83	0B	B0	2B	16B	3	11	3		3	11			83	conferee				
1		0F	FE	2F	1EF	7	15	*							talk list 13				
1		15	EF	35	1D5	6	21	*							talked list 13				
1	AN7	1E	FC	3E	1FE	7	30	*						150	annunciator 7				
2	84	2C	0B	0C	6C	3	12	3		3	12			84	conferee				
2	85	2D	0B	0D	6D	3	13	3		3	13			85	conferee				
2	86	2E	0B	0E	6E	3	14	3		3	14			86	conferee				
2	87	2F	0B	0F	6F	3	15	3		3	15			87	conferee				
2	88	30	0B	10	70	3	16	3		3	16			88	conferee				
2	89	31	0B	11	71	3	17	3		3	17			89	conferee				
2		29	EF	09	E9	7	9	*							talk list 14				
2		23	FE	03	C3	6	3	*							talked list 14				
2	OP8	3F	FC	1F	BF	4	31	5				16,24	159		operator 8				
3	90	32	B0	32	172	3	18	3		3	18			90	conferee				
3	91	33	B0	33	173	3	19	3		3	19			91	conferee				
3	92	34	B0	34	174	3	20	3		3	20			92	conferee				
3	93	35	B0	35	175	3	21	3		3	21			93	conferee				
3	94	36	B0	36	176	3	22	3		3	22			94	conferee				
3	95	37	B0	37	177	3	23	3		3	23			95	conferee				
3		23	FE	23	1E3	7	3	*							talk list 15				
3		29	EF	29	1C9	6	9	*							talked list 15				
3	AN8	3F	FC	3F	1FF	7	31	*						151	annunciator 8				

¹Hexadecimal data²Add 0x40 on alternate frames based on ping-pong status³Add 0x200 on alternate frames based on ping-pong status

SUBSTITUTE SHEET

-161-

Table 9: DCB Node and Port Data for DSP Board 5

Node	Port	Ref. Mem ¹		Quad	Port ¹	M	V	I	Bus	Tel.	Line	2W	Logical	Function
		TX												
		Addr	Data	Addr ²	Addr ³	DSo	Ch	DSI	T1	T1				
										#	Ch	#	Chan.	
0	96	00	0C	00	80	4	0	4	4	4	0		96	conferee
0	97	01	0C	01	81	4	1	4	4	4	1		97	conferee
0	98	02	0C	02	82	4	2	4	4	4	2		98	conferee
0	99	03	0C	03	83	4	3	4	4	4	3		99	conferee
0	100	04	0C	04	84	4	4	4	4	4	4		100	conferee
0	101	05	0C	05	85	4	5	4	4	4	5		101	conferee
0		16	EF	16	F6	7	22	*						talk list 16
0		10	FE	10	D0	6	16	*						talked list 16
1	102	06	C0	26	186	4	6	4	4	4	6		102	conferee
1	103	07	C0	27	187	4	7	4	4	4	7		103	conferee
1	104	08	C0	28	188	4	8	4	4	4	8		104	conferee
1	105	09	C0	29	189	4	9	4	4	4	9		105	conferee
1	106	0A	C0	2A	18A	4	10	4	4	4	10		106	conferee
1	107	0B	C0	2B	18B	4	11	4	4	4	11		107	conferee
1		10	FE	30	1F0	7	16	*						talk list 17
1		16	EF	36	1D6	6	22	*						talked list 17
2	108	2C	0C	0C	8C	4	12	4	4	4	12		108	conferee
2	109	2D	0C	0D	8D	4	13	4	4	4	13		109	conferee
2	110	2E	0C	0E	8E	4	14	4	4	4	14		110	conferee
2	111	2F	0C	0F	8F	4	15	4	4	4	15		111	conferee
2	112	30	0C	10	90	4	16	4	4	4	16		112	conferee
2	113	31	0C	11	91	4	17	4	4	4	17		113	conferee
2		2A	EF	0A	EA	7	10	*						talk list 18
2		24	FE	04	C4	6	4	*						talked list 18
3	114	32	C0	32	192	4	18	4	4	4	18		114	conferee
3	115	33	C0	33	193	4	19	4	4	4	19		115	conferee
3	116	34	C0	34	194	4	20	4	4	4	20		116	conferee
3	117	35	C0	35	195	4	21	4	4	4	21		117	conferee
3	118	36	C0	36	196	4	22	4	4	4	22		118	conferee
3	119	37	C0	37	197	4	23	4	4	4	23		119	conferee
3		24	FE	24	1E4	7	4	*						talk list 19
3		2A	EF	2A	1CA	6	10	*						talked list 19

5 ¹Hexadecimal data²Add 0x40 on alternate frames based on ping-pong status³Add 0x200 on alternate frames based on ping-pong status

SUBSTITUTE SHEET

-162-

Table 10: DCB Node and Port Data for DSP Board 6

Node	Port	Ref. Mem ¹		Quad Port ¹		M V I P Bus			Tel. Line		2W Ch #	Logical Chan. #	Function
		TX	Data	TX Addr ²	RX Addr ³	TX RX		T1 #	T1 Ch				
						DSo	Ch			DSi			
0	120	00	0D	00	A0	5	0	5	5	0		120	conferee
0	121	01	0D	01	A1	5	1	5	5	1		121	conferee
0	122	02	0D	02	A2	5	2	5	5	2		122	conferee
0	123	03	0D	03	A3	5	3	5	5	3		123	conferee
0	124	04	0D	04	A4	5	4	5	5	4		124	conferee
0	125	05	0D	05	A5	5	5	5	5	5		125	conferee
0		17	EF	17	F7	7	23	*					talk list 20
0		11	FE	11	D1	6	17	*					talked list 20
1	126	06	D0	26	1A6	5	6	5	5	6		126	conferee
1	127	07	D0	27	1A7	5	7	5	5	7		127	conferee
1	128	08	D0	28	1A8	5	8	5	5	8		128	conferee
1	129	09	D0	29	1A9	5	9	5	5	9		129	conferee
1	130	0A	D0	2A	1AA	5	10	5	5	10		130	conferee
1	131	0B	D0	2B	1AB	5	11	5	5	11		131	conferee
1		11	FE	31	1F1	7	17	*					talk list 21
1		17	EF	37	1D7	6	23	*					talked list 21
2	132	2C	0D	0C	AC	5	12	5	5	12		132	conferee
2	133	2D	0D	0D	AD	5	13	5	5	13		133	conferee
2	134	2E	0D	0E	AE	5	14	5	5	14		134	conferee
2	135	2F	0D	0F	AF	5	15	5	5	15		135	conferee
2	136	30	0D	10	B0	5	16	5	5	16		136	conferee
2	137	31	0D	11	B1	5	17	5	5	17		137	conferee
2		2B	EF	0B	EB	7	11	*					talk list 22
2		25	FE	05	C5	6	5	*					talked list 22
3	138	32	D0	32	1B2	5	18	5	5	18		138	conferee
3	139	33	D0	33	1B3	5	19	5	5	19		139	conferee
3	140	34	D0	34	1B4	5	20	5	5	20		140	conferee
3	141	35	D0	35	1B5	5	21	5	5	21		141	conferee
3	142	36	D0	36	1B6	5	22	5	5	22		142	conferee
3	143	37	D0	37	1B7	5	23	5	5	23		143	conferee
3		25	FE	25	1E5	7	5	*					talk list 23
3		2B	EF	2B	1CB	6	11	*					talked list 23

¹Hexadecimal data5 ²Add 0x40 on alternate frames based on ping-pong status³Add 0x200 on alternate frames based on ping-pong status

SUBSTITUTE SHEET

Table 11: Mitel T1 Board SW1 and SW2 ST-Bus Initialization Data¹

Time Slot	SW1 ² CMH	SW2 CML				SW2 CMH ⁶				
		CSTi0	CSTi1							
	STBus 0-7	STBus 1&4 ³	STBus 2&5 ⁴	STBus 6	STBus 7 ⁵	STBus 0&3	STBus 1&4	STBus 2&5	STBus 6	STBus 7
0	0	4	0	-	E0	0	7	7	2	3
1	0	4	0	-	E1	0	7	7	2	3
2	0	4	0	-	E2	0	7	7	2	3
3	0	-	-	-	E3	0	2	2	2	3
4	0	4	0	-	E4	0	7	7	2	3
5	0	4	0	-	E5	0	7	7	2	3
6	0	4	0	-	E6	0	7	7	2	3
7	0	-	-	-	E7	0	2	2	2	3
8	0	4	0	-	E8	0	7	7	2	3
9	0	4	0	-	E9	0	7	7	2	3
10	0	4	0	-	EA	0	7	7	2	3
11	0	-	-	-	EB	0	2	2	2	3
12	0	4	0	-	EC	0	7	7	2	3
13	0	4	0	-	ED	0	7	7	2	3
14	0	4	0	-	EE	0	7	7	2	3
15	0	30 ⁷	-	-	EF	0	7	2	2	3
16	0	4	0	0 ⁸	F0	0	7	7	7	3
17	0	4	0	-	F1	0	7	7	2	3
18	0	4	0	-	F2	0	7	7	2	3
19	0	-	-	-	F3	0	2	2	2	3
20	0	4	0	-	F4	0	7	7	2	3
21	0	4	0	-	F5	0	7	7	2	3
22	0	4	0	-	F6	0	7	7	2	3
23	0	-	-	-	F7	0	2	2	2	3
24	0	4	0	-	F8	0	7	7	2	3
25	0	4	0	-	F9	0	7	7	2	3
26	0	4	0	-	FA	0	7	7	2	3
27	0	-	-	-	FB	0	2	2	2	3
28	0	4	0	-	FC	0	7	7	2	3
29	0	4	0	-	FD	0	7	7	2	3
30	0	4	0	-	FE	0	7	7	2	3
31	0	0 ⁹	-	-	FF	0	7	2	2	3

¹All Boards unless otherwise noted. All switch setting shown in hexadecimal. Board Master Control Register: Board0=8E; Board1=8A; Board2=8A. Coding: Always=80 | TrunkB-ABCD-IRQ=40 | TrunkA-ABCD-IRQ=20 | ODE=8 | EN8KHz=4 | MVP=2 | Int1=1

²MsgMode=4 | ResourcePort=2 | OutputEnable=1

³NoPolarityInversion=4 | ChanLoopback=2 | DataEnable=1

⁴TxSigBitA=8 | TxSigBitB=4 | TxSigBitC=2 | TxSigBitD=1

⁵ST-Bus7 < 5 | Channel

⁶MsgMode=4 | MVP-BusEnableOff=2 | OutputEnable=1

⁷20 for STBus 1 on Board 0. Coding: DebounceDisabled=80 | DSPZCSDDisabled=40 | B8ZS=20 | 8KHzDisabled=10 | ESFYLRW=4 | RobbedBitDisabled=2 | YLALR=1

⁸TrunkB-ABCD=2 | TrunkA-ABCD=1

⁹RMLOOP=80 | DGLOOP=40 | ALL1's=20 | ESF=10 | Reframe=8->0 | SLC96=4 | SyncOnMIMIC=2 | Maint4/12=1

-164-

Table 12: Mitel T1 Board SW3 and SW4 ST-Bus Initialization¹

Time Slot	SW3 CML ²						SW3 CMH ³		SW4 CML ⁴		SW4 CMH ³
	(DST)	STBus 0			(DST)	STBus 3			B0 ST0 B1 ST2 B2 ST4	B0 ST1 B1 ST3 B2 ST5	B0 ST0&1 B1 ST2&3 B2 ST4&5
	Board 0	Board 1	Board 2	Board 0	Board 1	Board 2	STBus 0&3	STBus 1&4 2&5			
0	-	-	-	-	-	-	02	02	01	61	3
1	00	40	80	20	60	A0	03	02	02	62	3
2	01	41	81	21	61	A1	03	02	03	63	3
3	02	42	82	22	62	A2	03	02	05	65	3
4	-	-	-	-	-	-	02	02	06	66	3
5	03	43	83	23	63	A3	03	02	07	67	3
6	04	44	84	24	64	A4	03	02	09	69	3
7	05	45	85	25	65	A5	03	02	0A	6A	3
8	-	-	-	-	-	-	02	02	0B	6B	3
9	06	46	86	26	66	A6	03	02	0D	6D	3
10	07	47	87	27	67	A7	03	02	0E	6E	3
11	08	48	88	28	68	A8	03	02	0F	6F	3
12	-	-	-	-	-	-	02	02	11	71	3
13	09	49	89	29	69	A9	03	02	12	72	3
14	0A	4A	8A	2A	6A	AA	03	02	13	73	3
15	0B	4B	8B	2B	6B	AB	03	02	15	75	3
16	-	-	-	-	-	-	02	02	16	76	3
17	0C	4C	8C	2C	6C	AC	03	02	17	77	3
18	0D	4D	8D	2D	6D	AD	03	02	19	79	3
19	0E	4E	8E	2E	6E	AE	03	02	1A	7A	3
20	-	-	-	-	-	-	02	02	1B	7B	3
21	0F	4F	8F	2F	6F	AF	03	02	1D	7D	3
22	10	50	90	30	70	B0	03	02	1E	7E	3
23	11	51	91	31	71	B1	03	02	1F	7F	3
24	-	-	-	-	-	-	02	02	-	-	2
25	12	52	92	32	72	B2	03	02	-	-	2
26	13	53	93	33	73	B3	03	02	-	-	2
27	14	54	94	34	74	B4	03	02	-	-	2
28	-	-	-	-	-	-	02	02	-	-	2
29	15	55	95	35	75	B5	03	02	-	-	2
30	16	56	96	36	76	B6	03	02	-	-	2
31	17	57	97	37	77	B7	03	02	-	-	2

¹All boards unless otherwise noted5 ²MVIP-Bus < <5 | Channel³MsgMode=4 | Always=2 | OutputEnable=1⁴ST-Bus(DST) < <5 | Channel

- 10 Described above is a preferred system for use in a teleconferencing system meeting the objects hereof. Those skilled in the art will appreciate that other systems, incorporations, modifications, deletions or additions hereto may fall within the scope of the invention, in which we claim:

-165-

Claims:

1. A signal processing apparatus for use in a system for teleconferencing a plurality of phone channels, said system being of the type including common bus means for carrying digital signals representing data incoming from and outgoing to said plurality of phone channels, comprising

A. at least one digital signal processing (DSP) means, coupled to said common bus means and associated with at least one phone channel, for

10

(i) responding to incoming data on each associated phone channel to generate a signal representative of a status of that phone channel, and

15

(ii) transferring said status signal to said common bus,

B. said at least one DSP means further including means for

(i) responding to the status signals associated with said plural phone channels to generate for each phone channel associated with that DSP means an output data signal as a function of at least selected ones of said incoming data signals, and

20

(ii) transferring said output data signal on said common bus to said associated phone channel.

2. A signal processing apparatus for use in a system for teleconferencing a plurality of phone channels, said system being of the type including common bus means for carrying digital signals representing data incoming from and outgoing to said plurality of phone channels, comprising

25

A. a plurality of digital signal processing (DSP) means, each DSP means coupled to said common bus means and associated with at least one phone channel, for

30

(i) responding to incoming data on each associated phone channel to generate a signal representative of a status of that phone channel, and

35

(ii) transferring said status signal to each of said DSP means,

B. each of said DSP means further including means for

-166-

(ii) transferring said status signal to each of said DSP means,

B. each of said DSP means further including means for

(i) responding to the status signals associated with said plural phone channels to generate for each phone channel associated with said each DSP means an output data signal as a function of at least selected ones of said incoming data signals, and

(ii) transferring said output data signal on said common bus to said associated phone channel.

3. An apparatus according to any of claims 1 or 2, wherein said DSP means includes energy detection means for generating said status signal to be indicative of a selected activity level on the associated incoming phone channel.

4. An apparatus according to claim 3, wherein said energy detection means includes means for generating said status signal as a function of an energy level represented by data in the associated incoming phone channel.

5. An apparatus according to claim 4, wherein said energy level means includes means for generating said status signal as indicative of a value representative of the difference between the incoming data energy level and the average energy in said output data signal being greater than a threshold energy value.

6. An apparatus according to claim 3, wherein said DSP means including talk-list means responsive to said status signals for generating said output data signal as a function of incoming data on a selected number of those phone channels that have said selected activity level thereon.

7. An apparatus according to claim 6, wherein said talk-list means includes means for generating and storing a talk-list signal representing said selected phone channels that have said selected activity level thereon.

8. An apparatus according to claim 7, wherein said talk-list means includes means for generating said talk-list identically and substantially with each other of said talk-list means.

-167-

9. An apparatus according to claim 7, wherein said talk-list means includes means for selecting for representation in said talk-list signal a phone channel that has an energy difference between the incoming data energy level and the average energy in said output data signal that exceeds a designated value.
- 5 10. An apparatus according to claim 7, wherein said talk-list means includes means for selecting for representation in said talk-list signal a phone channel having an incoming data energy level that exceeds an average incoming data energy level of the current talk list.
- 10 11. An apparatus according to any of claims 1 or 2, wherein
- A. said DSP means include means responsive to control parameter for at least initializing teleconferencing between said plurality of phone channels,
- 15 B. said apparatus further comprising host processing means, coupled to said DSP means, for generating and storing for access thereby, said control parameters,
- C. said DSP means includes means for maintaining teleconferencing between at least selected ones of said plurality of phone channels in the event of selected fault by said
- 20 host processing means.
12. A method for teleconferencing a plurality of phone channels in a system having a common bus means for carrying digital signals representing data incoming from and outgoing to said plurality of phone channels, comprising the steps of
- 25 A. coupling a plurality of digital signal processing (DSP) means to said common bus means wherein each of said DSP means is associated with at least one phone channel, and wherein every DSP receives data from all incoming phone channels,
- 30 B. responding to incoming data on each associated phone channel to generate a signal representative of a status of that phone channel,
- C. transferring said status signal to each of said DSP means,
- 35 D. responding to the status signals associated with said plural phone channels to generate for each phone channel associated with each of said DSP means an output data signal as a function of at least selected ones of said incoming data signals, and

-168-

E. transferring said output data signal on said common bus to said associated phone channel.

1/10

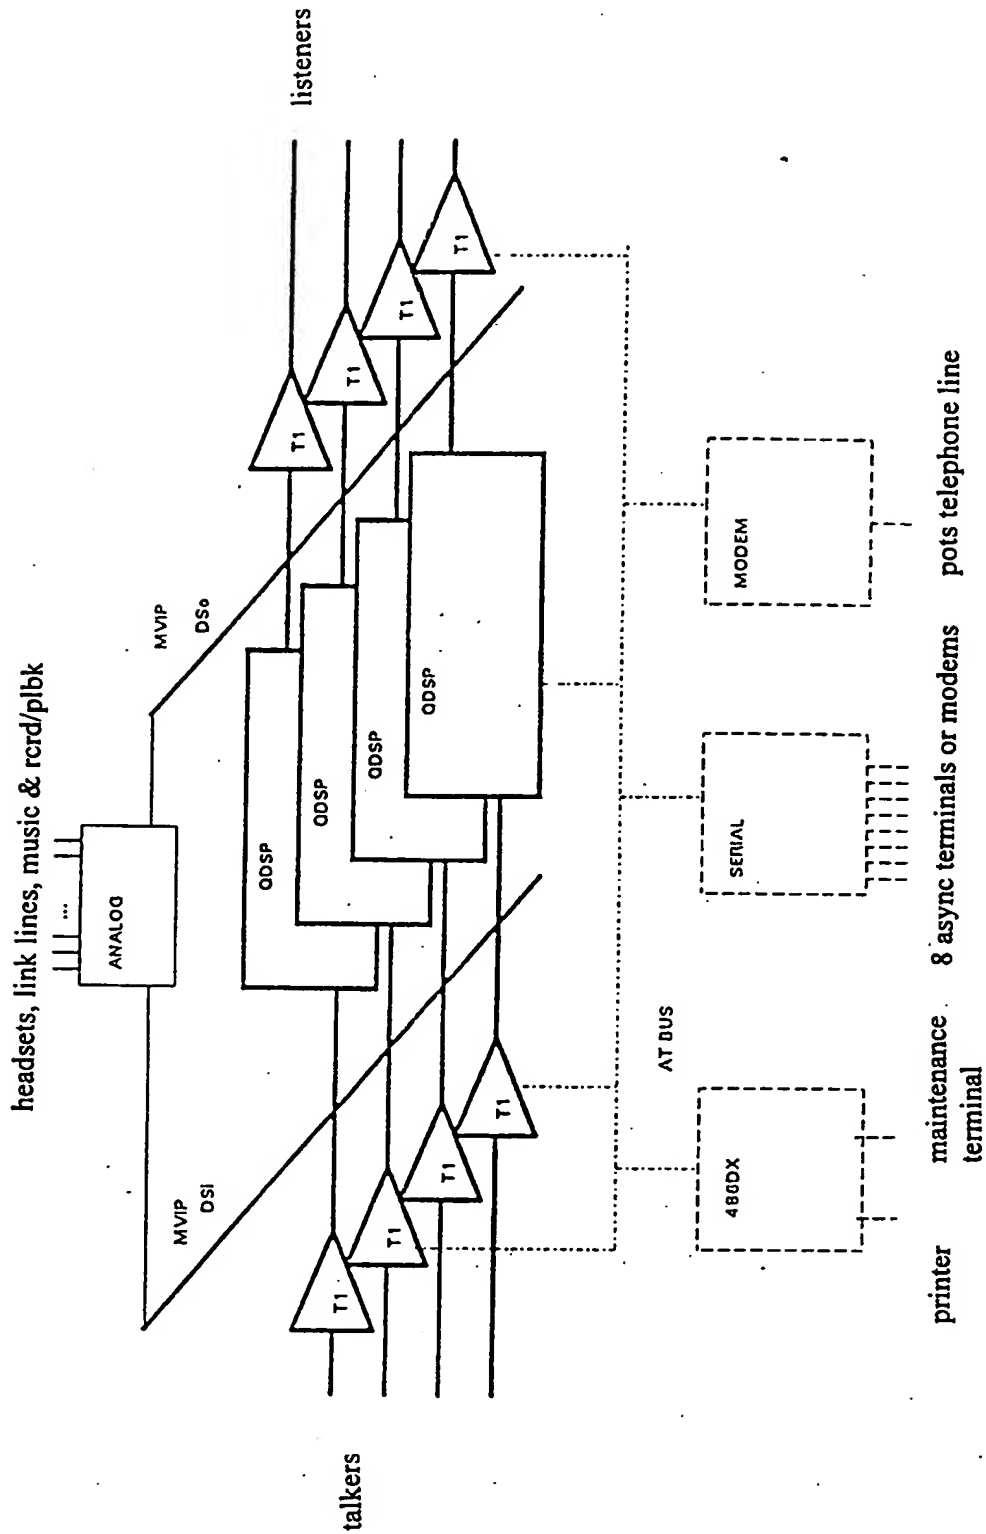


FIGURE 1

2/10

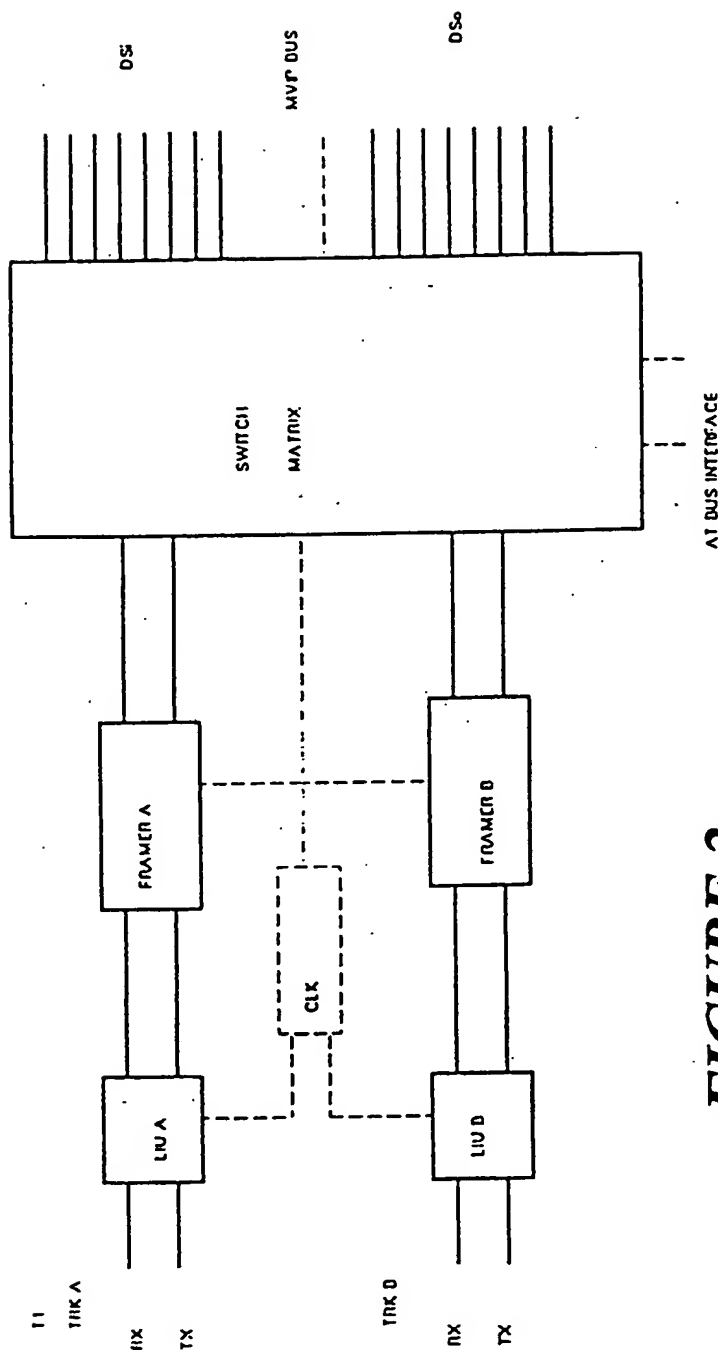


FIGURE 2

3/10


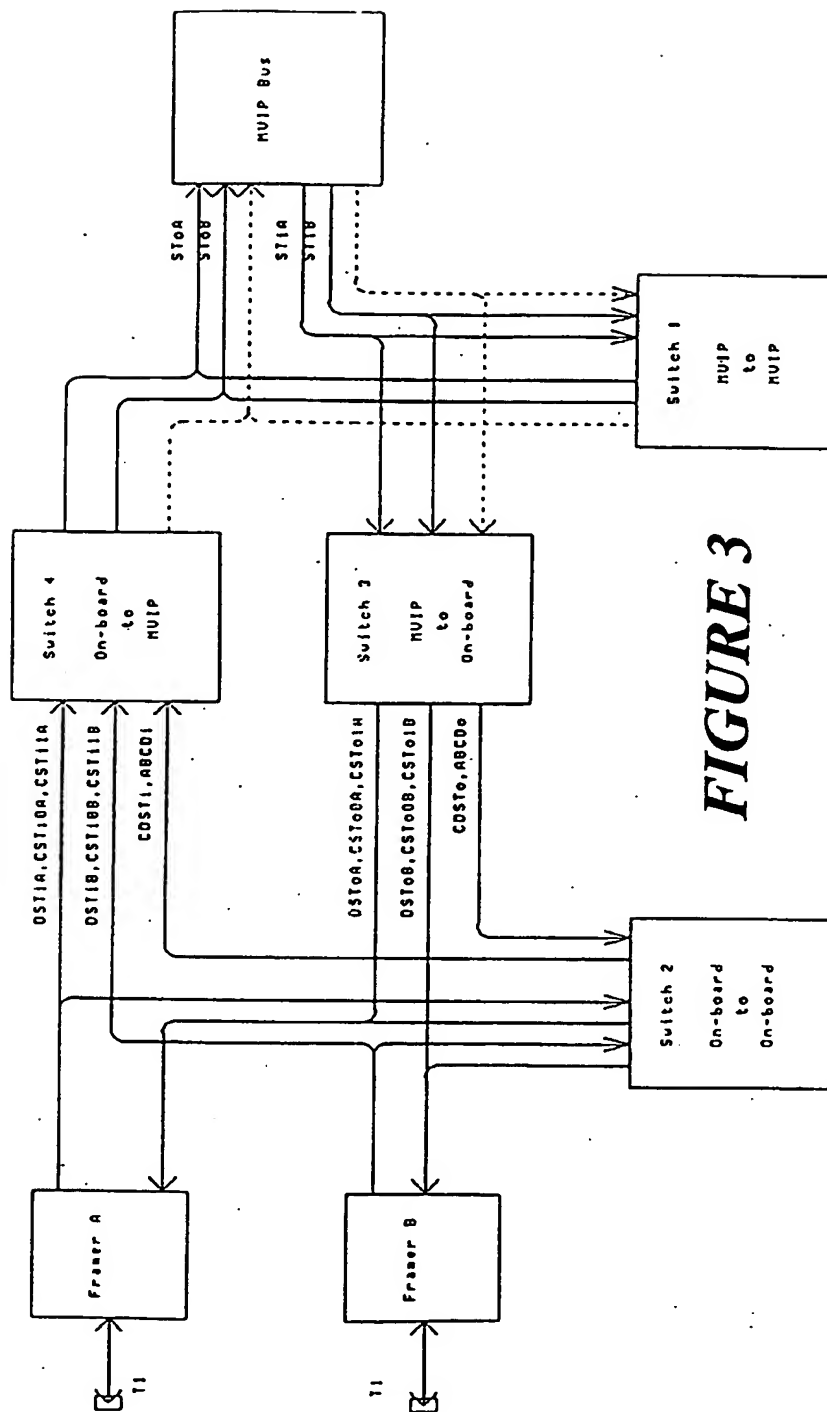
**FIGURE 3**

FIGURE 4

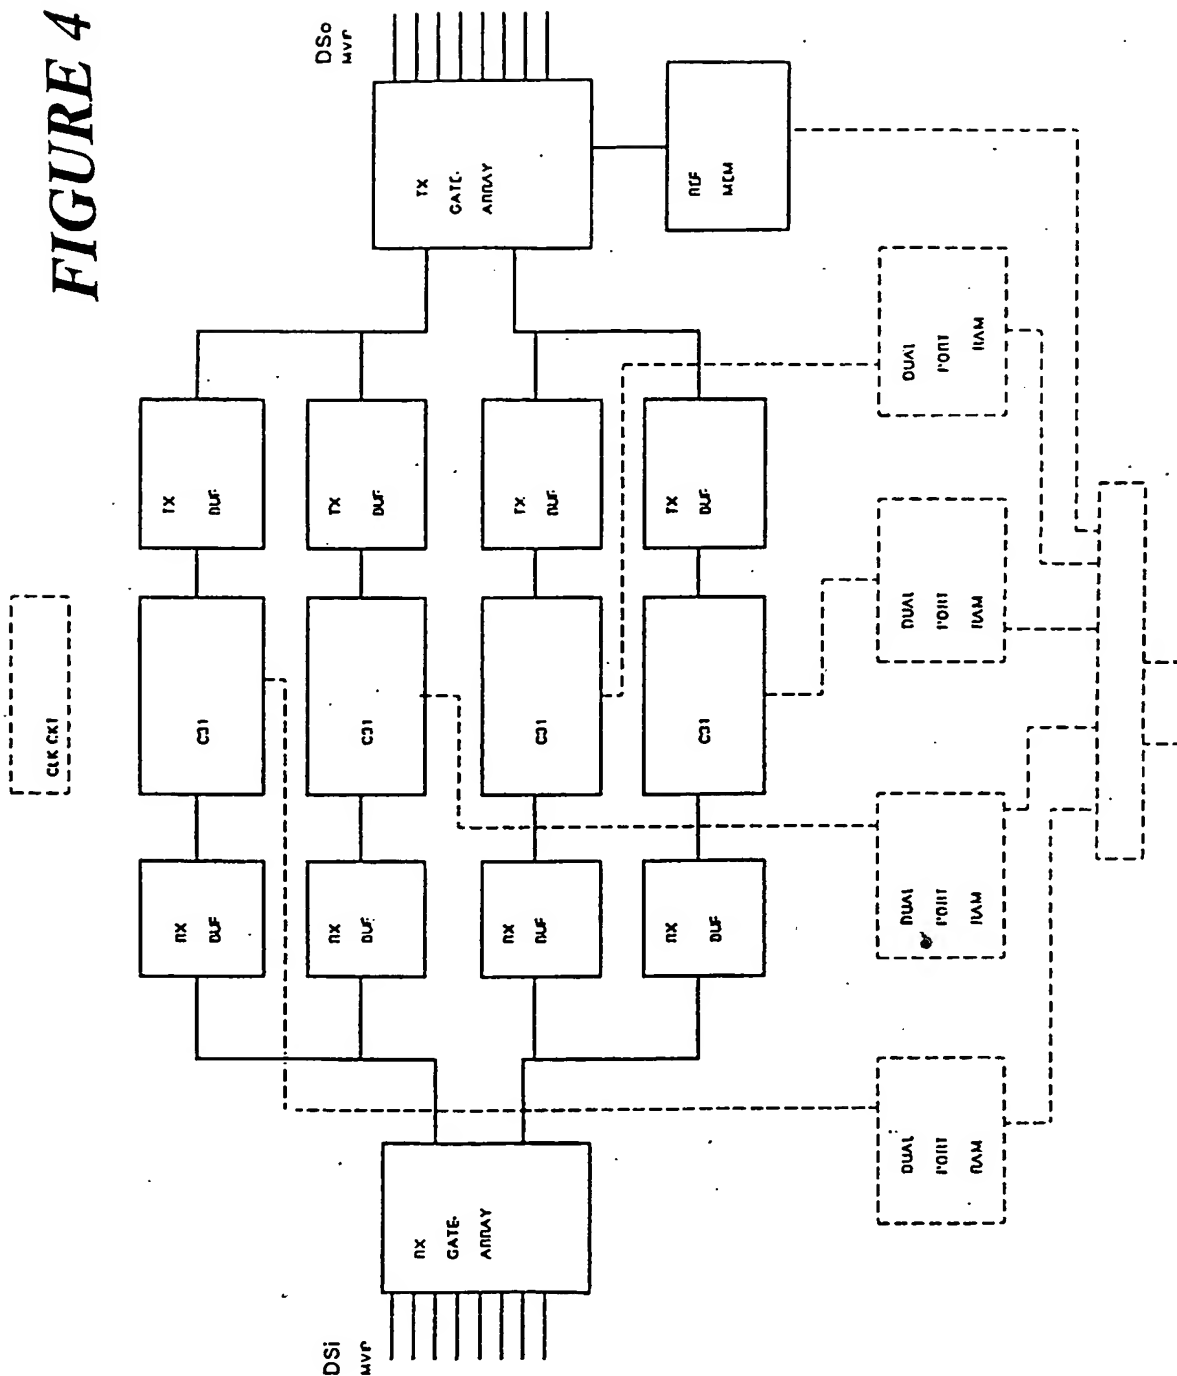

5/10

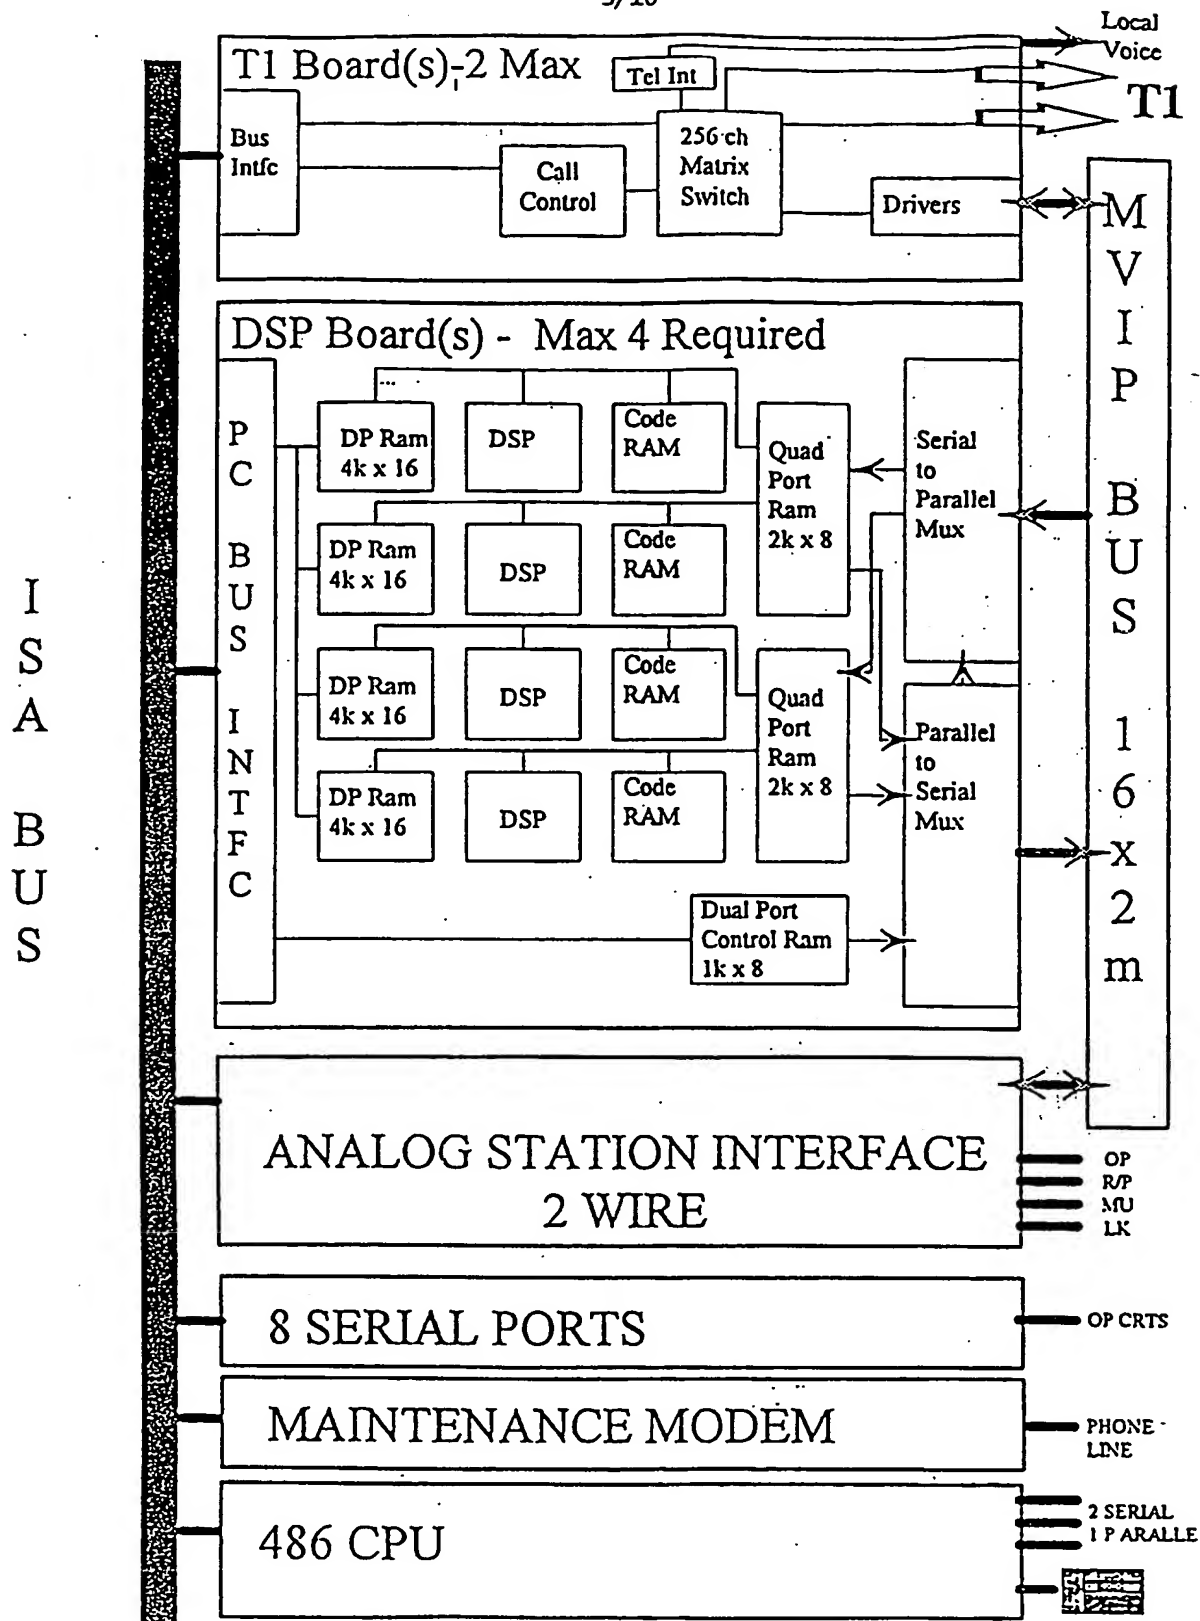


FIGURE 5
SUBSTITUTE SHEET

6/10

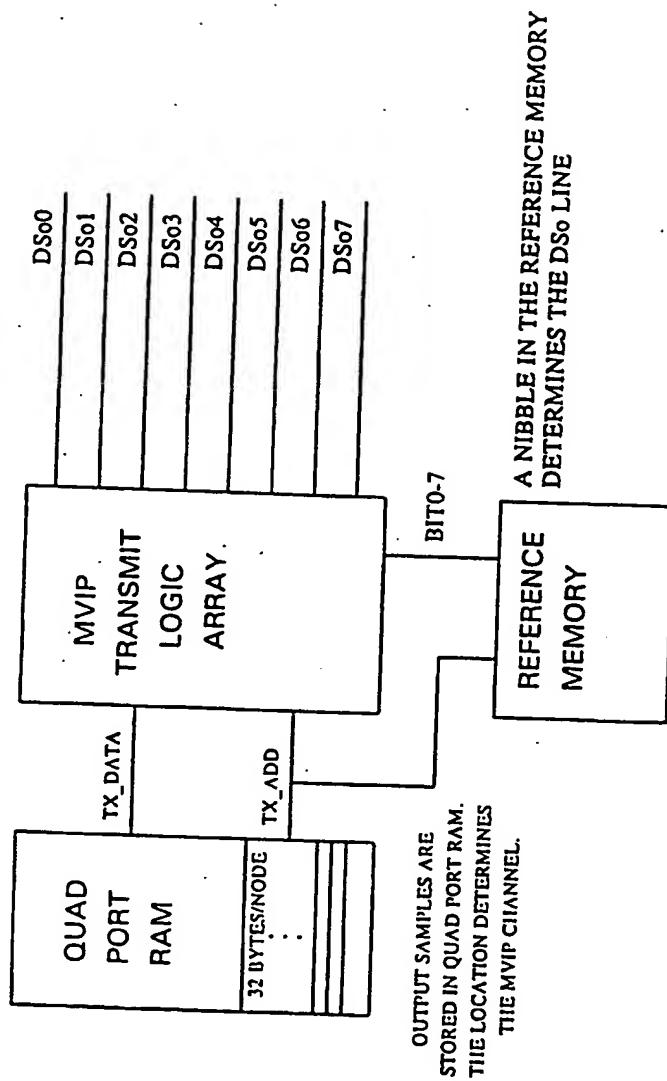


FIGURE 6

7/10

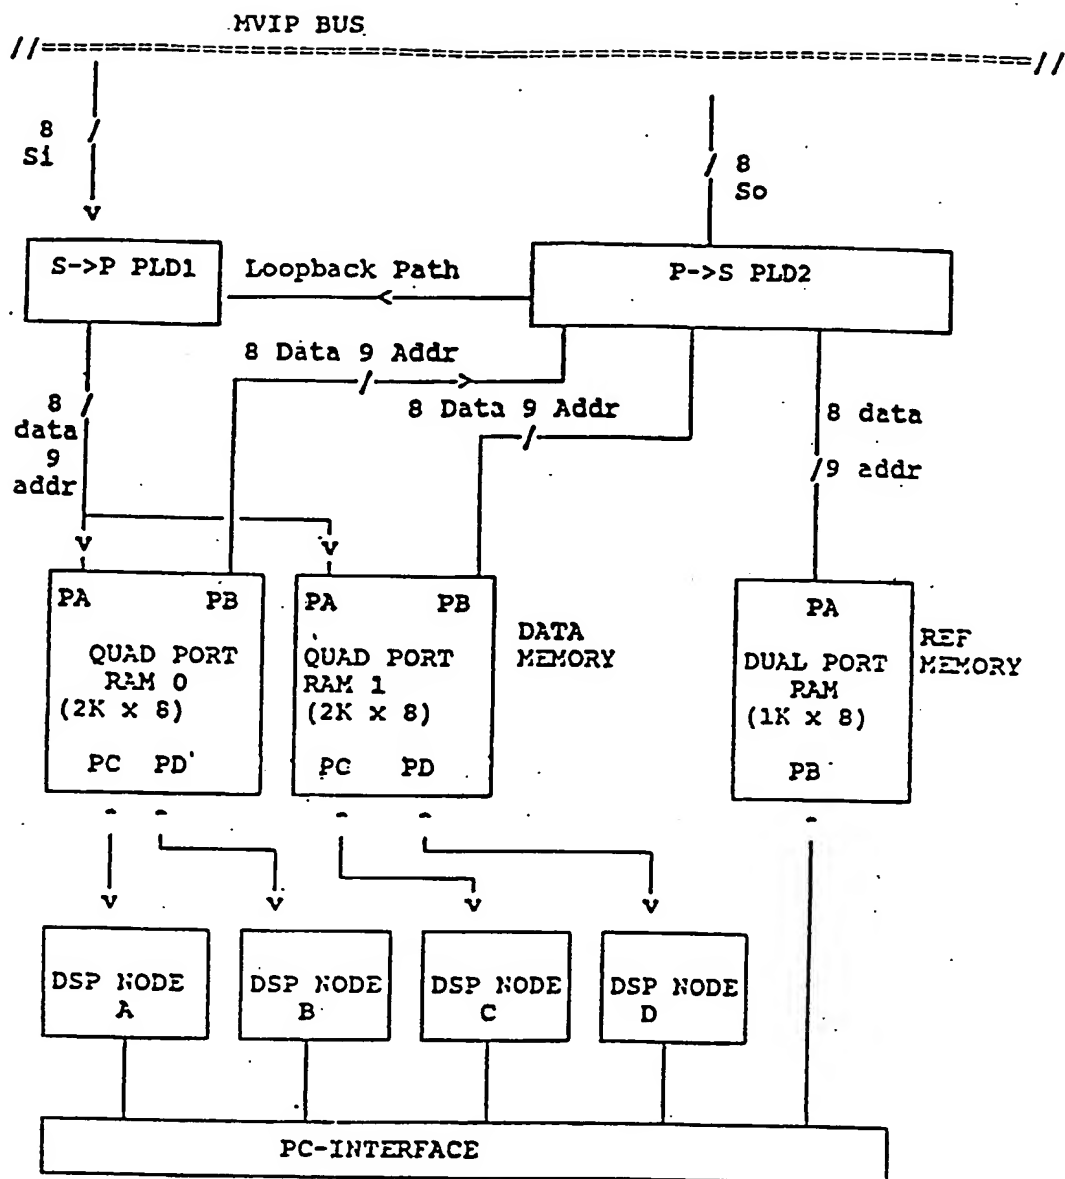
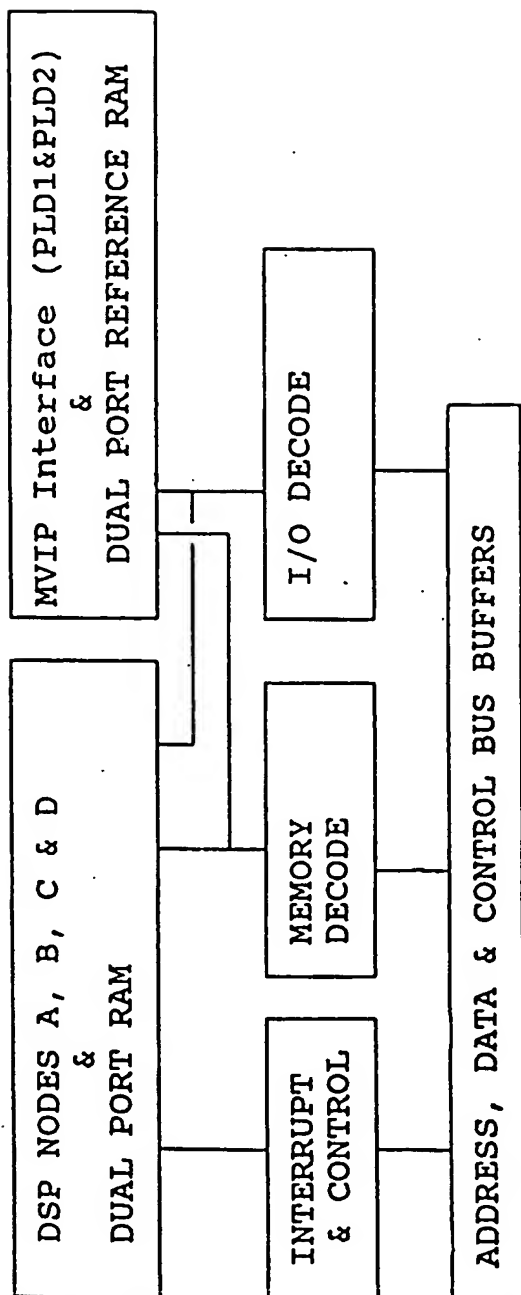


FIGURE 7

SUBSTITUTE SHEET

8/10

**FIGURE 8**

9/10

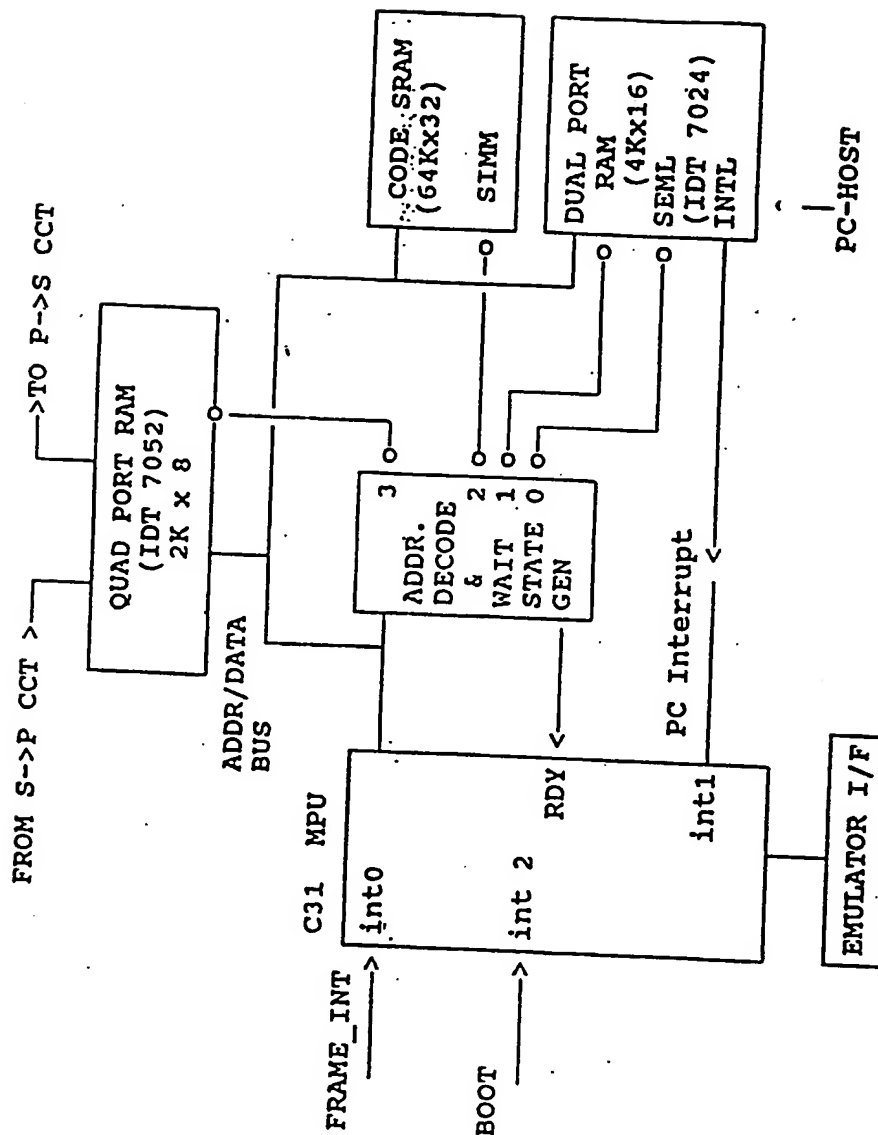


FIGURE 9

10/10

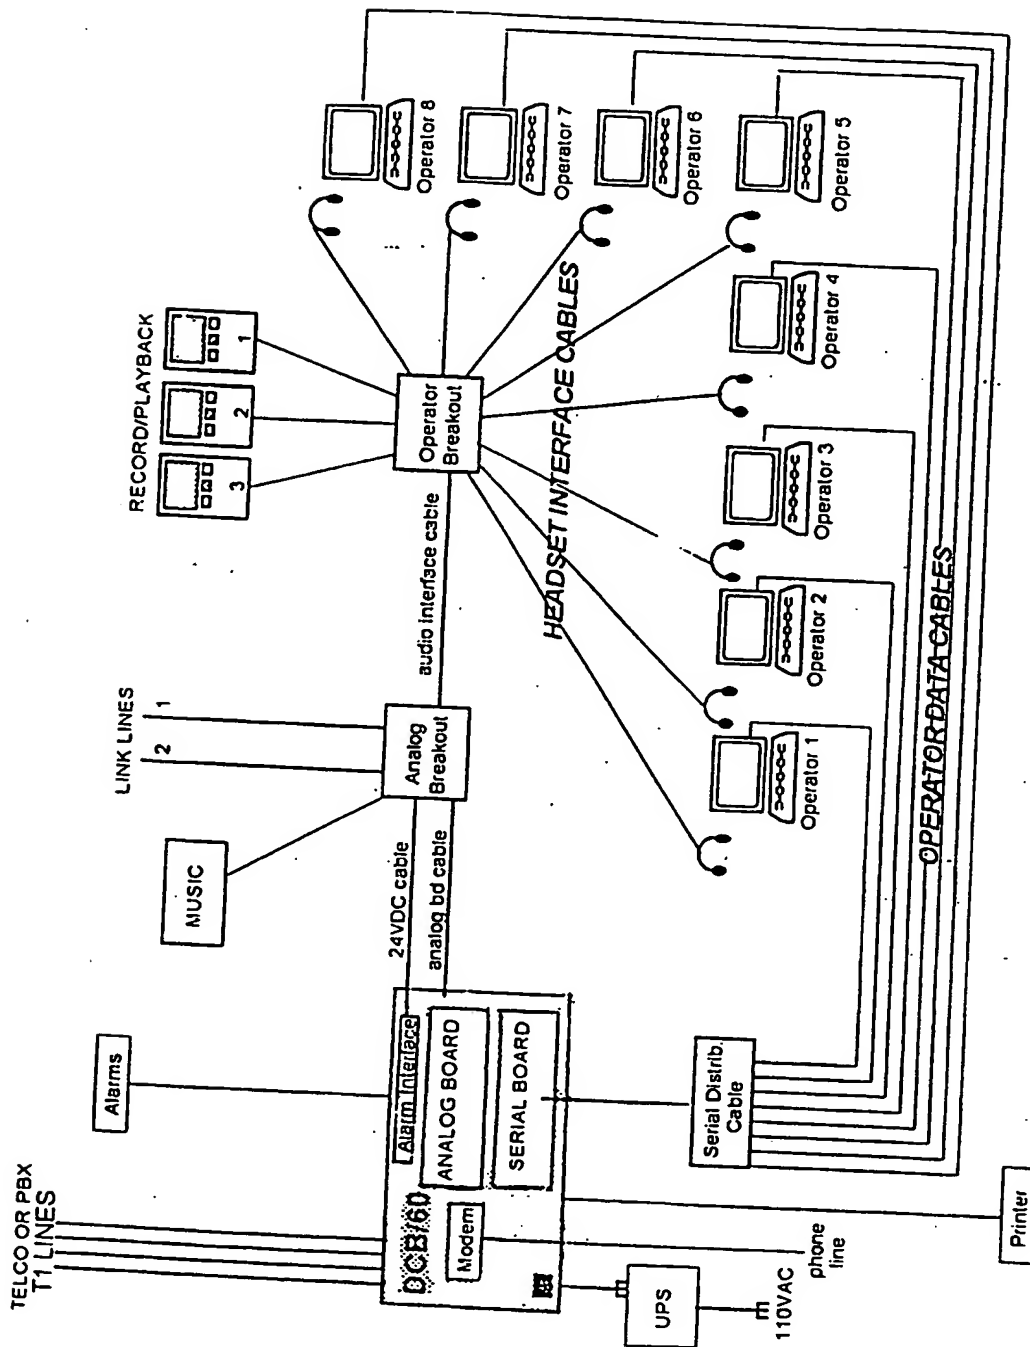


FIGURE 10